

Base Stand

Model No. AD3511, AD3517

Modelo No. AD3511, AD3517 / Modèle No. AD3511, AD3517

Assembly Instructions
Instrucciones de Ensamblado
Instructions de Montage

Instructions:


1. Take the panel and hold it lips down.
2. Place a leg against the panel and line up the holes, and put a 1/4-20 x 1/2 Pan Head Screw in the hole and twist on a 1/4-20 Flange Nut.
3. Repeat until all the legs are on, then tighten the nuts.

Instrucciones:


1. Sostenga el panel con los rebordes hacia abajo.
2. Ponga una pata contra el panel con los agujeros alineados, introduzca un tornillo de 1/4-20x1/2 de cabeza redonda en el agujero y atornille una tuerca con brida de 1/4-20.
3. Repita este procedimiento hasta colocar todas las patas y apriete las tuercas.

Instructions:


1. Saisir le panneau et tenir ses rebords vers le bas.
2. Placer un pied contre le panneau et aligner les trous, puis placer une vis à tête bombée de 1/4-20 x 1/2 dans le trou et y visser un écrou à embase de 1/4-20.
3. Répéter jusqu'à ce que tous les pieds soient en place puis serrer les écrous.

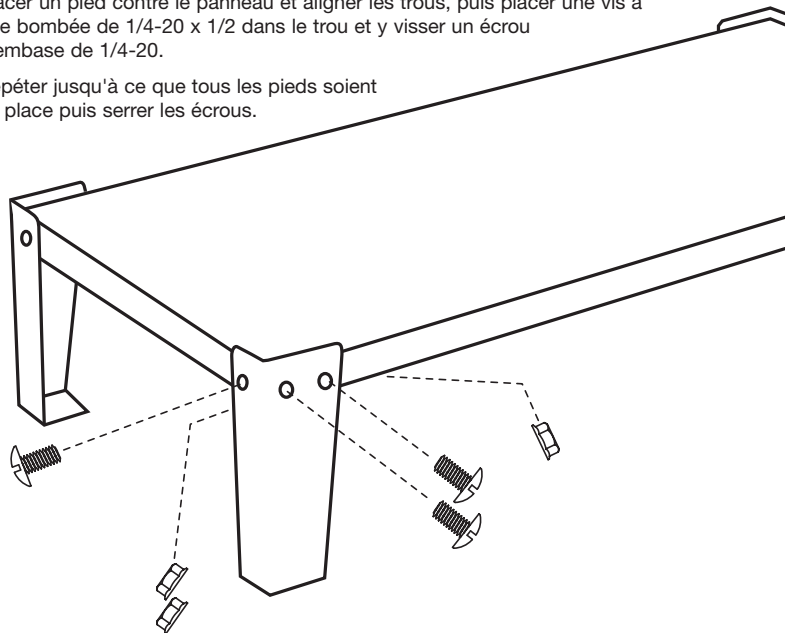

Tools / Herramientas / Outillage




Flat Head Screwdriver
Destornillador Plano
Tournevis Plat




7/16" Wrench
Llave Mecánica 7/16" / Clé Plate de 7/16 po


Parts / Piezas / Pièces




x12
1/4-20 Whiz Flange Nut
Tuerca con Brida
Écrou à Embase Whiz

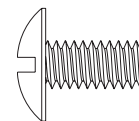


x12
1/4-20 x 1/2 Phillips
Head Pan Screw
Tornillo de Cabeza
Redonda en Cruz
Vis à Tête Bombée Phillips

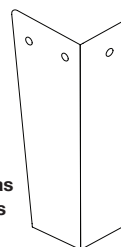

x2
Left Legs
Patas Izquierdas
Pieds Gauches

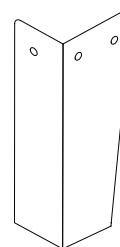

x2
Right Legs
Patas Derechas
Pieds Droits

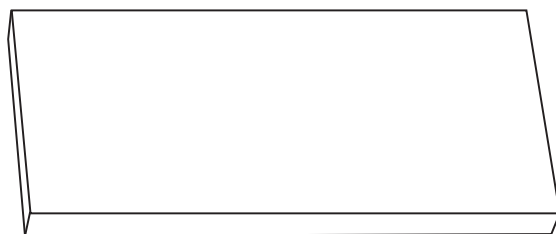

x1
Base
Base
Socle