




1 Locate and Drill holes for Z-Hangers.

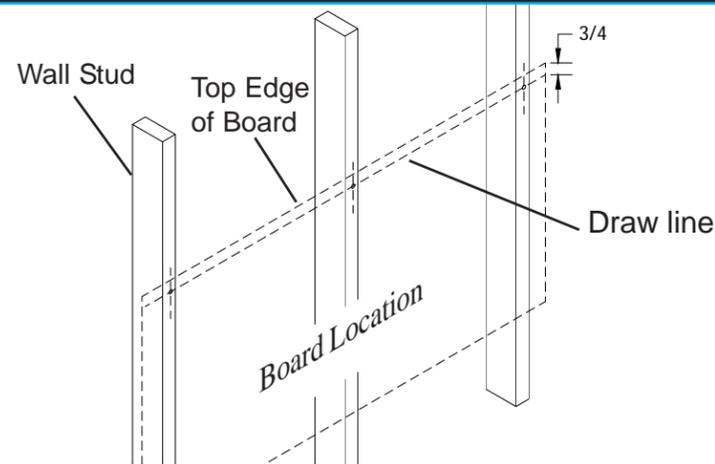


Determine board location. Measure from floor to the top edge of board. Mark with pencil line the corner location. Measure down from top edge of board 3/4", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/16" drill bit.

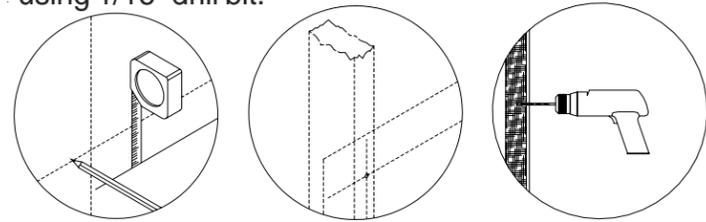


2 Attach Z-Hangers for mounting.

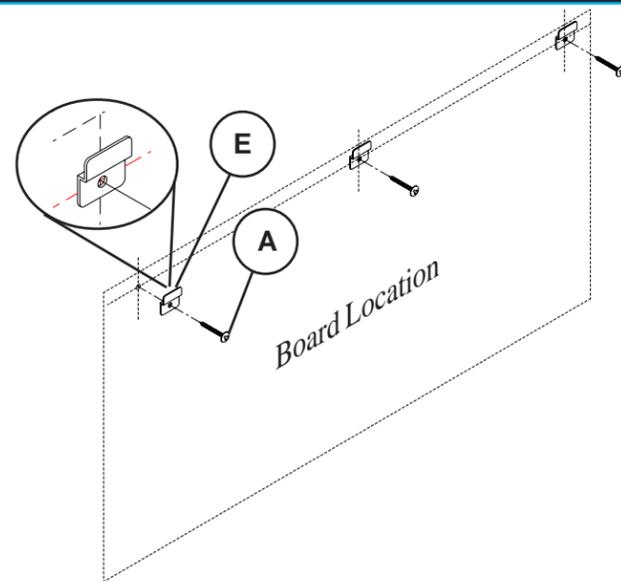


Attach 3 Z-Hangers (E) using 3 Long Screws (A) as shown.

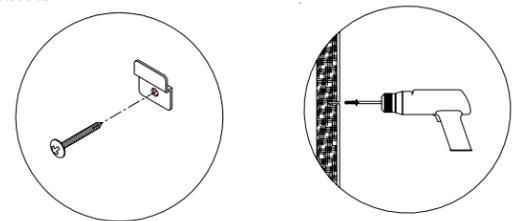


3 Hang board and mark bottom

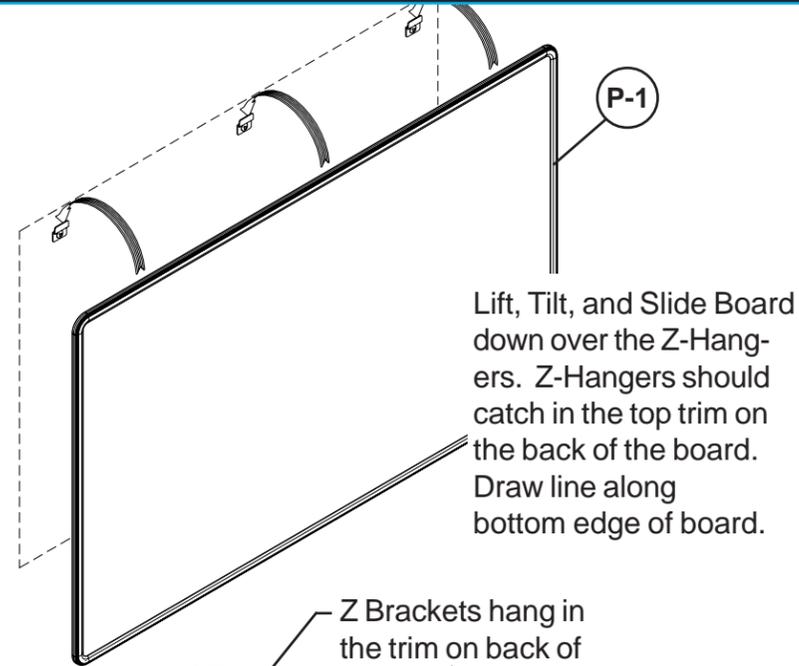


Lift, Tilt, and Slide Board down over the Z-Hangers. Z-Hangers should catch in the top trim on the back of the board. Draw line along bottom edge of board.

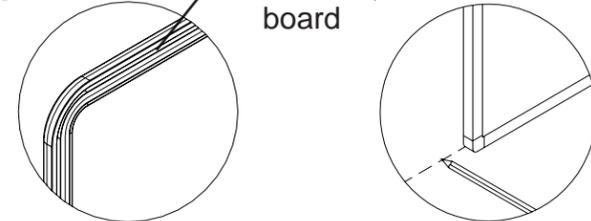


4 Remove board and drill

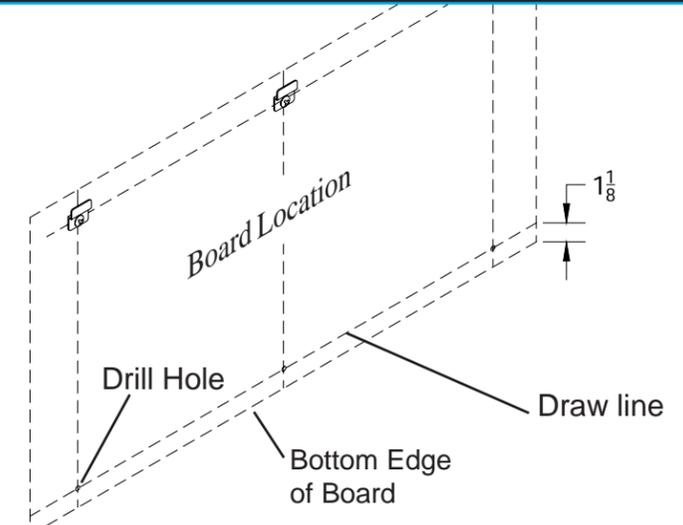


Lift and remove board from the Z-Hangers. Measure up from bottom line of board 1-1/8", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/16" drill bit.

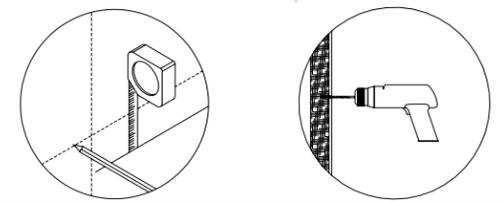


5 Attach Lower Brackets and Hang board

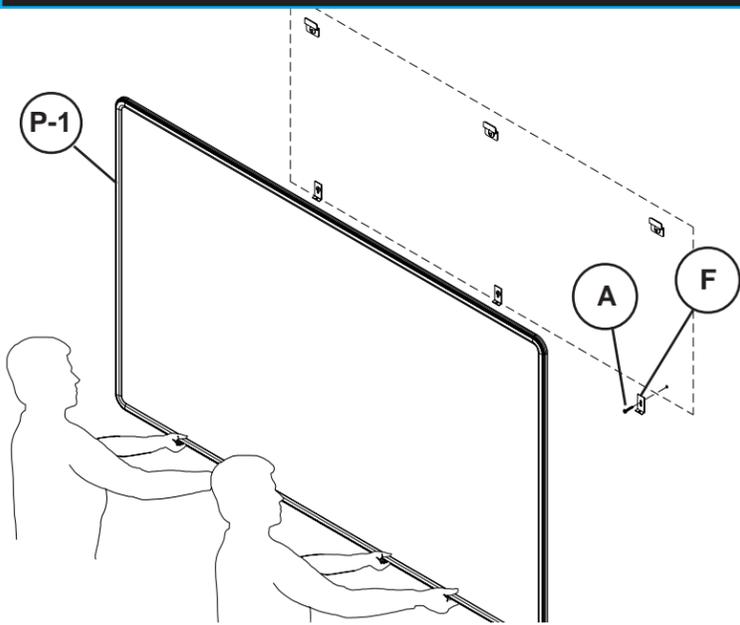


Secure 3 bottom brackets (F) to the wall using 3 long screws (A) as shown. Hang board on the Z-Hangers (E).

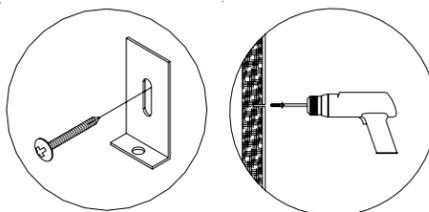

6 Secure Board & Attach Q-Tray

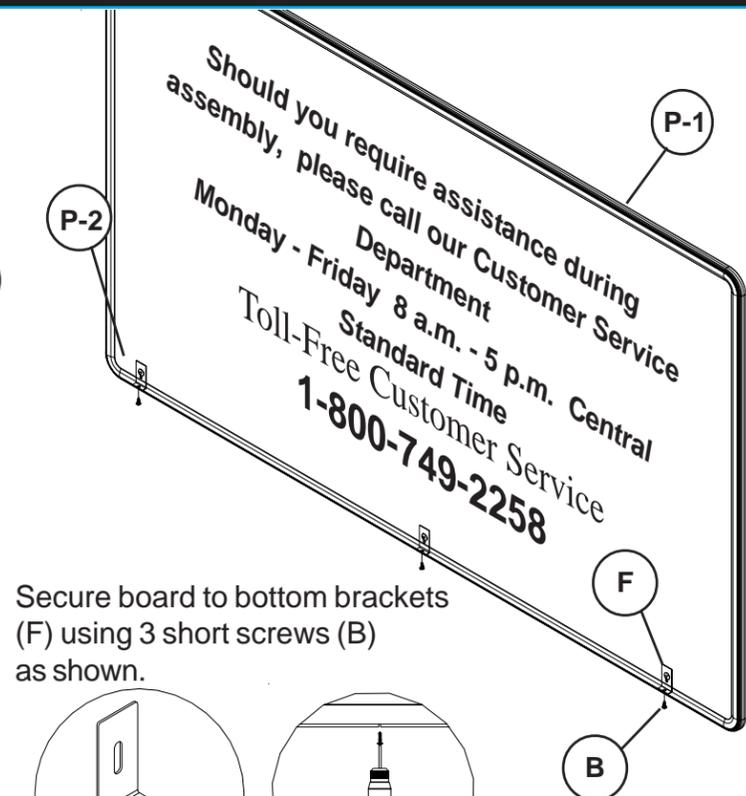

Secure board to bottom brackets (F) using 3 short screws (B) as shown.

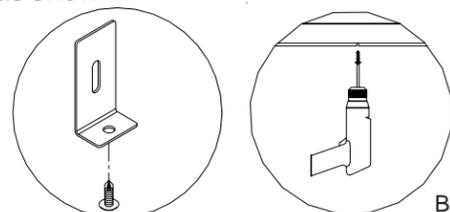

BRT-311PG/PH_03/25/10

Parts List		
P1	Board	1 EA

Hardware List		
A	Long Screw	6 EA
B	Short Screw	3 EA
C	Screw Anchor - Concrete (For Concrete walls)	6 EA
D	Screw Anchor - Drywall (For Drywall)	6 EA
E	Z Hanging Bracket	3 EA
F	Bottom Bracket	3 EA



BRT-311PG/311PH
4x6, 4x8 Vinyl Tackboard
W/Satin Presidential Trim

