
1) LOCATE AND REMOVE THE KNOCKOUTS THAT ARE CLOSEST TO THE ENDS OF THE LIGHT FIXTURE

2) FASTEN LIGHT FIXTURE TO LIGHT SUPPORT TUBE AS SHOWN WITH 1/4" X 2 1/4" MACHINE SCREW, FINISH WASHER, (2) FLAT WASHERS, (2) FENDER WASHERS AND A KEP NUT.

3) ATTACH THE LIGHT FRAME TO VERTICAL UPRIGHTS USING 3/8" X 1" ALLEN HEAD BOLTS AND STRUT NUTS.

4) ASSEMBLE THE 2" KNOBS THROUGH WELDED FRAME AND INTO THREADED INSERTS IN TUBE ENDS. (USE WASHERS AS SHOWN).

NOTE: IT IS SUGESTED THAT 2 PEOPLE PERFORM THE OPERATION OF MOUNTING LIGHT TUBE TO FRAME.

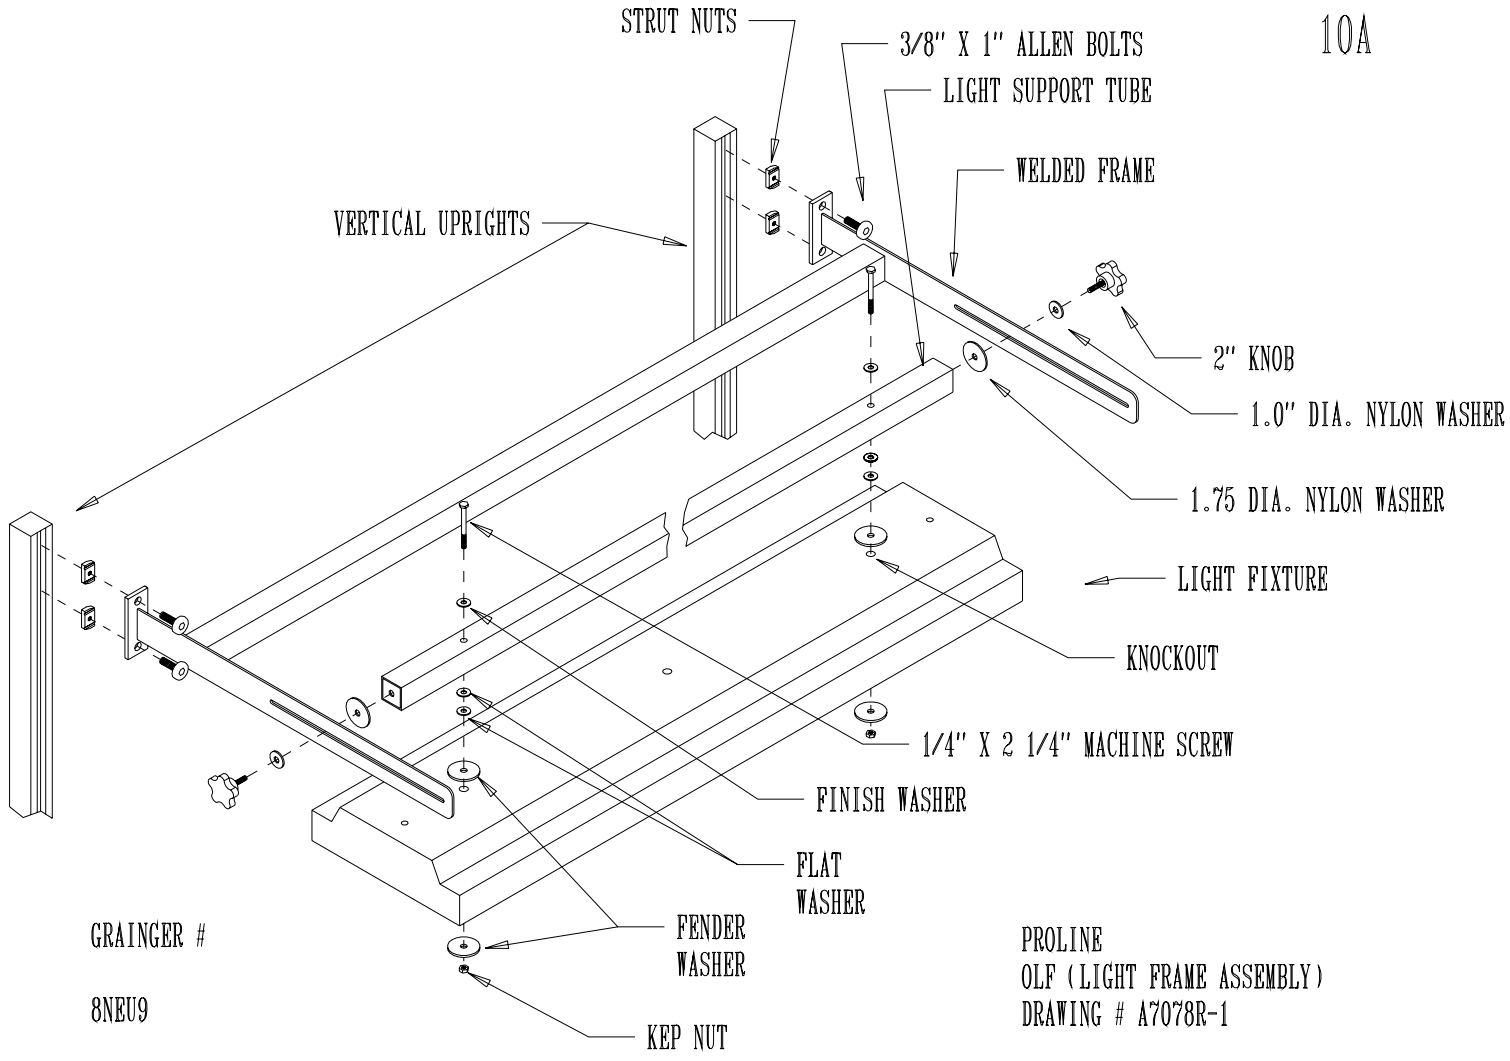

BULB REQUIREMENTS

48" FIXTURES F32 T8

36" FIXTURES F30 T8
F25 T8

GRAINGER #

8NEU9

PROLINE
OLF (LIGHT FRAME ASSEMBLY)
DRAWING # A7078R-1