




MANHATTAN COMFORT

TV1550-1

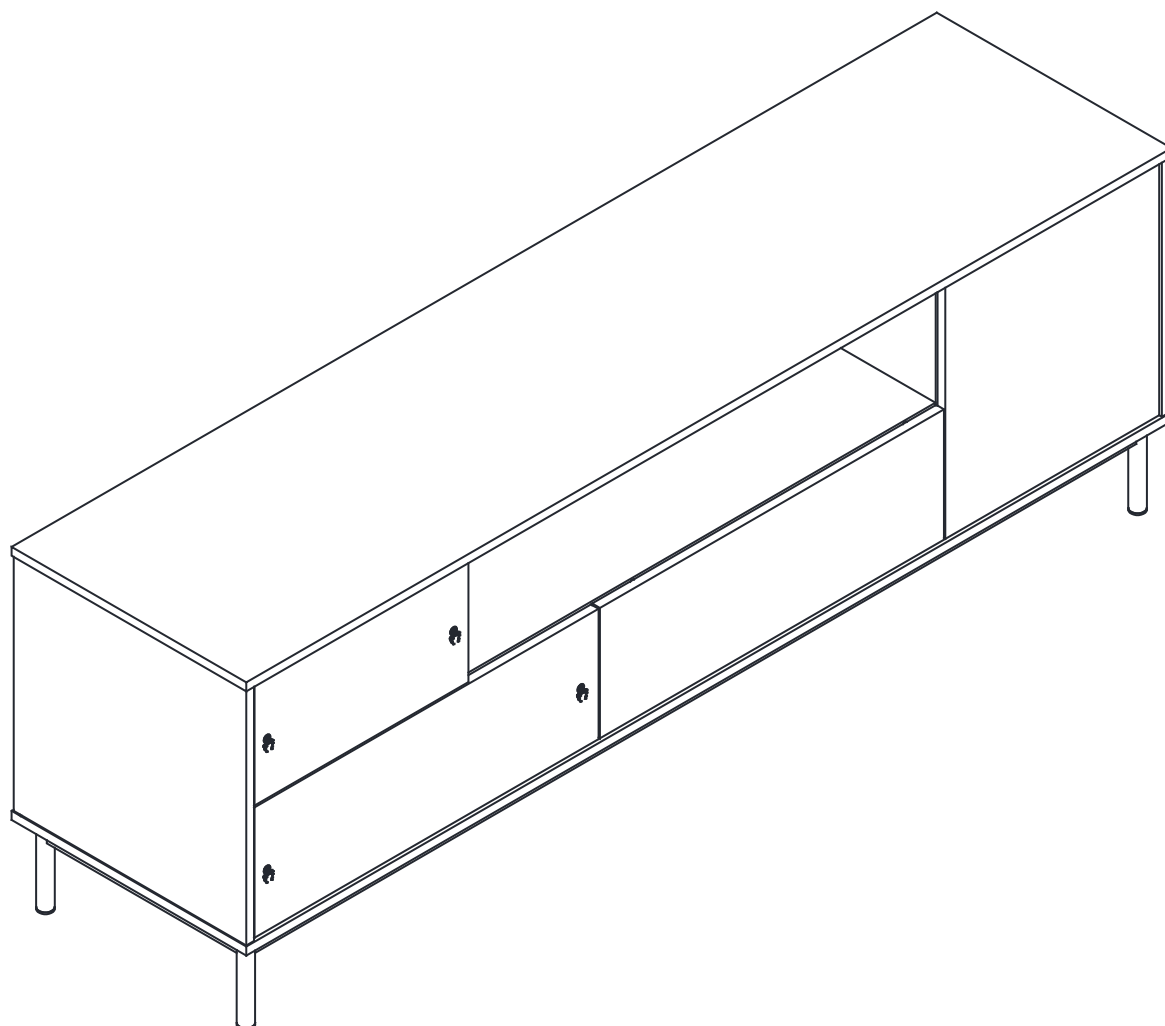




STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

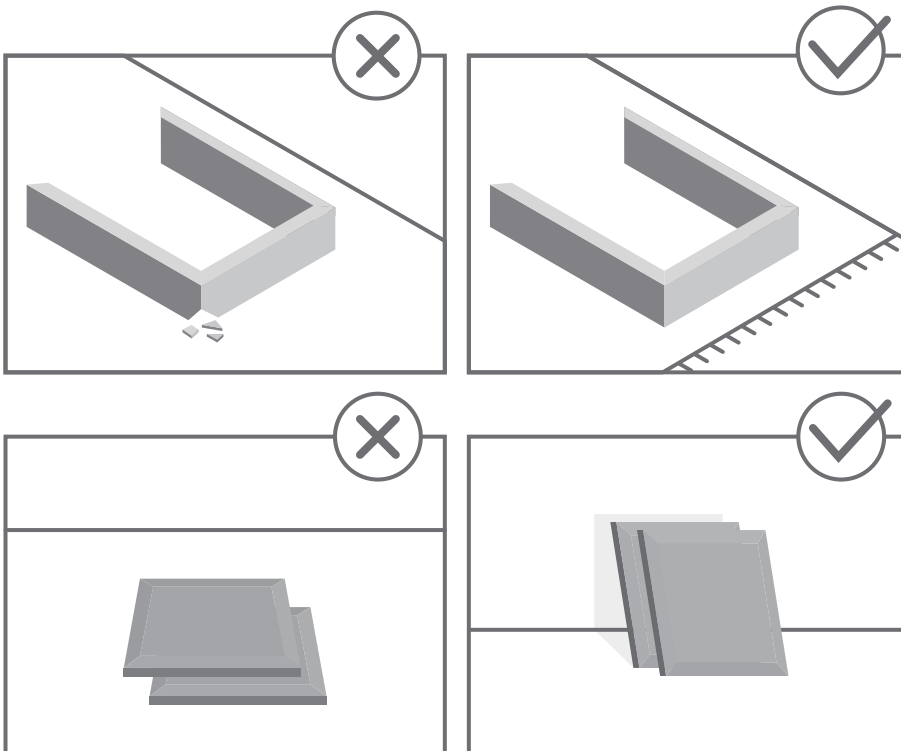

TOOLS REQUIRED

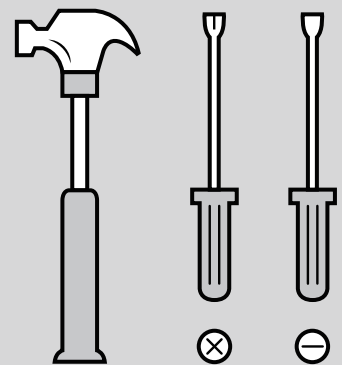

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Support Site



Included in this package:


BOX02/02

- D. Right Side Panel (1)
- E. Center Vertical Panel (1)
- J. Right Shelf (1)
- L. Center Door (1)
- M. Right Door (1)
- O. Upper Drawer Front (1)
- P. Lower Drawer Front (1)
- U. Lower Drawer Back Panel (1)
- W. Lower Drawer Bottom Panel (1)
- Y. Left Center Cross Bar (1)
- BB. Center Support Leg (1)

ALL HARDWARE ARE IN BOX 02/02


BOX 01/02

- A. Top Panel (1)
- B. Bottom Panel (1)
- C. Left Side Panel (1)
- F. Upper Left Horizontal Divider (1)
- G. Lower Center Horizontal Divider (1)
- H. Middle Shelf (1)
- K. Back Panel (1)
- Q. Drawer Left Side Panel (2)
- R. Drawer Right Side Panel (2)
- S. Upper Drawer Back Panel (1)
- T. Upper Drawer Bottom Panel (1)
- X. Front Upper Cross Bar (1)
- Z. Lower Cross Bars (2)
- AA. Left & Right Side Frames (2)

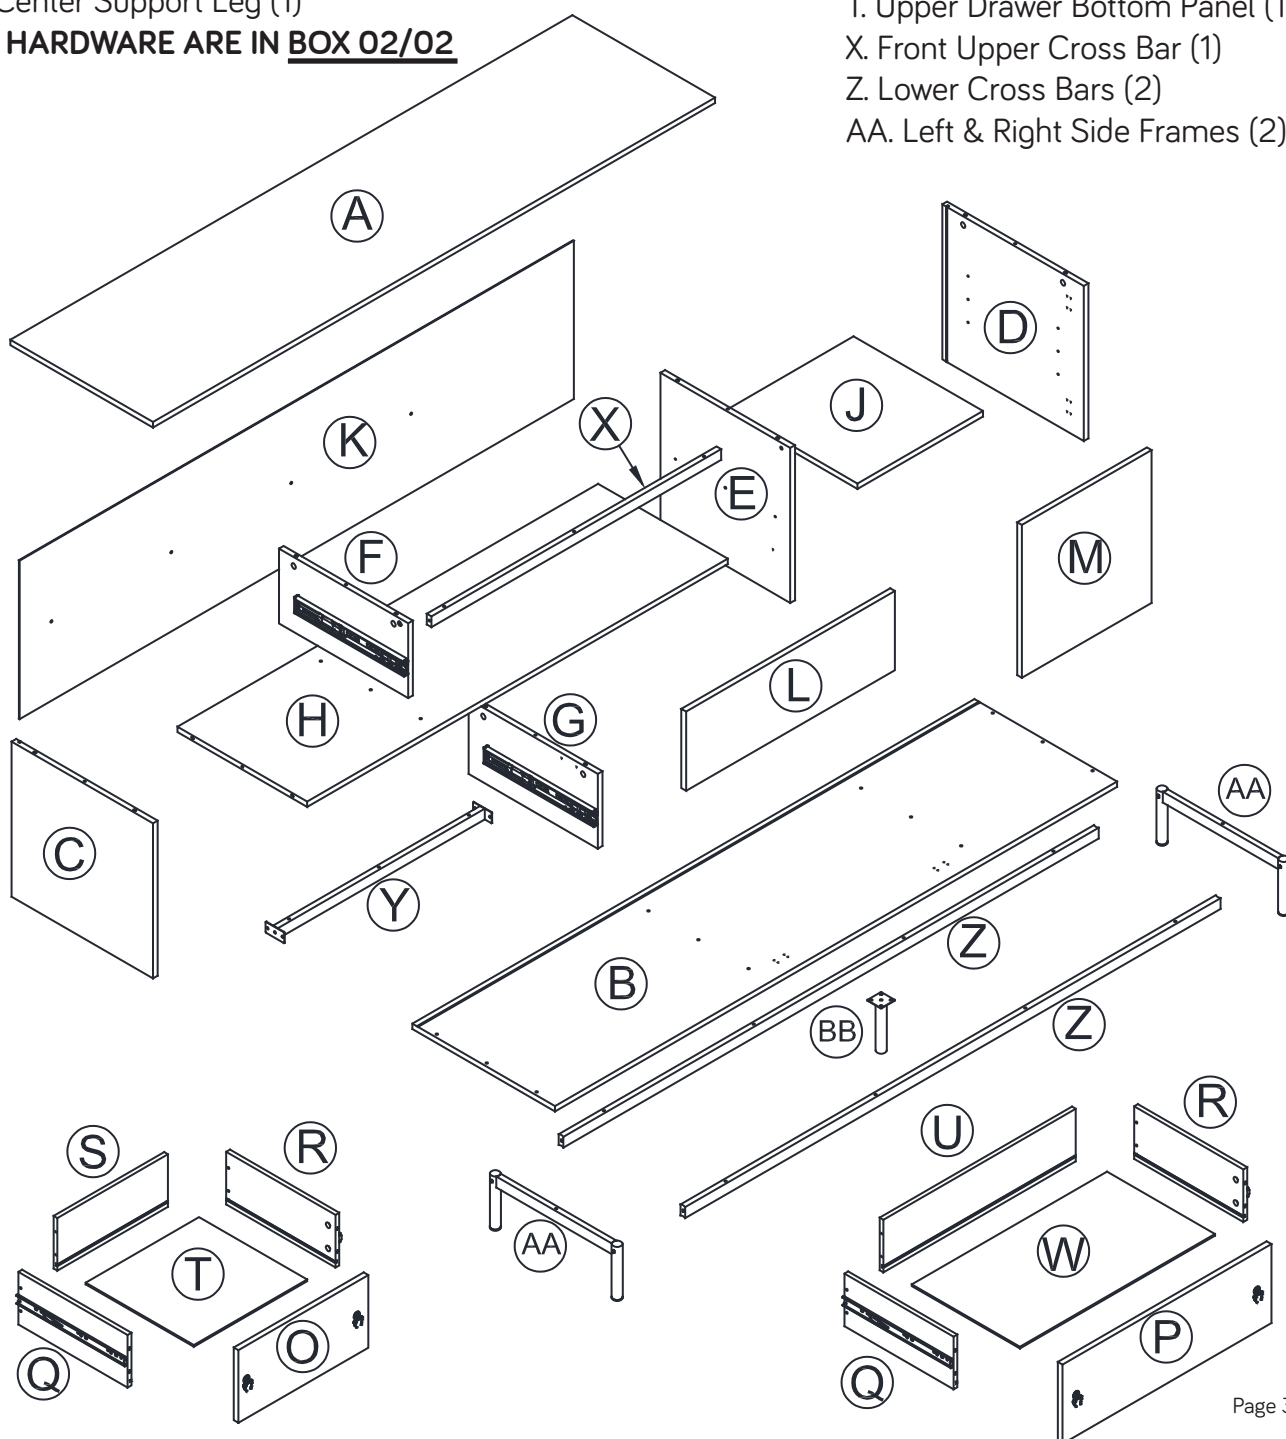


Hardware Identification

① CAM SCREW - 22pcs

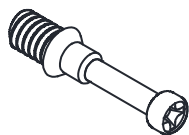


② HIDDEN CAM - 22pcs

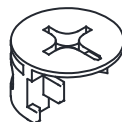

③ APPLIQUE CARD - 4pcs




④ WOOD DOWEL - 12pcs

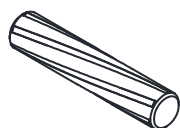


⑤ L-WRENCH - 1pc




⑥ BUMPER CARD - 1pc

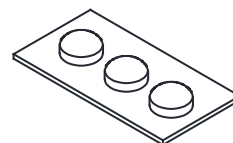


⑦ HINGE - 4pcs

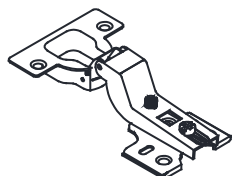

⑧ METAL PIN - 4pcs



⑨ BACK PANEL BRACKET - 14pcs



⑩ ADJUSTABLE FEET - 1pc




⑪ DOOR RESTRAINT - 1pc



⑫ HEX HEAD SCREW
M6*45mm - 4pcs



⑬ HEX HEAD SCREW
M6*35mm - 2pcs




⑭ PAN HEAD SCREW
M5*40MM - 16pcs




⑮ PAN HEAD SCREW
M5*35MM - 18pcs



⑯ PAN HEAD SCREW
M4*12MM - 10pcs



⑰ PAN HEAD SCREW
M4*12MM - 4pcs




⑱ FLAT HEAD SCREW
M4*12mm - 24pcs





⑲ FLAT HEAD SCREW
M3*16mm - 14PCS



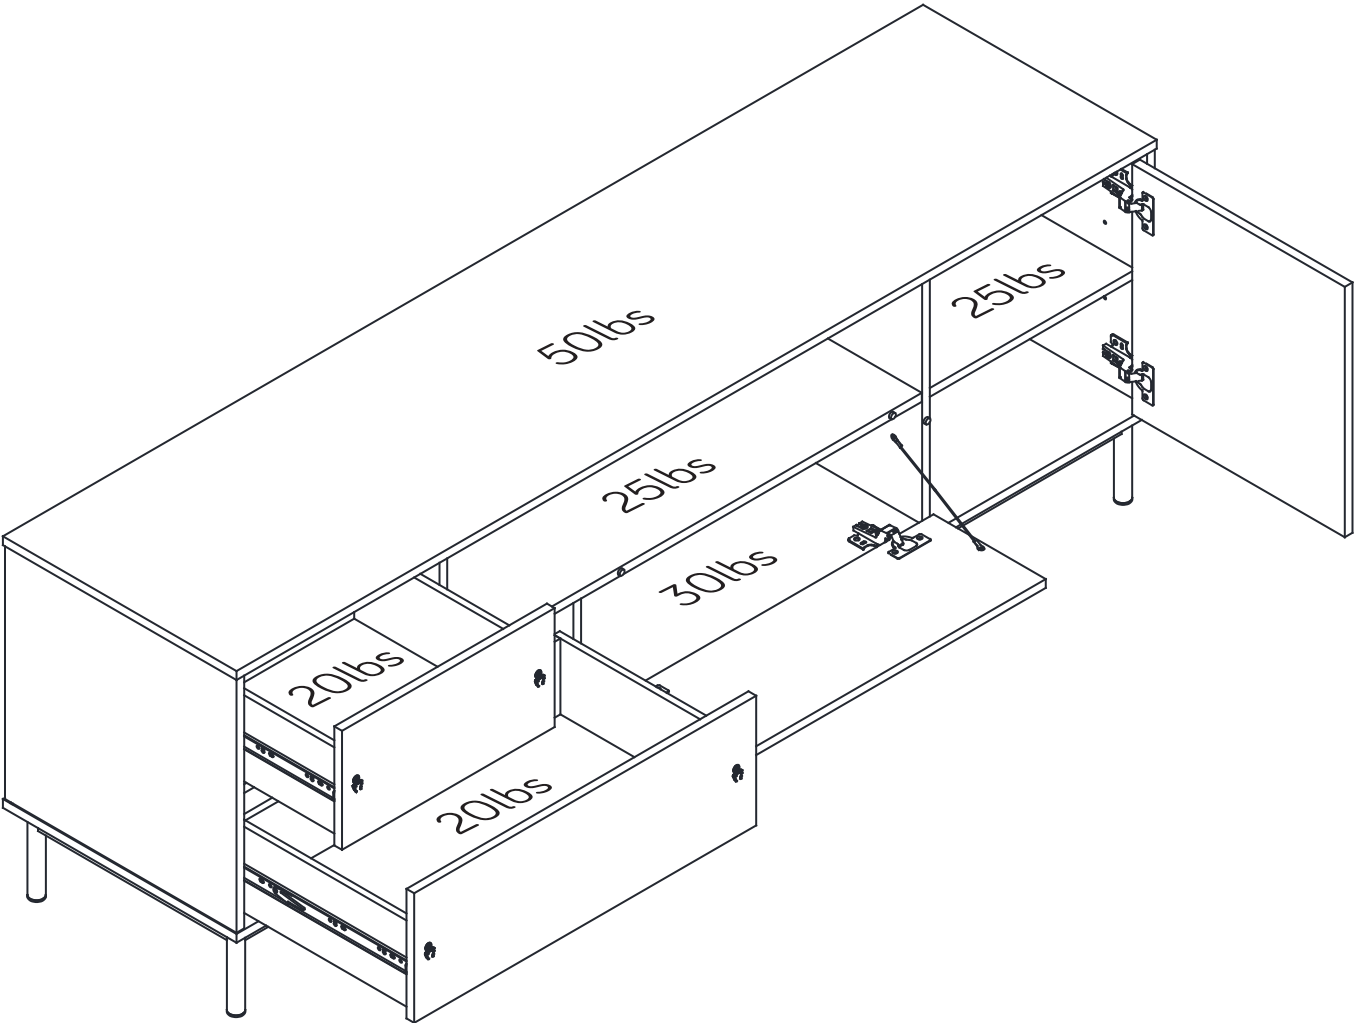


Step 1

- ◆ Screw 22 Cam Screw (1) into the Top Panel (A), Middle Shelf (H), Left Side Panel (C), Center Vertical Panel (E), and Upper/Lower Drawer Fronts (O & P).

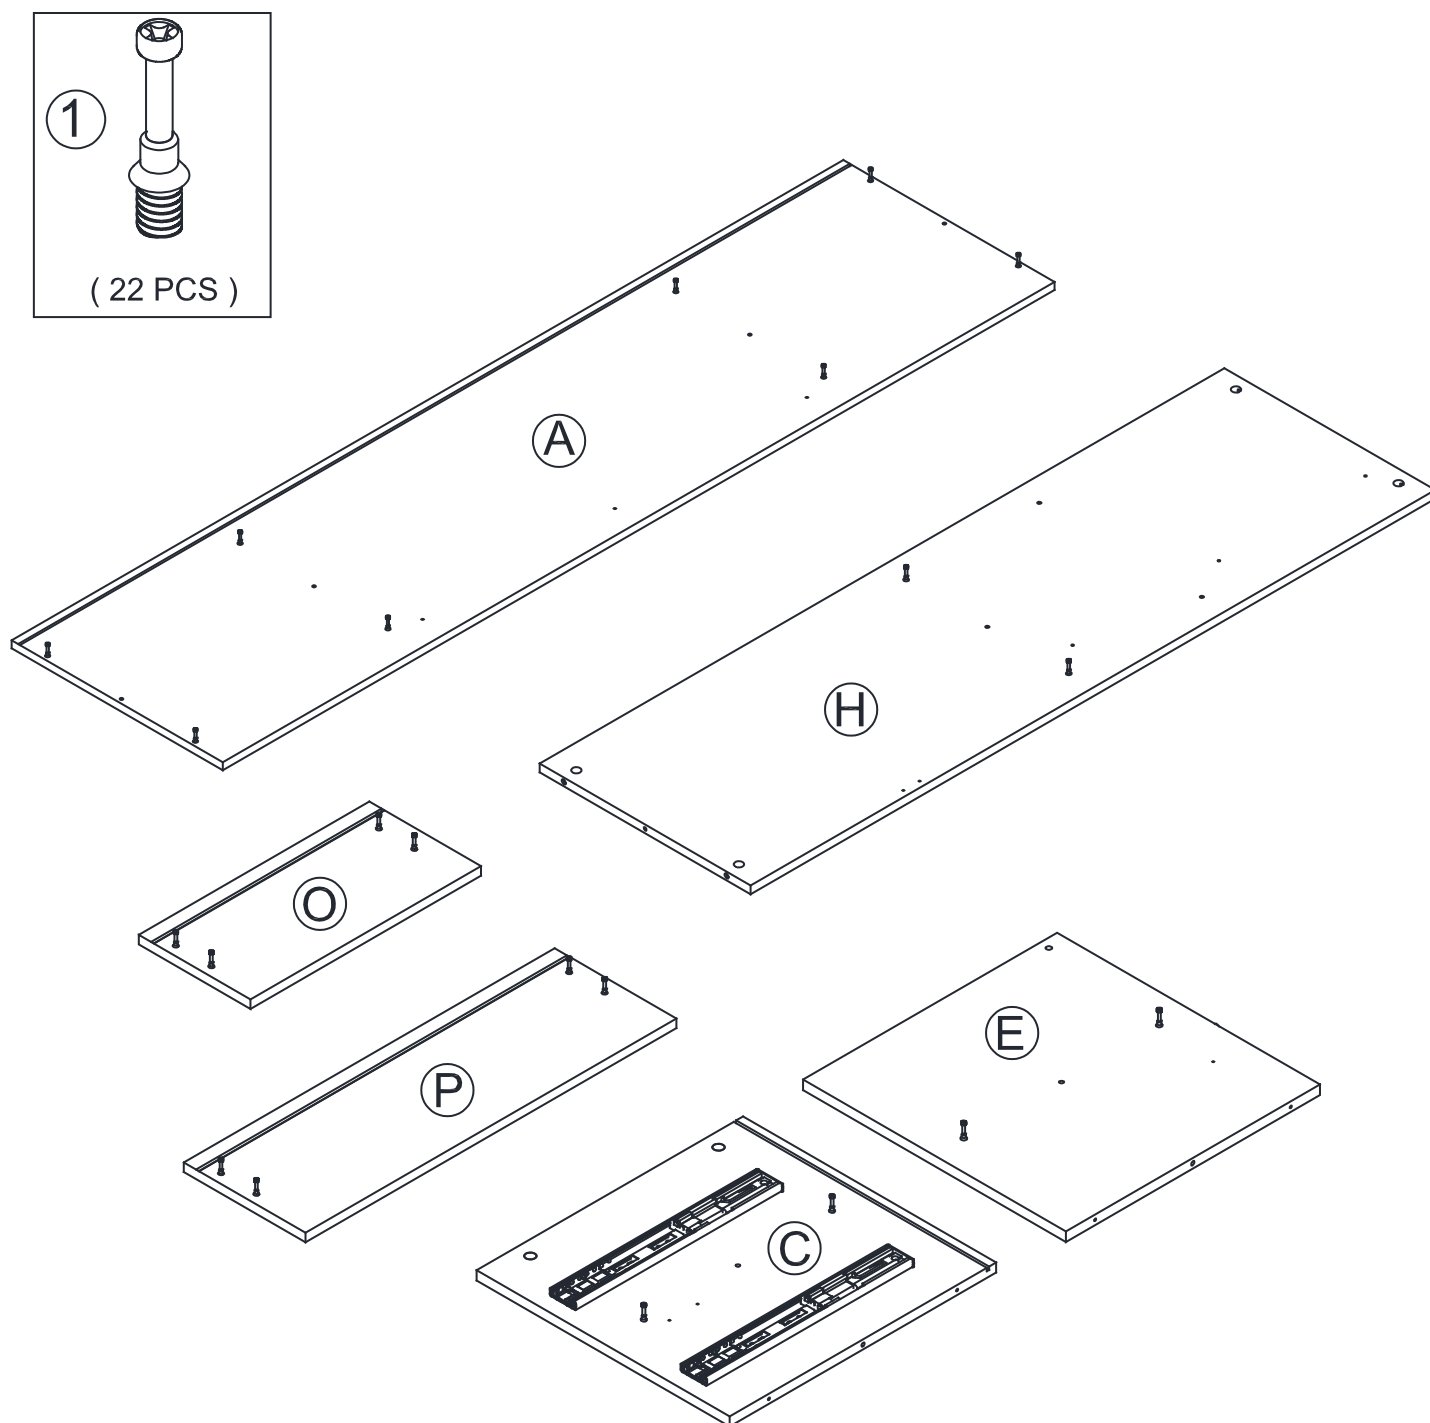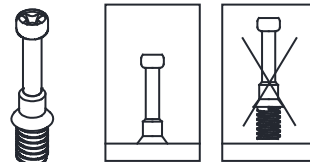




Step 2

- ◆ Screw 22 Hidden Cam (2) into the Left/Right Side Panels (C & D), Center Vertical Panel (E), Upper/Lower Horizontal Dividers (F & G), Middle Shelf (H), and Drawer Left/Right Side Panels (Q & R).

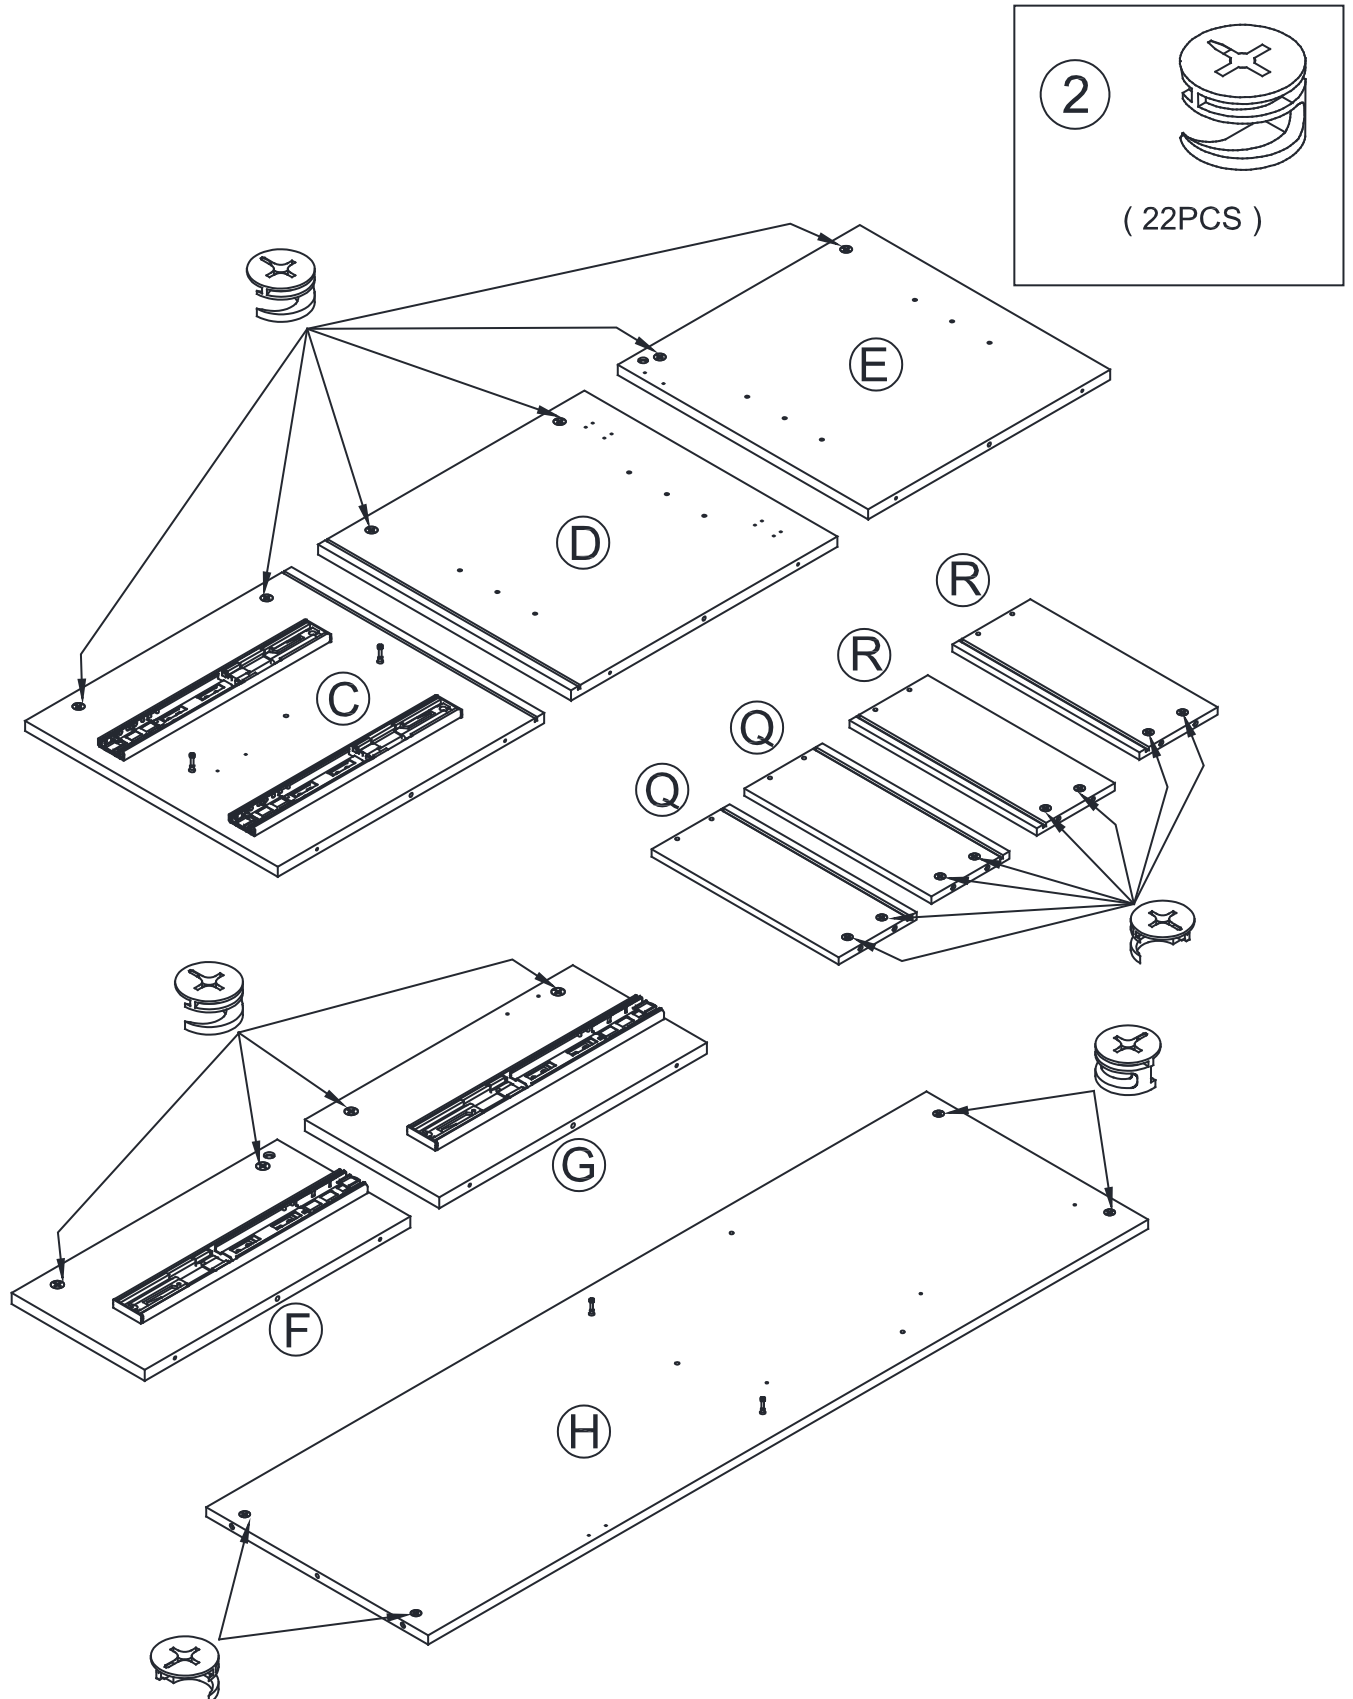






Step 3

- ◆ Secure the Upper Left Horizontal Divider (F) to the Middle Shelf (H) using Wood Dowel (4) and Pan Head Screw (15).

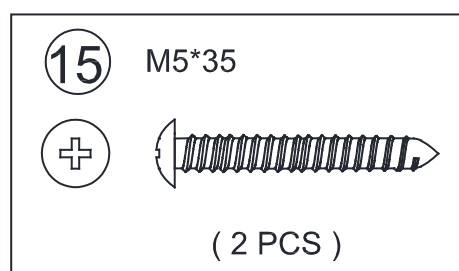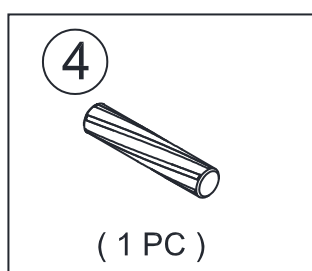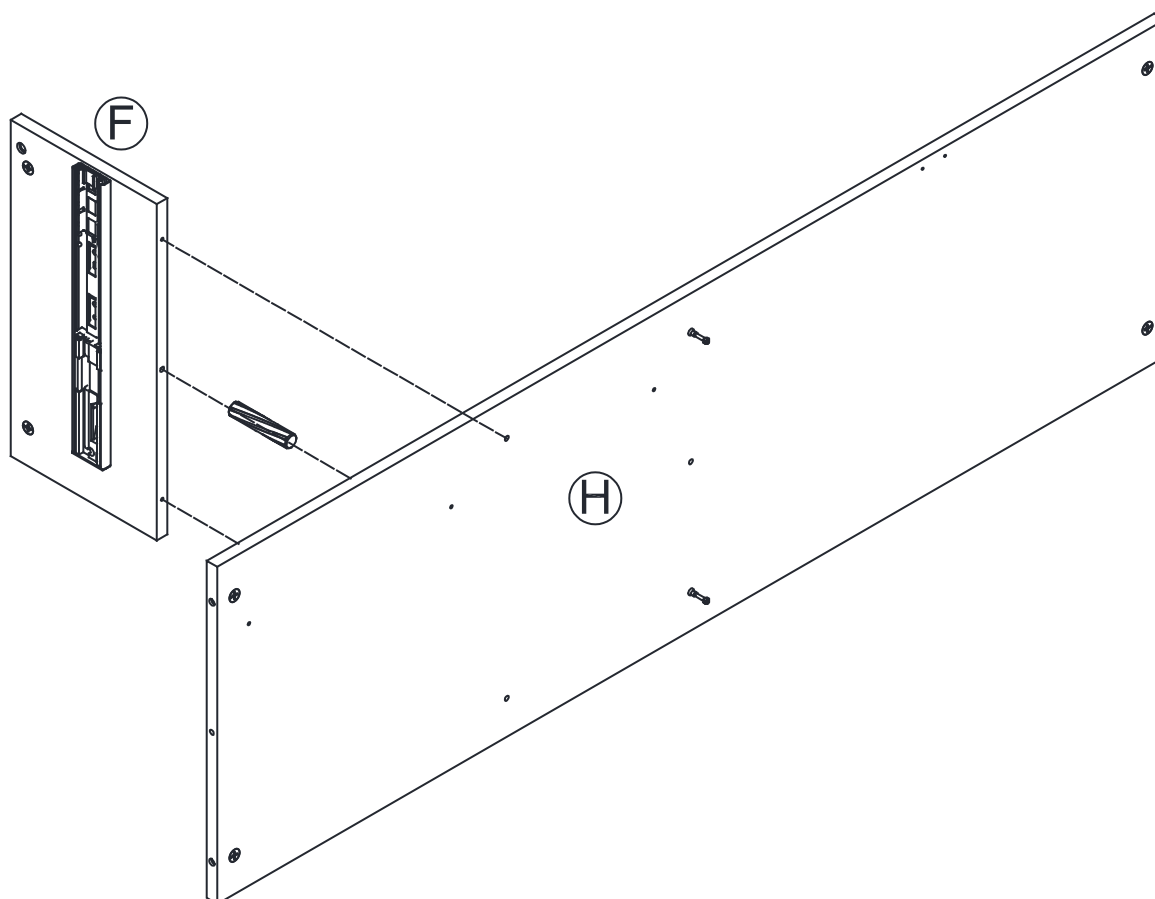





Step 4

- ◆ Secure the Lower Center Horizontal Divider (G) to the Middle Shelf (H) using Wood Dowel (4) and cam locks.

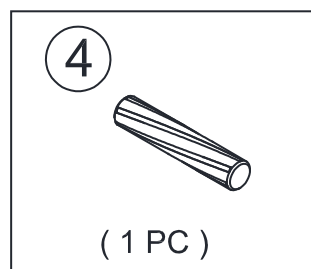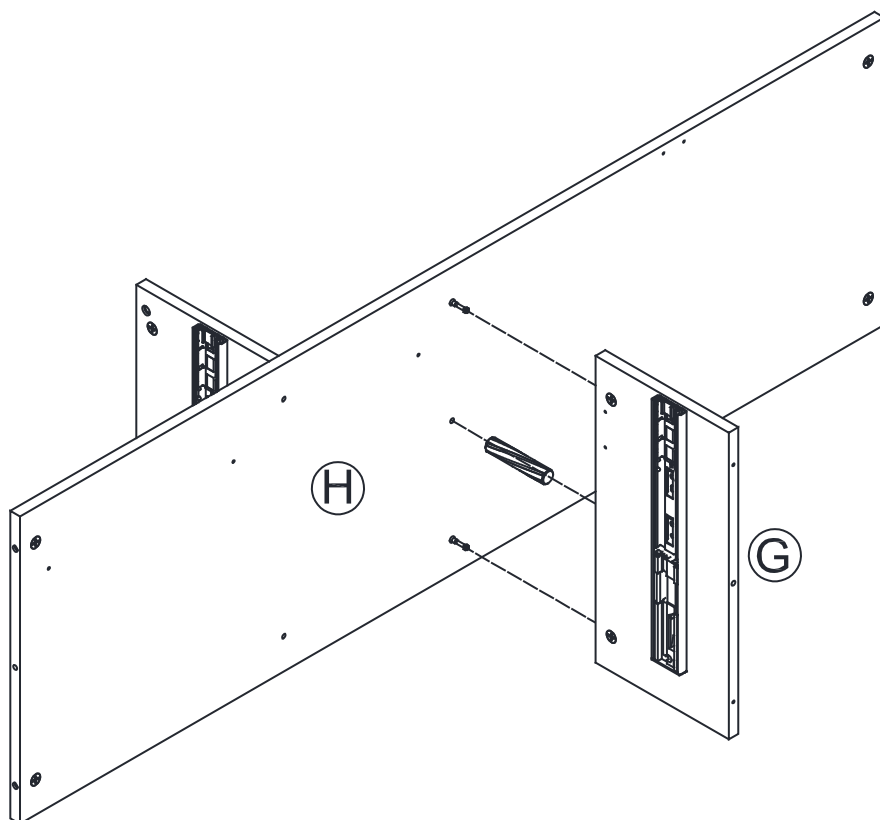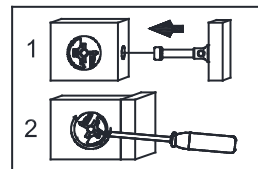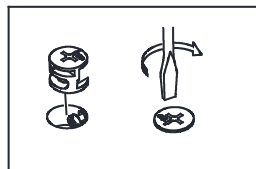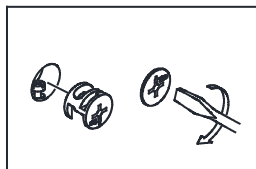

Step 5




- ◆ Attach the Left Side Panel (C) and Center Vertical Panel (E) to the Middle Shelf (H) using Wood Dowel (4) and cam locks.

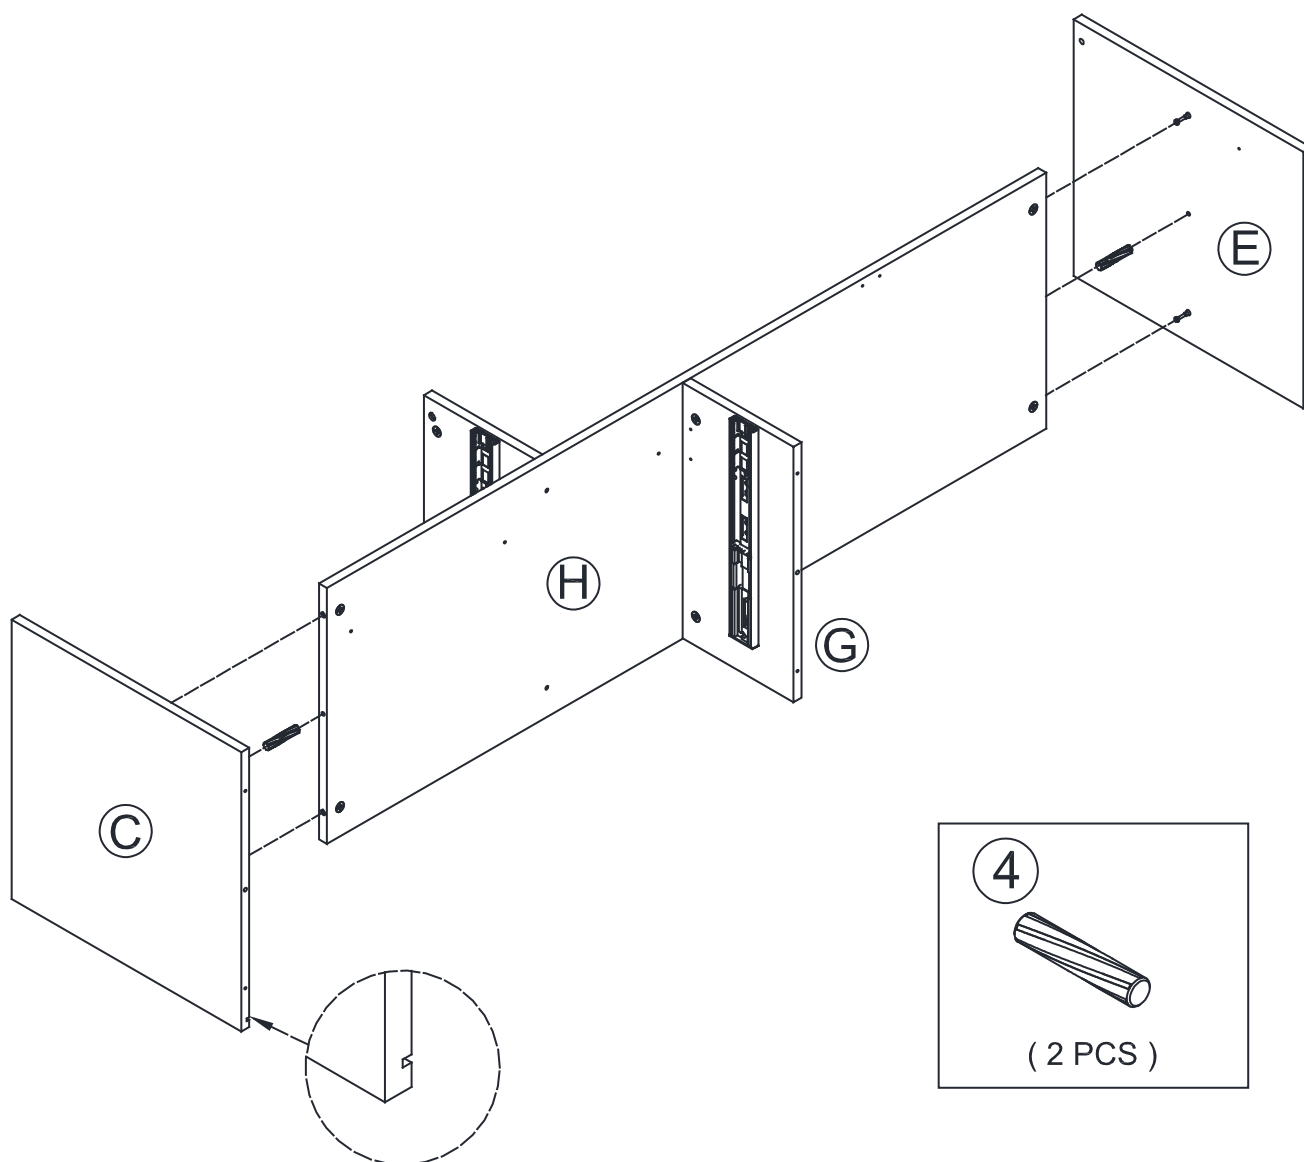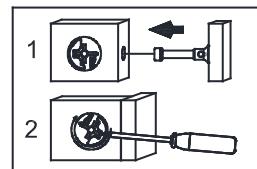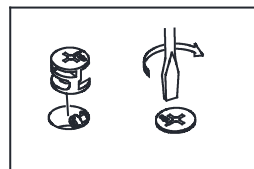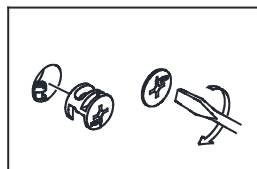

Note: Pay attention to the groove direction on the Left Side Panel.



Step 6

- ◆ Fix the Left Center Cross Bar (Y) to the Middle Shelf (H) using Pan Head Screw (14).
- ◆ Secure the Left Center Cross Bar (Y) to the Left Side Panel (C) and Lower Center Horizontal Divider (G) using Pan Head Screw (16).

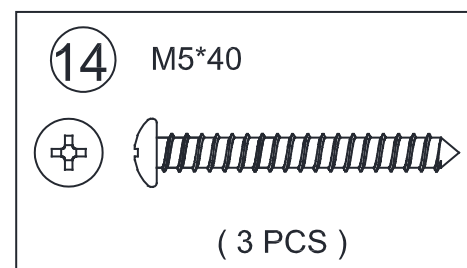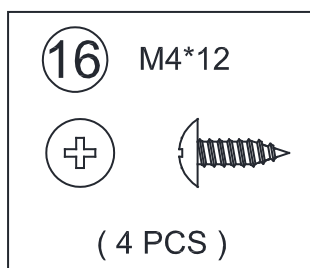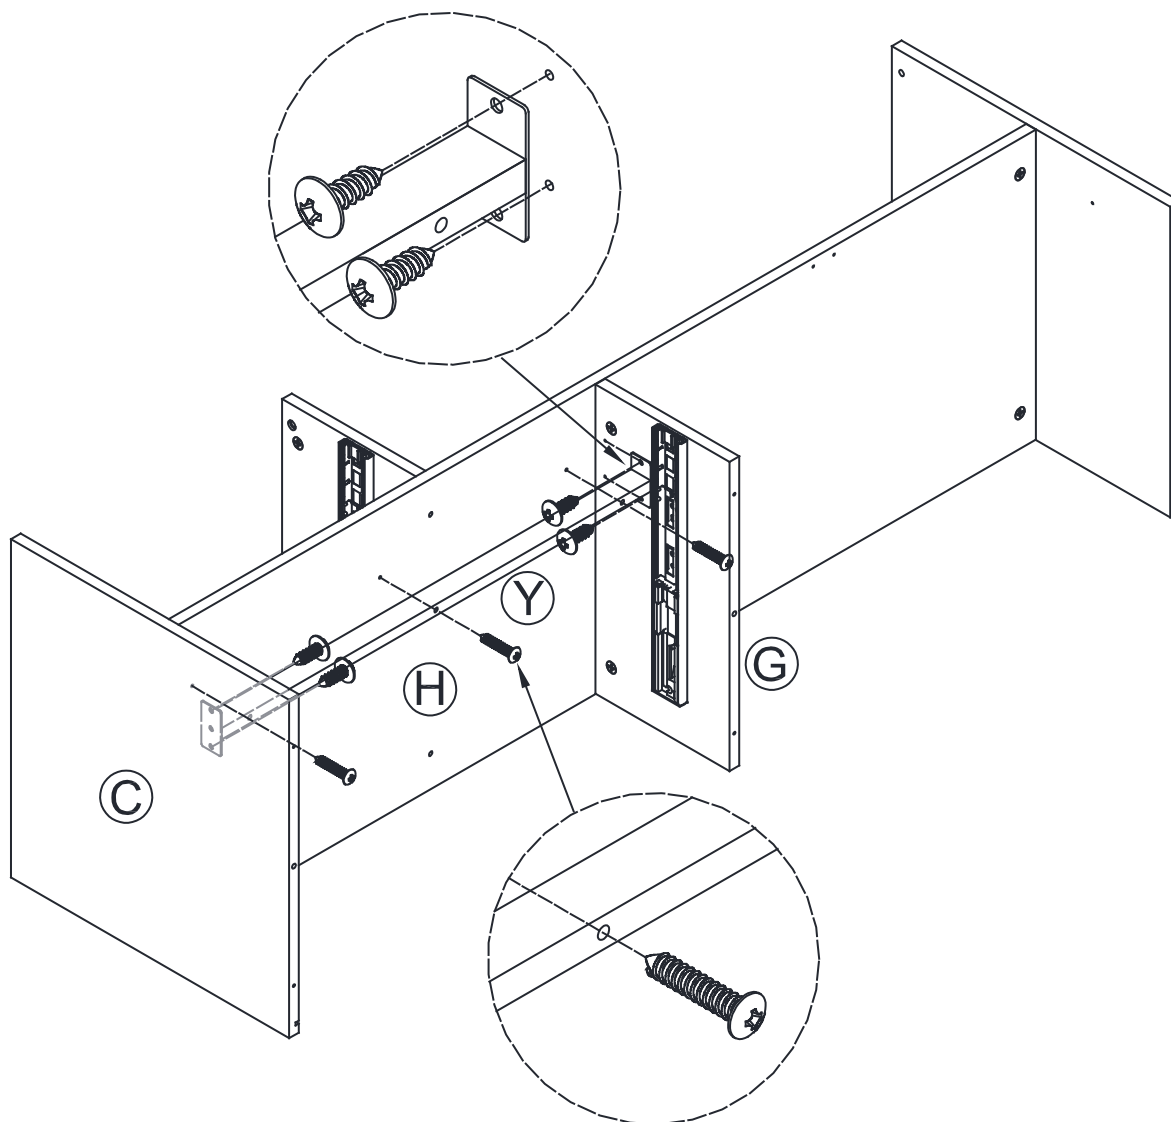





Step 7

- ◆ Attach the Front Upper Cross Bar (X) to the Top Panel (A) using Pan Head Screw (14).

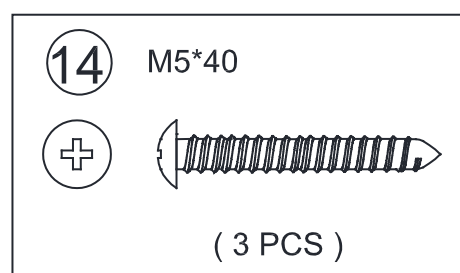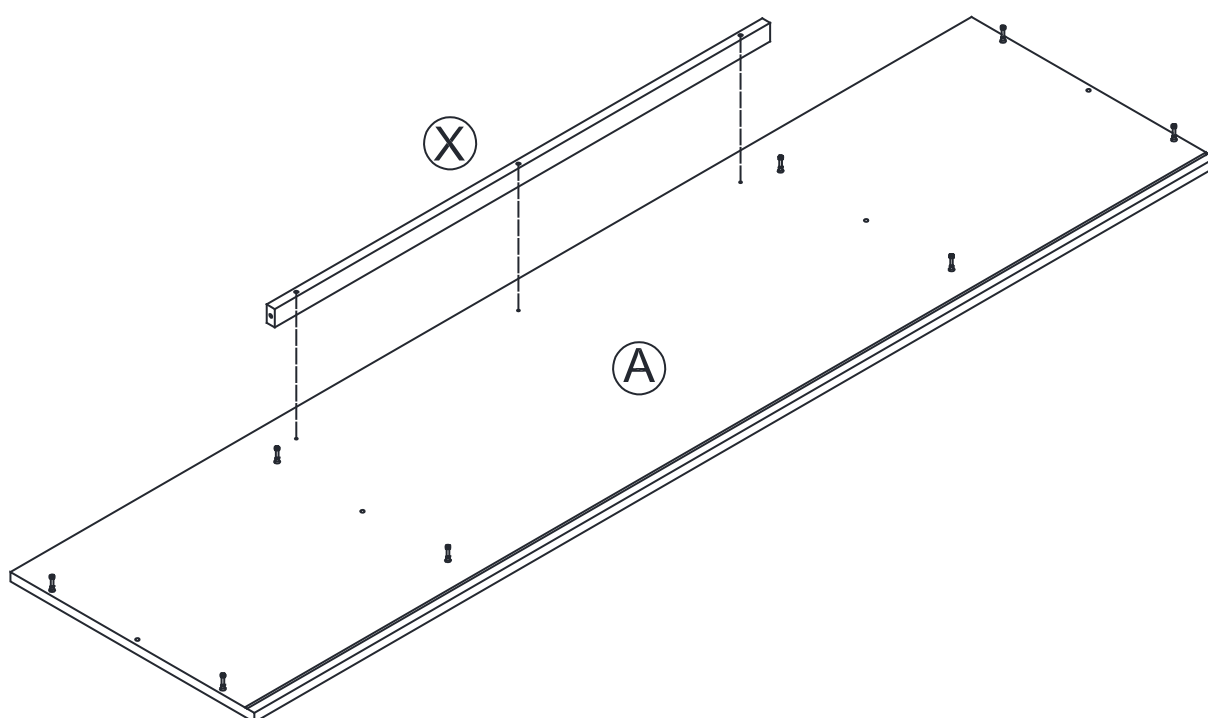

Step 8




- ◆ Attach the Top Panel (A) to the Left Side Panel (C), Center Vertical Panel (E), and Upper Left Horizontal Divider (F) using Wood Dowel (4) and cam locks.

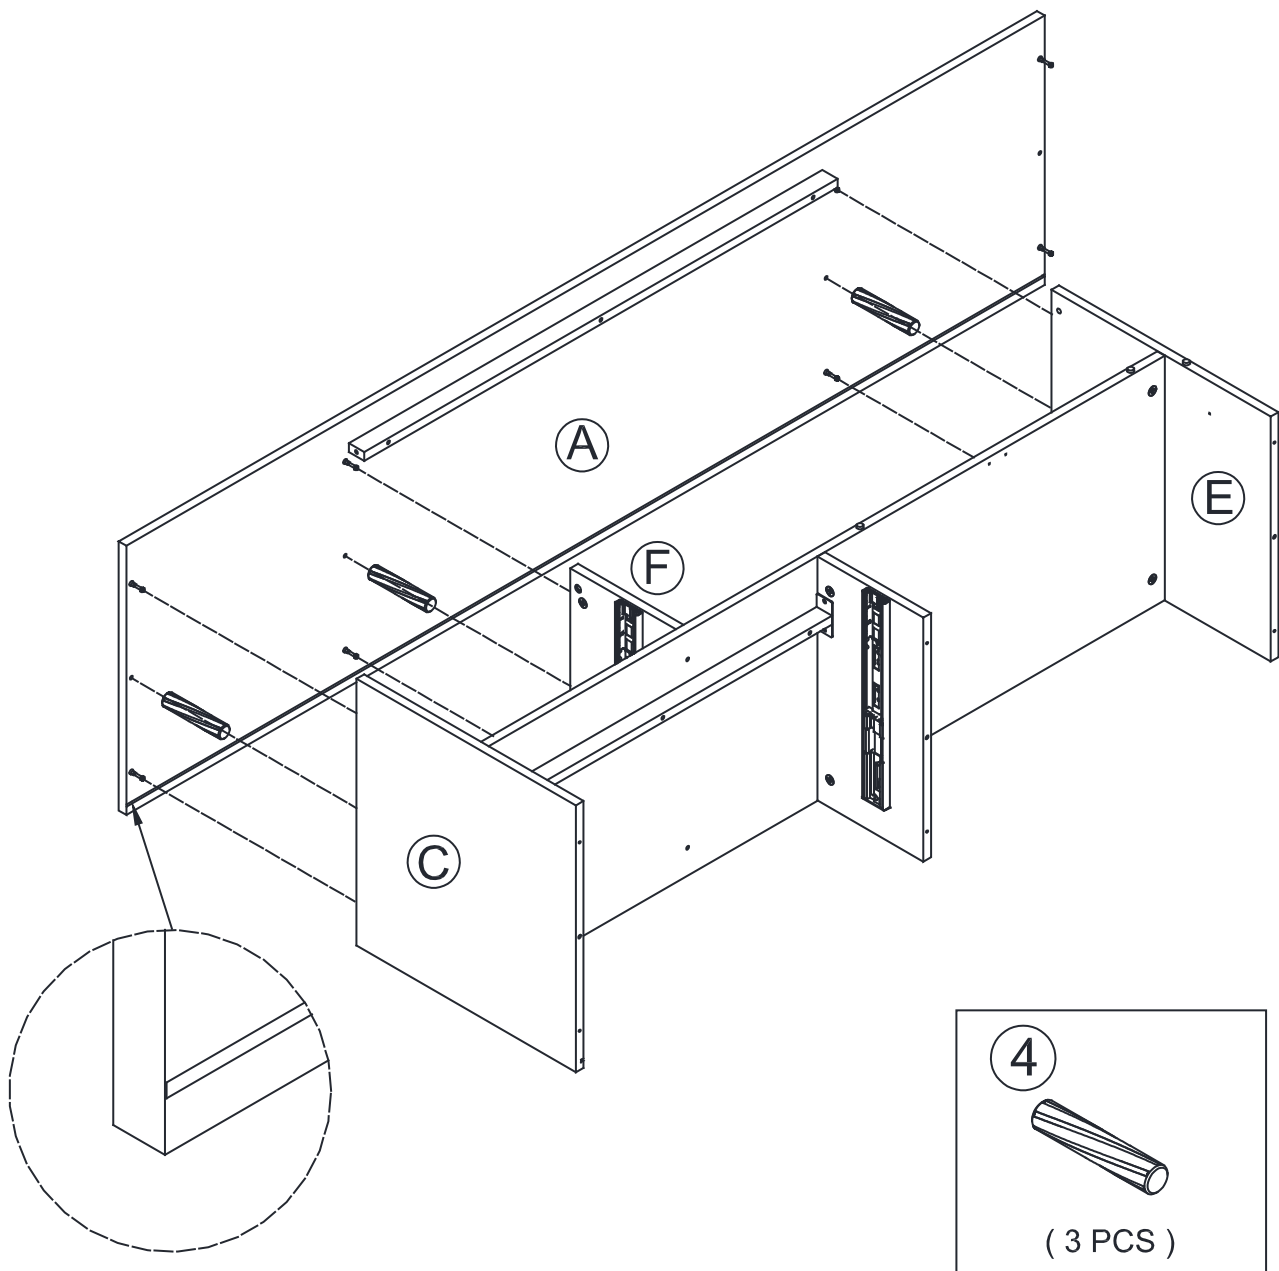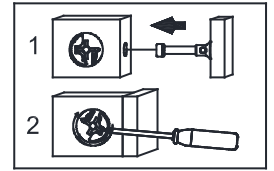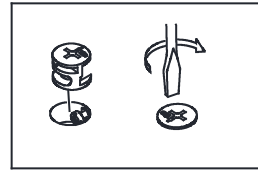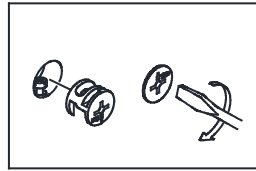

Note: Pay attention to the groove direction on the Top Panel.




Step 9

- ◆ Secure the Front Upper Cross Bar (X) to the Upper Left Horizontal Divider (F) and Center Vertical Panel (E) using Hex Head Screw (13).

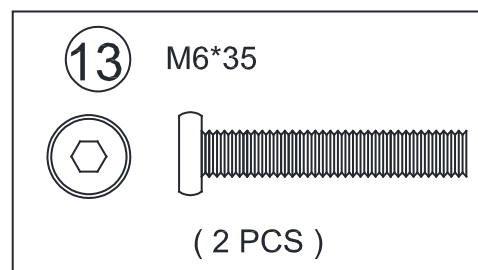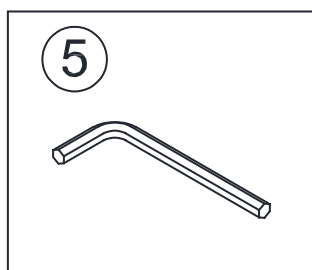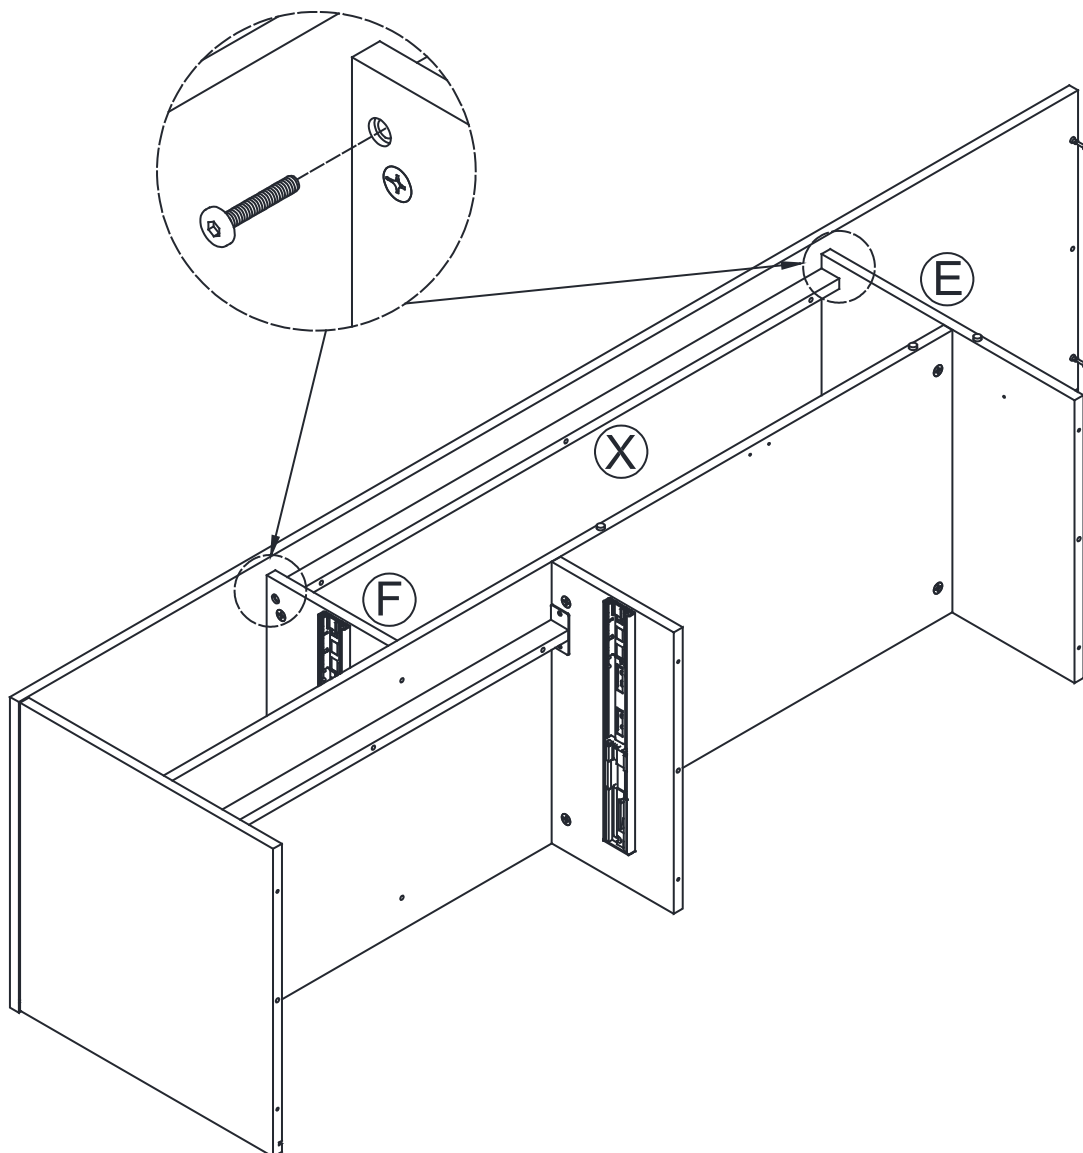


Step 10

- ◆ Attach the Right Side Panel (D) to the Top Panel (A) using Wood Dowel (4) and cam locks.

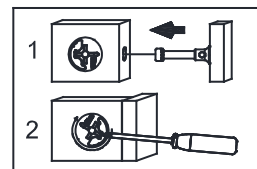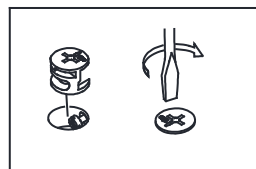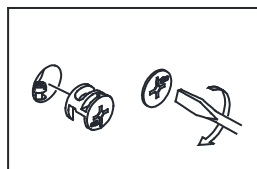


Note: Pay attention to the groove direction on the Right Side Panel.

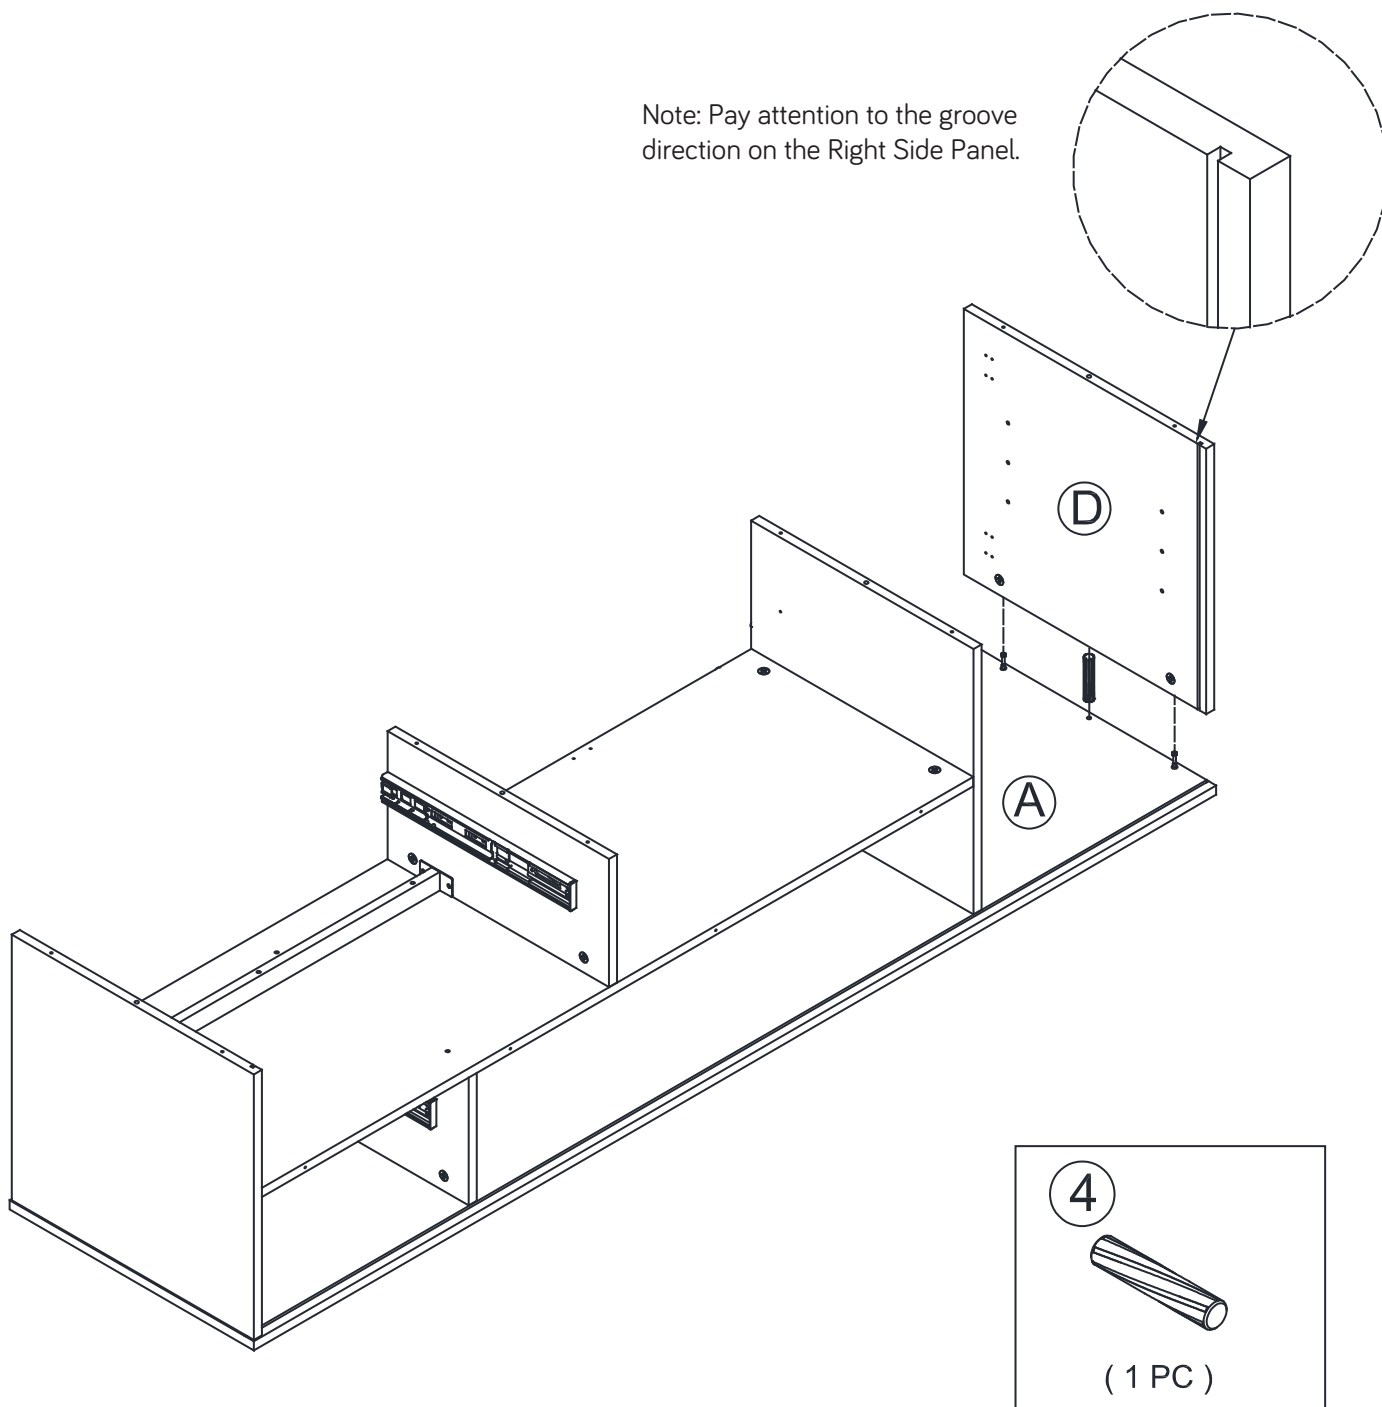




Step 11

- ◆ Insert the Back Panel (K) into the grooves of the Left/Right Side Panels (C & D) and Top Panel (A).

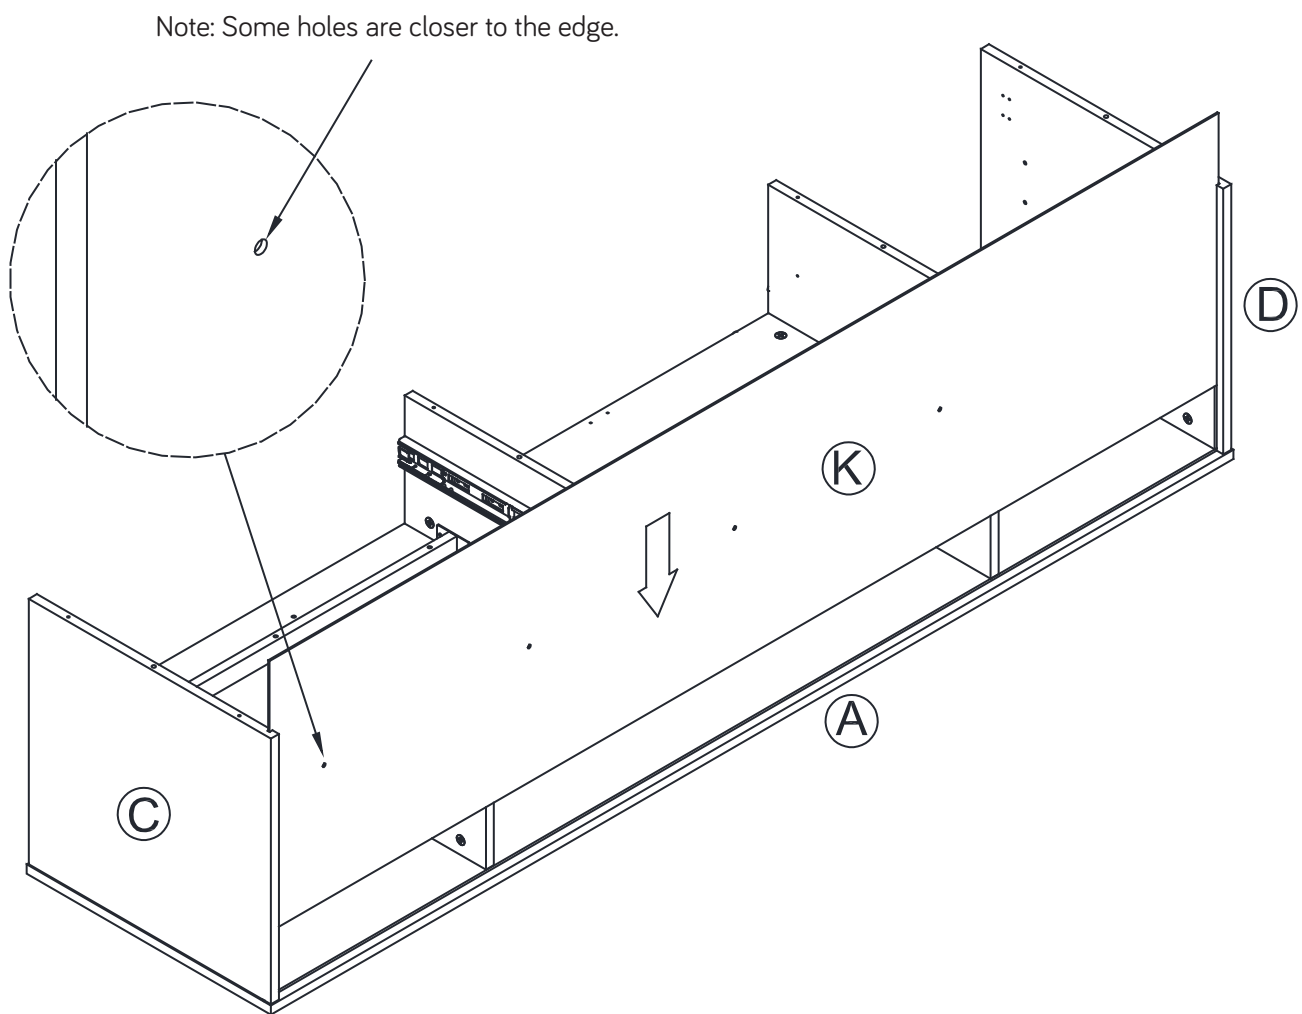



Step 12

- Secure the Bottom Panel (B) to the Left/Right Side Panels (C & D), Center Vertical Panel (E), and Lower Center Horizontal Divider (G) using Wood Dowel (4) and Pan Head Screw (15).

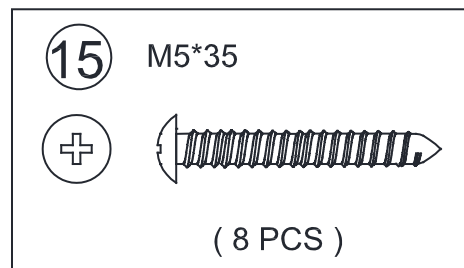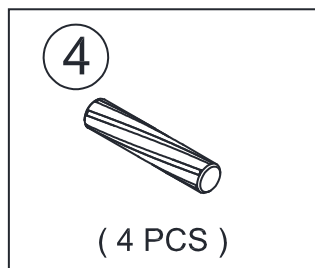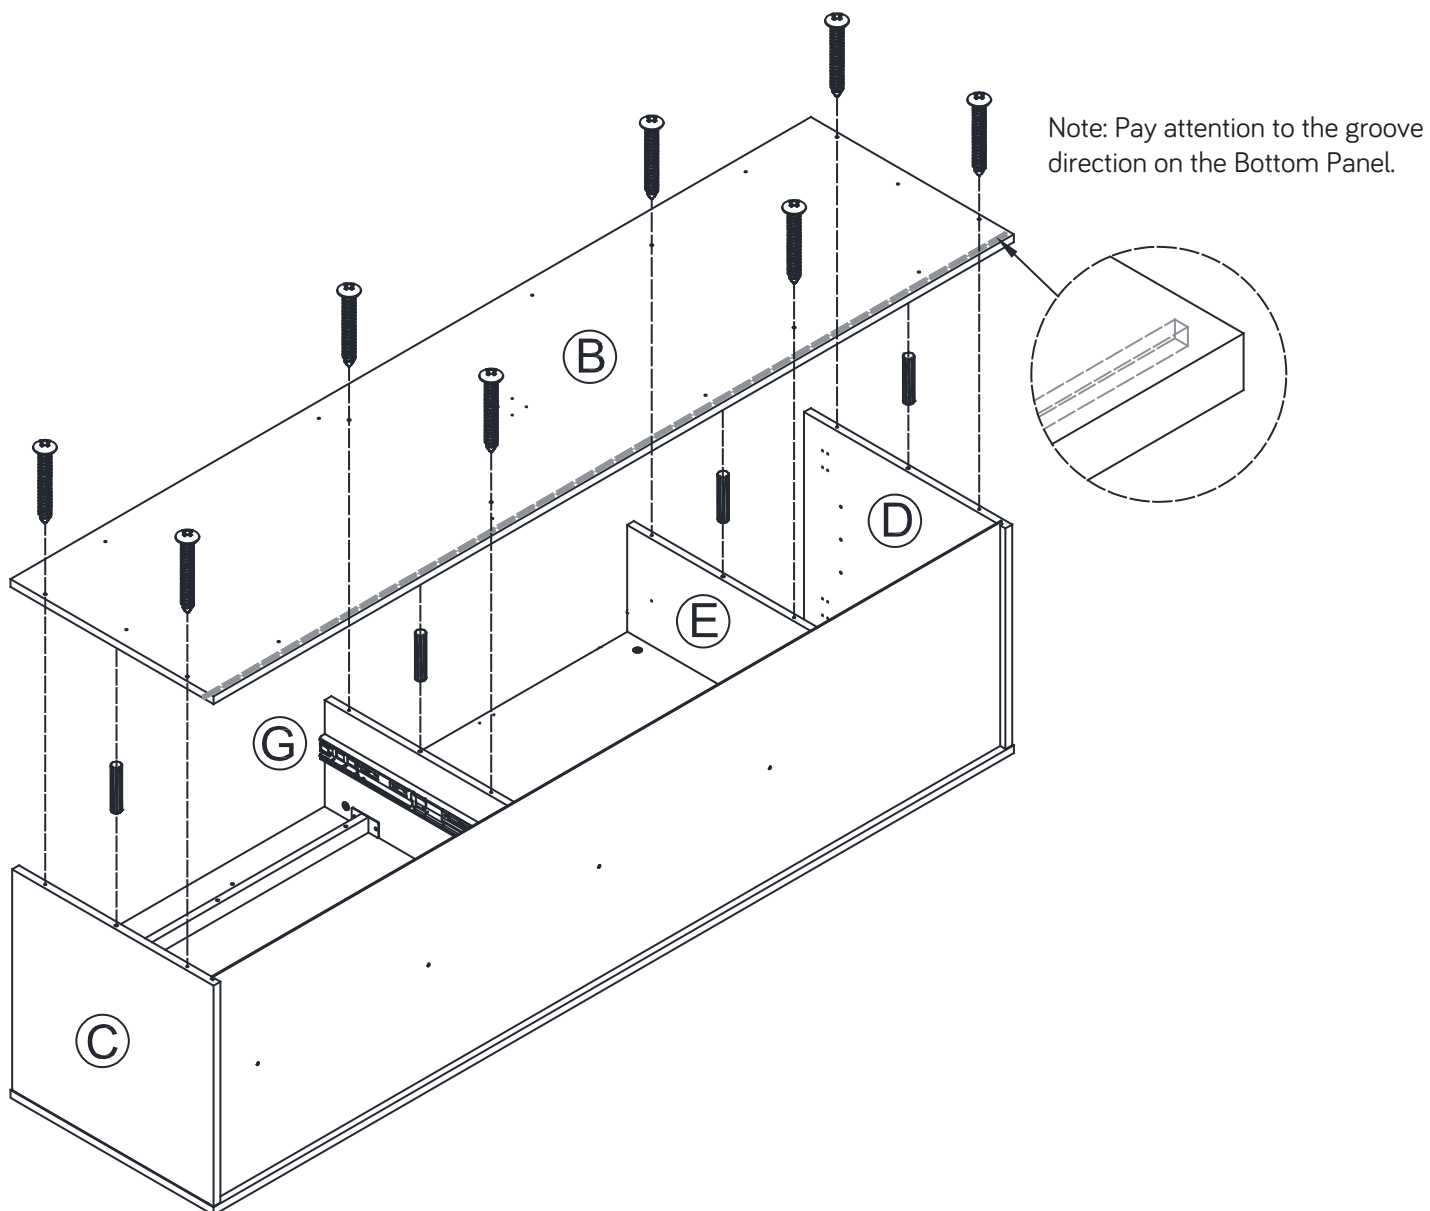



Step 13

- ◆ Fasten the Back Panel (K) to the Middle Shelf (H) using Pan Head Screw (16).

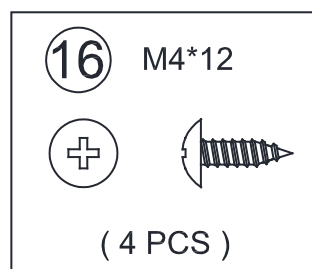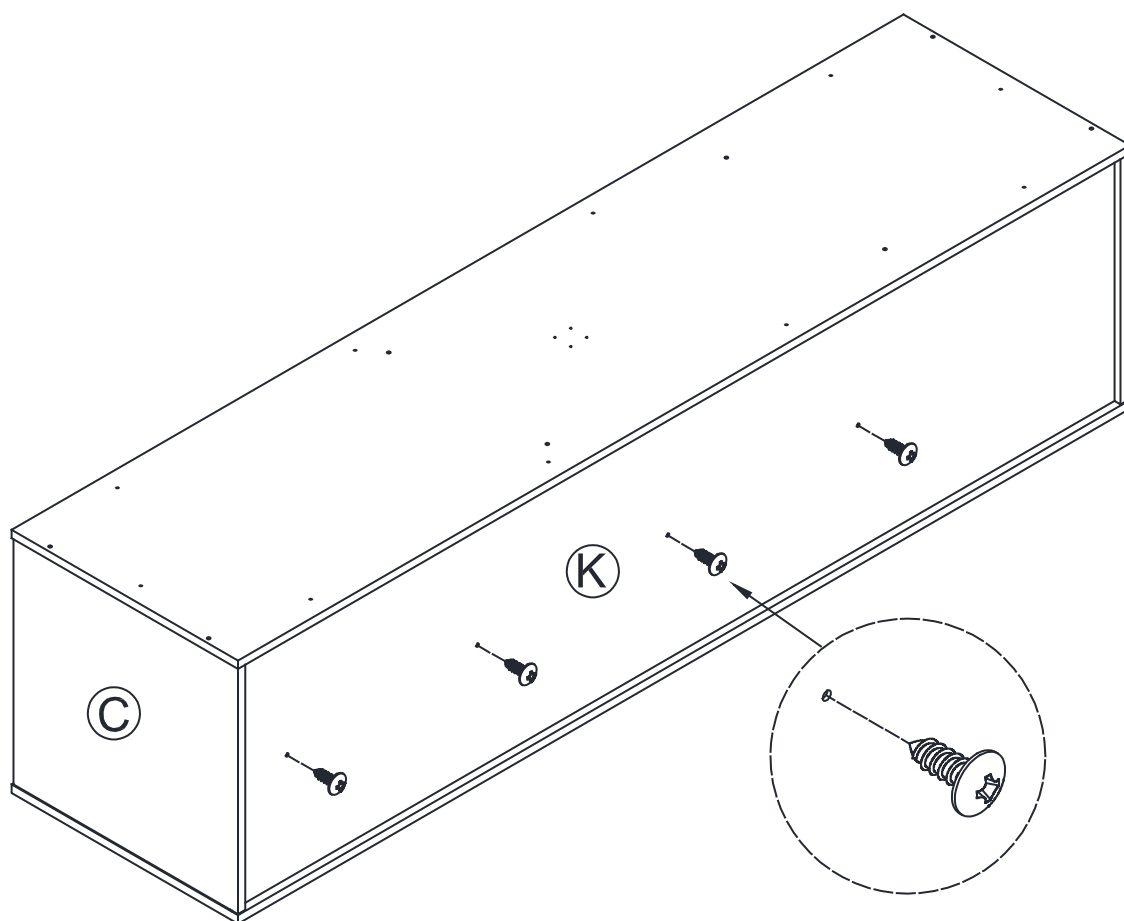




Step 14

- ◆ Secure the Back Panel (K) to the Left/Right Side Panels (C & D) and Top/Bottom Panels (A & B) using Back Panel Bracket (9) and Flat Head Screw (19).

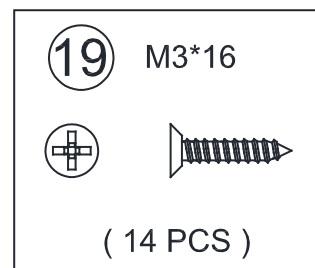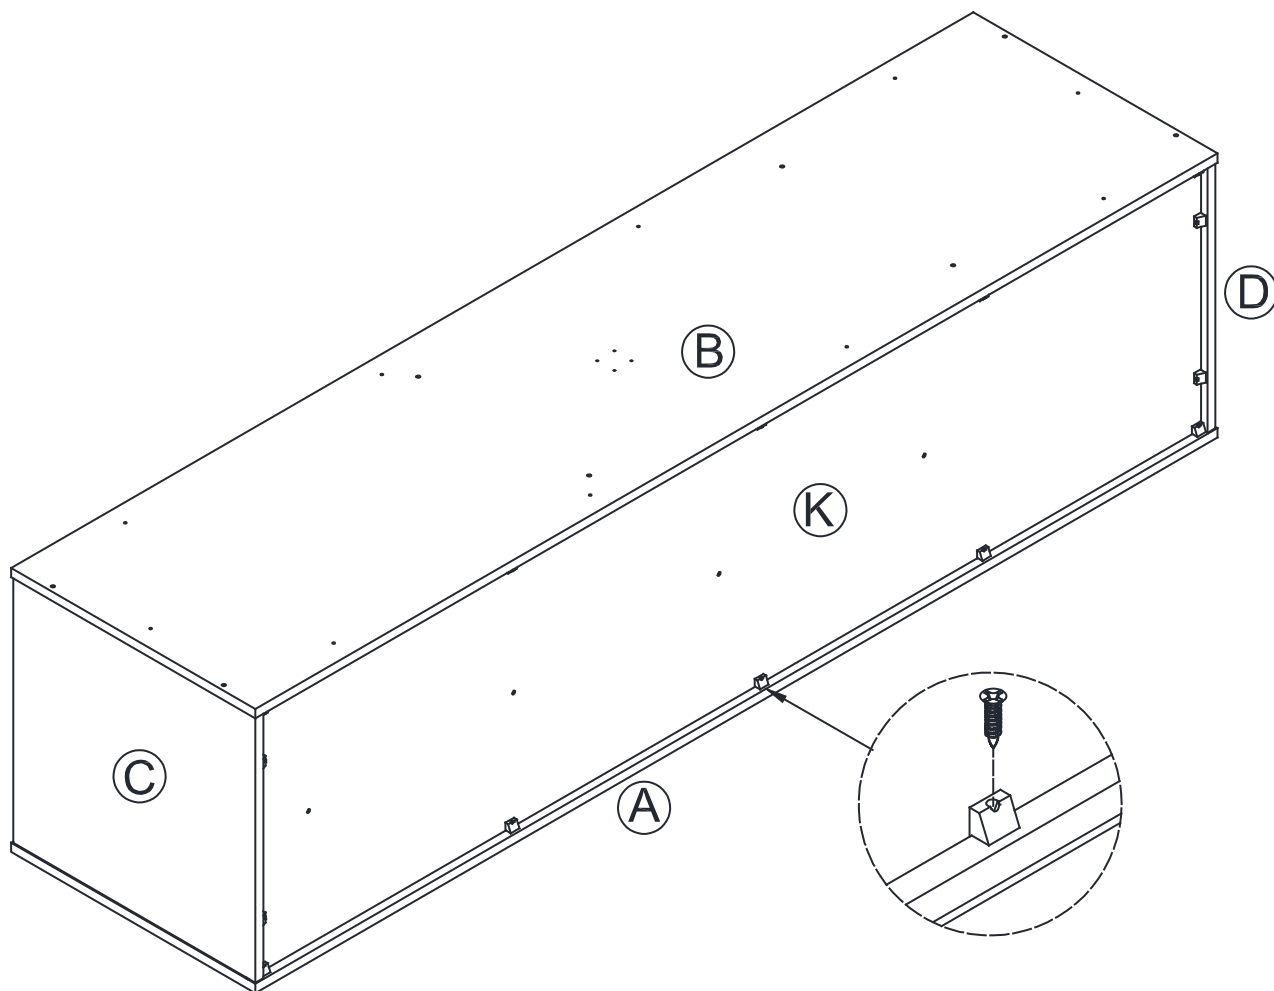


Step 15

- ◆ Attach the Left & Right Side Frames (AA) to the Lower Cross Bars (Z) using Hex Head Screw (12).

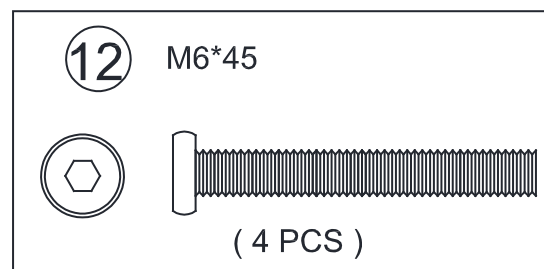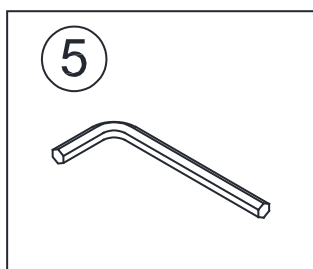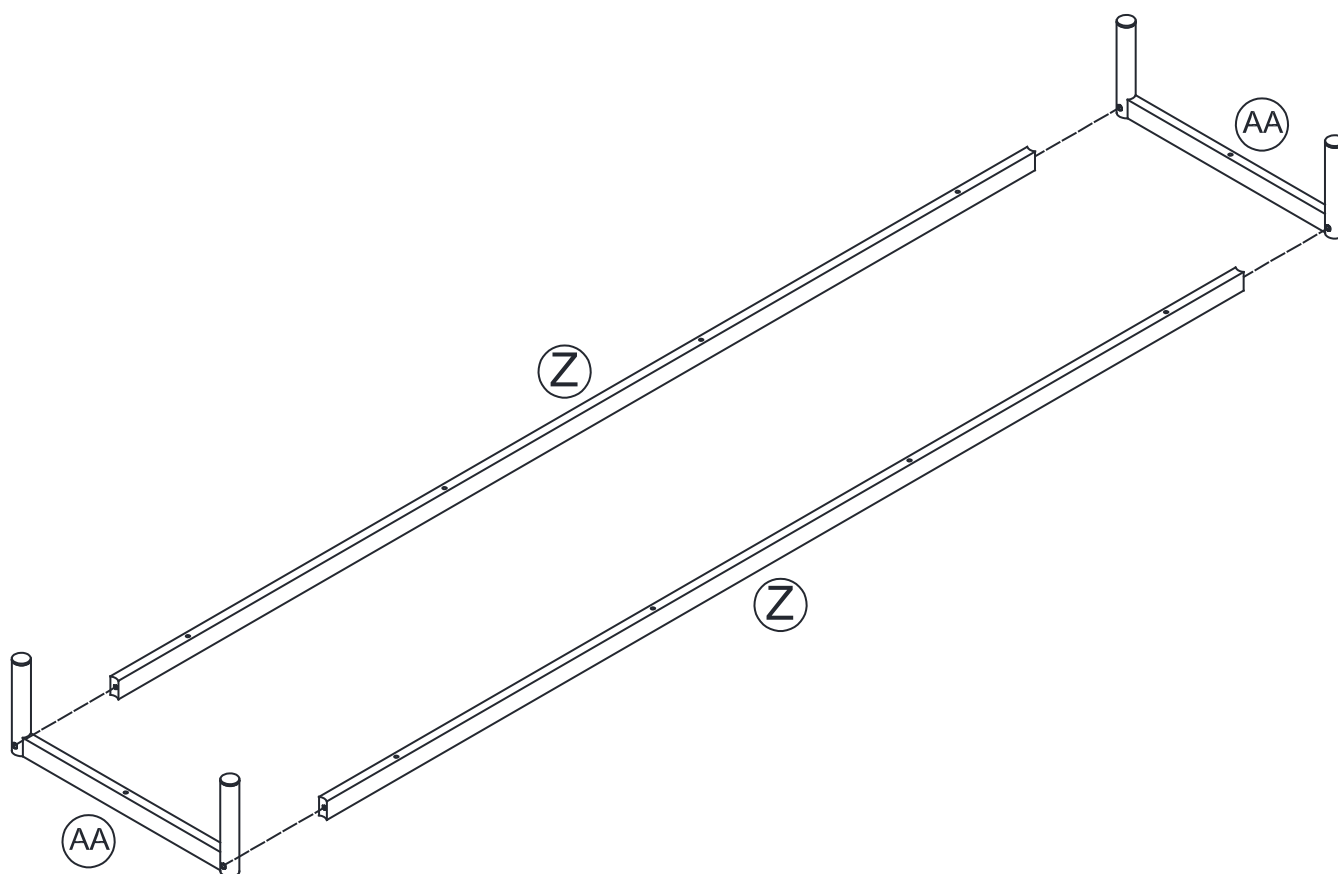


Step 16

- ◆ Secure the Left & Right Side Frames (AA) and Lower Cross Bars (Z) to the Bottom Panel (B) using Pan Head Screw (14).

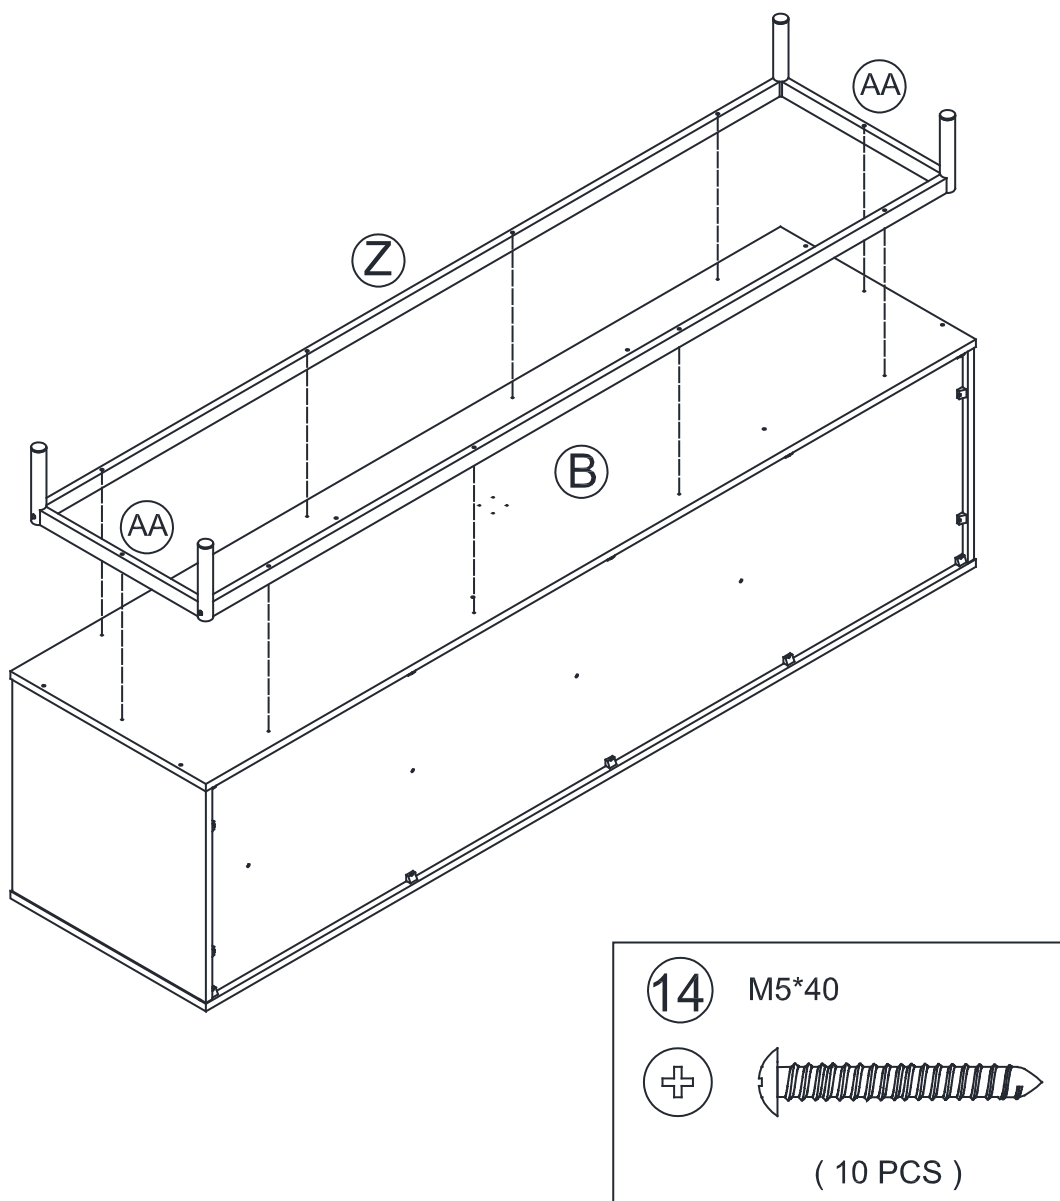



Step 17

- ◆ Attach the Center Support Leg (BB) to the Bottom Panel (B) using Pan Head Screw (17).
- ◆ Screw the Adjustable Feet (10) onto the Center Support Leg (BB).

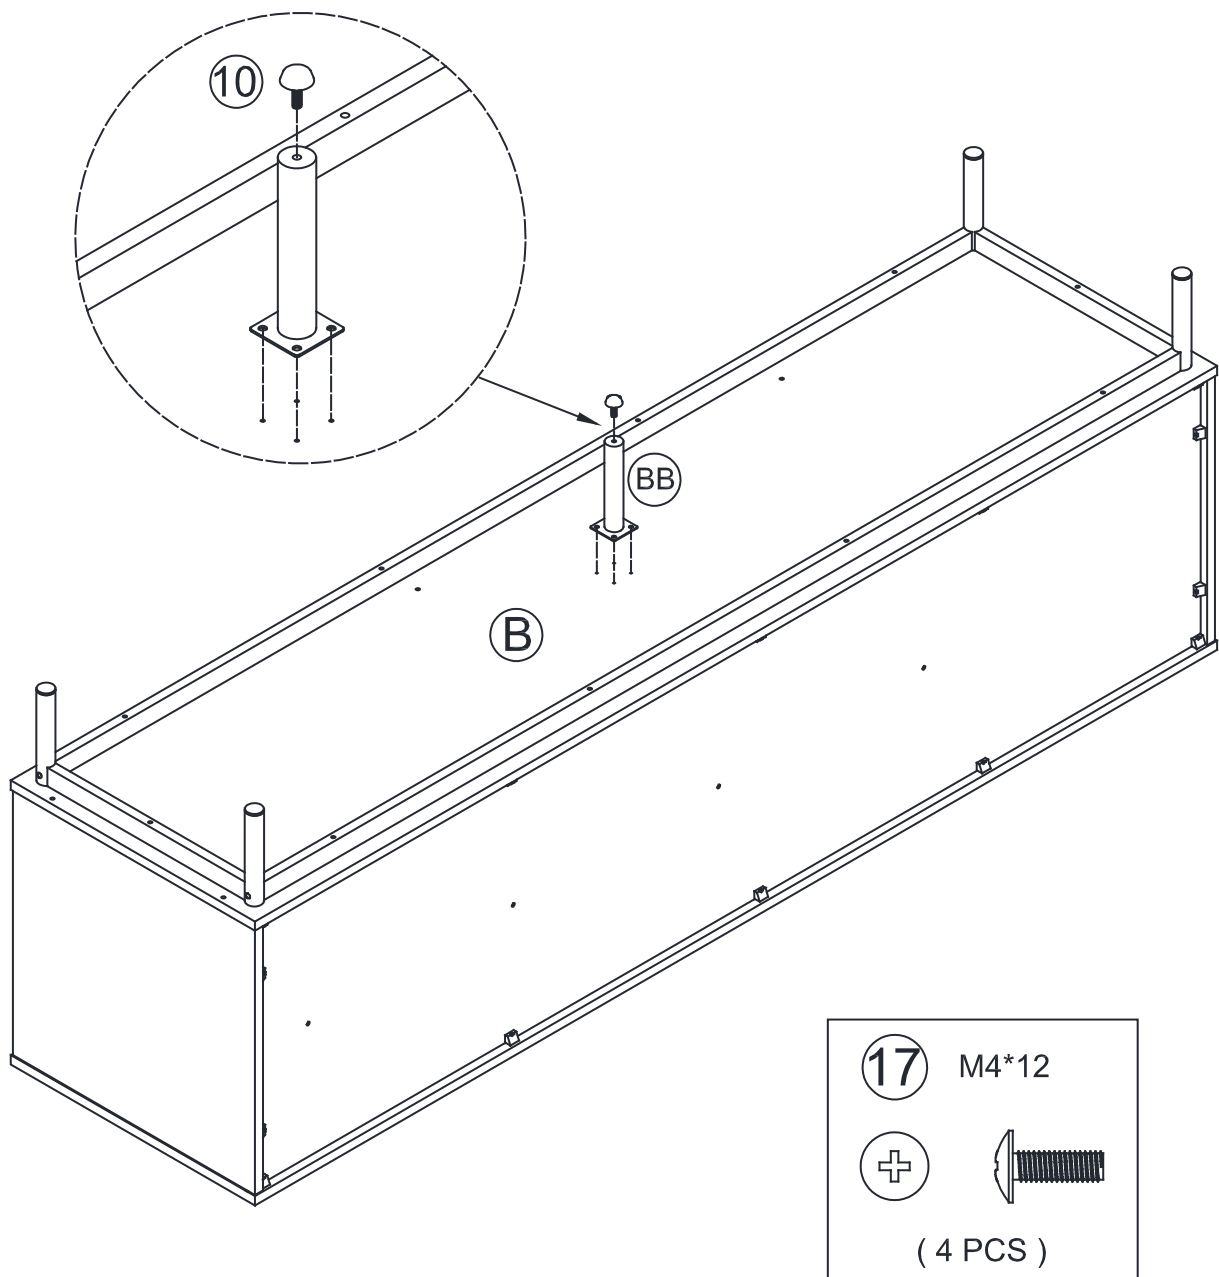



Step 18

- ◆ Fix the Right Shelf (J) to the Center Vertical Panel (E) and Right Side Panel (D) using Metal Pin (8).

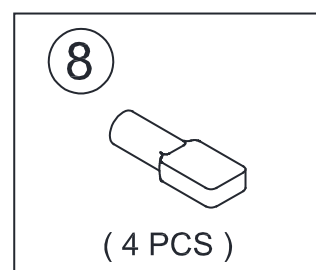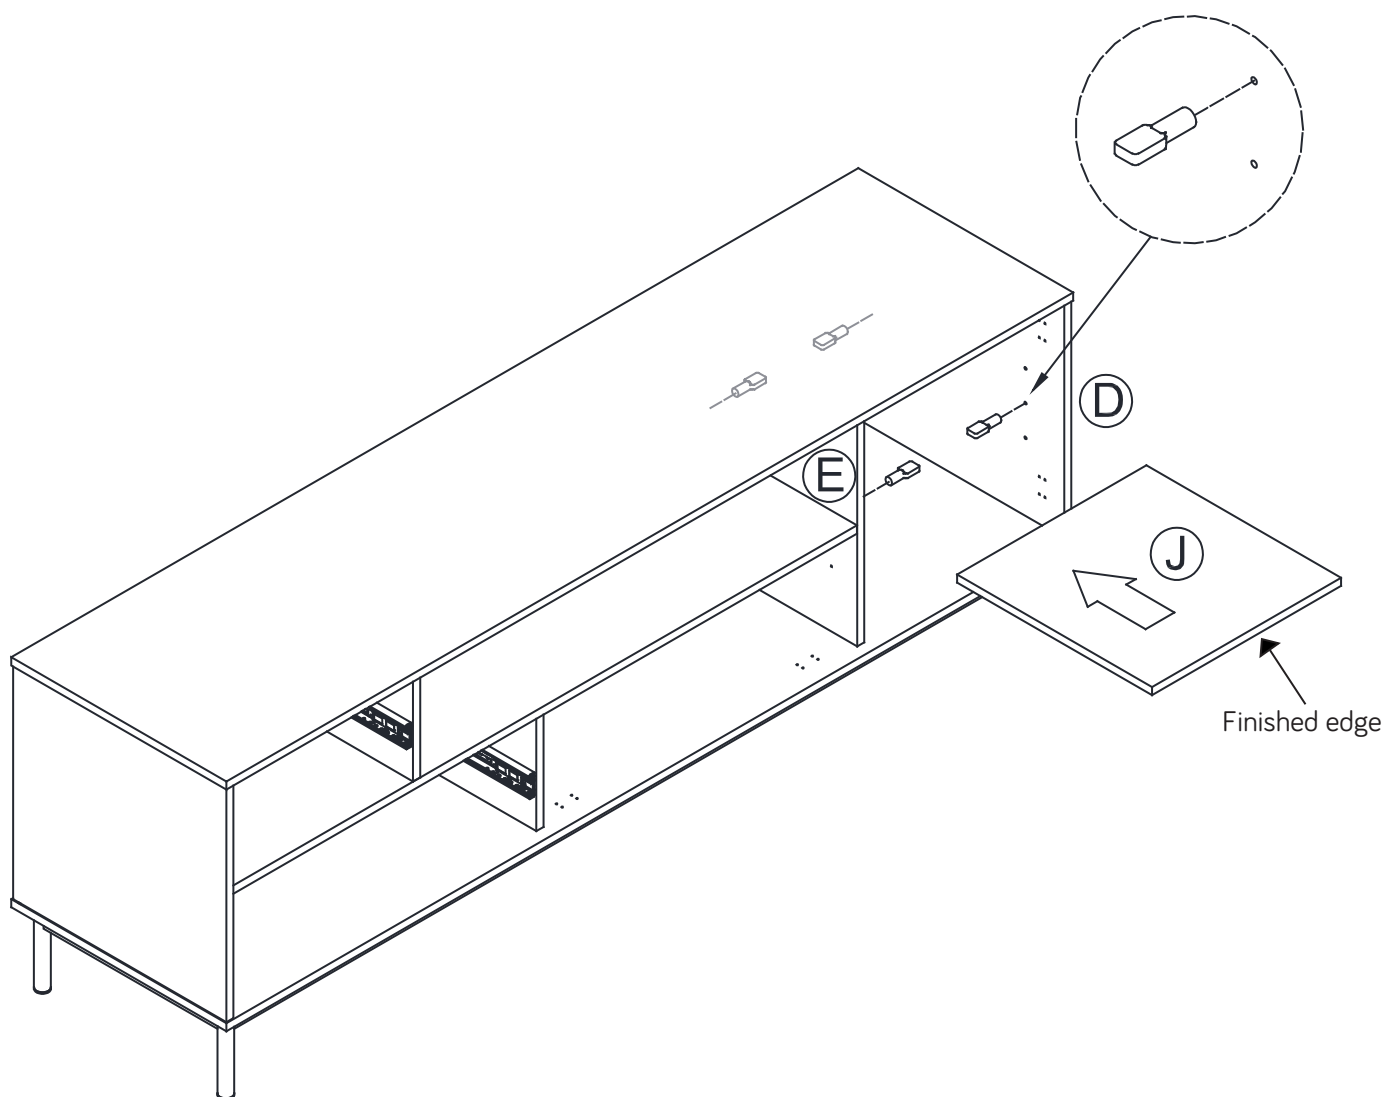



Step 19

- ◆ Attach the Hinge (7) to the doors (L & M) using Flat Head Screw (18).

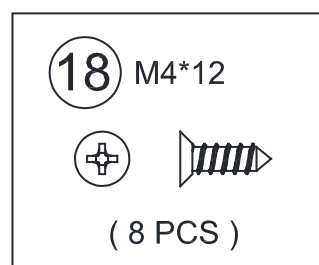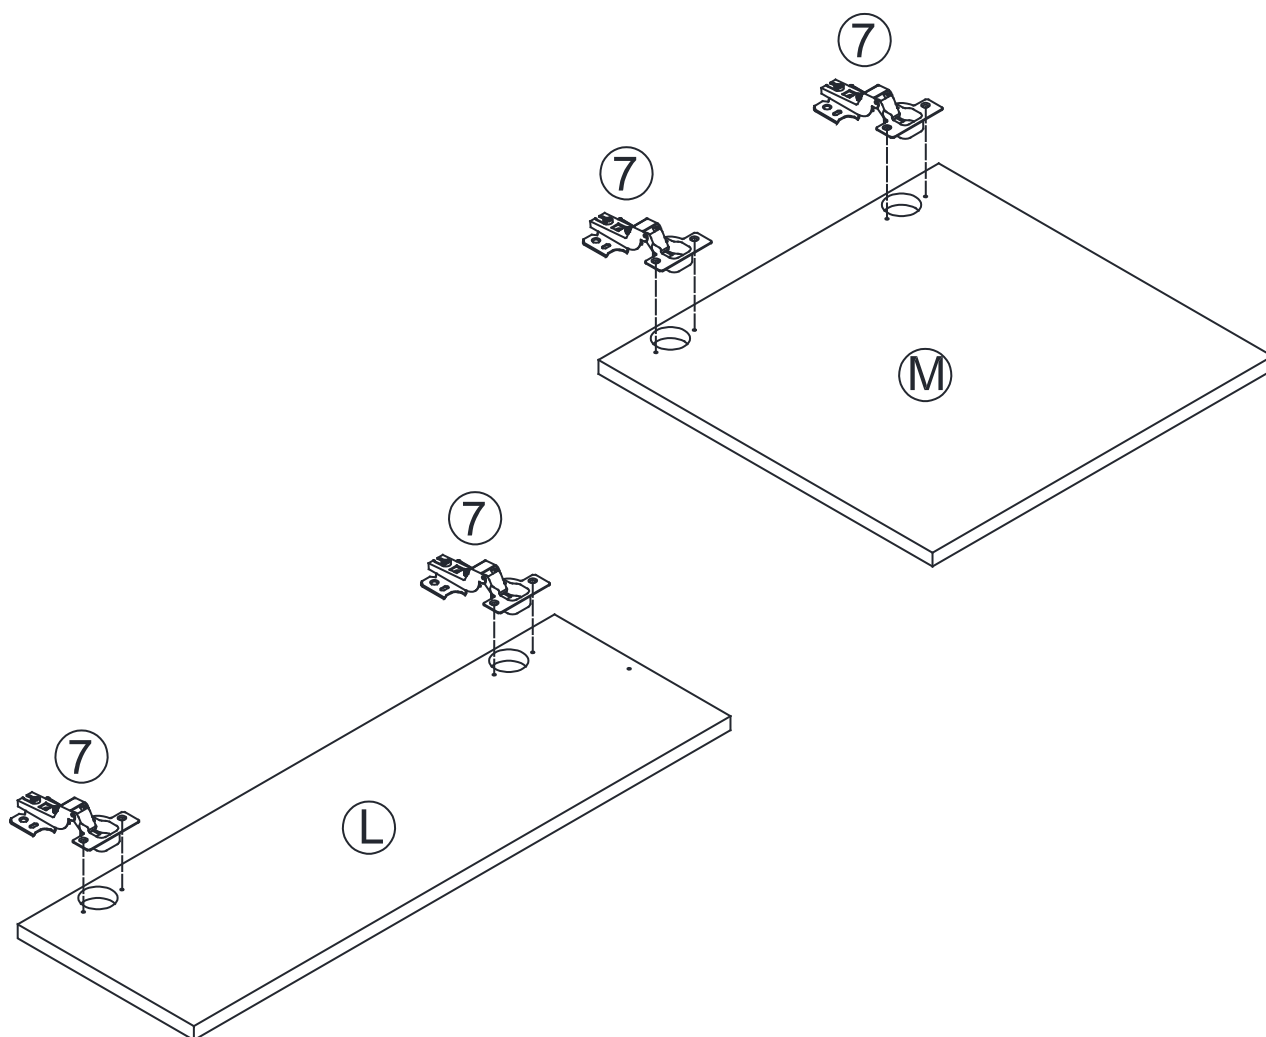



Step 20

- ◆ Apply the Bumper Card (6) to the Middle Shelf (H) and Center Vertical Panel (E).

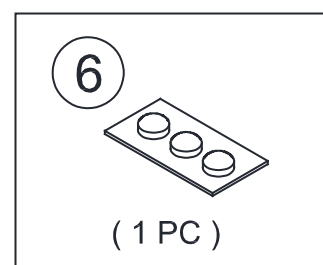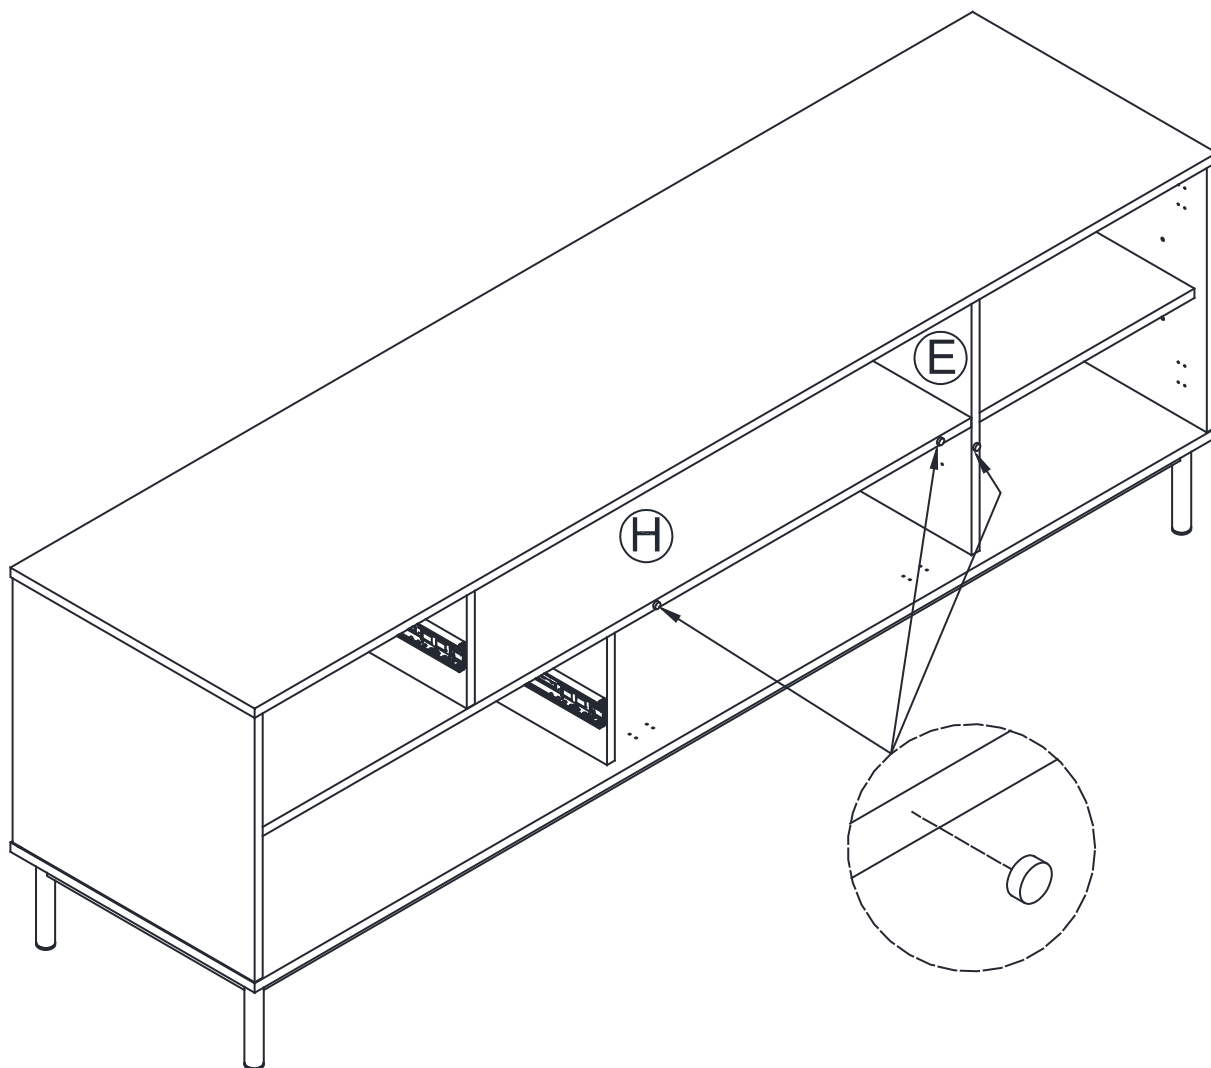


Step 21

- ◆ Mount the Right Door (M) onto the Right Side Panel (D) using Flat Head Screw (18).

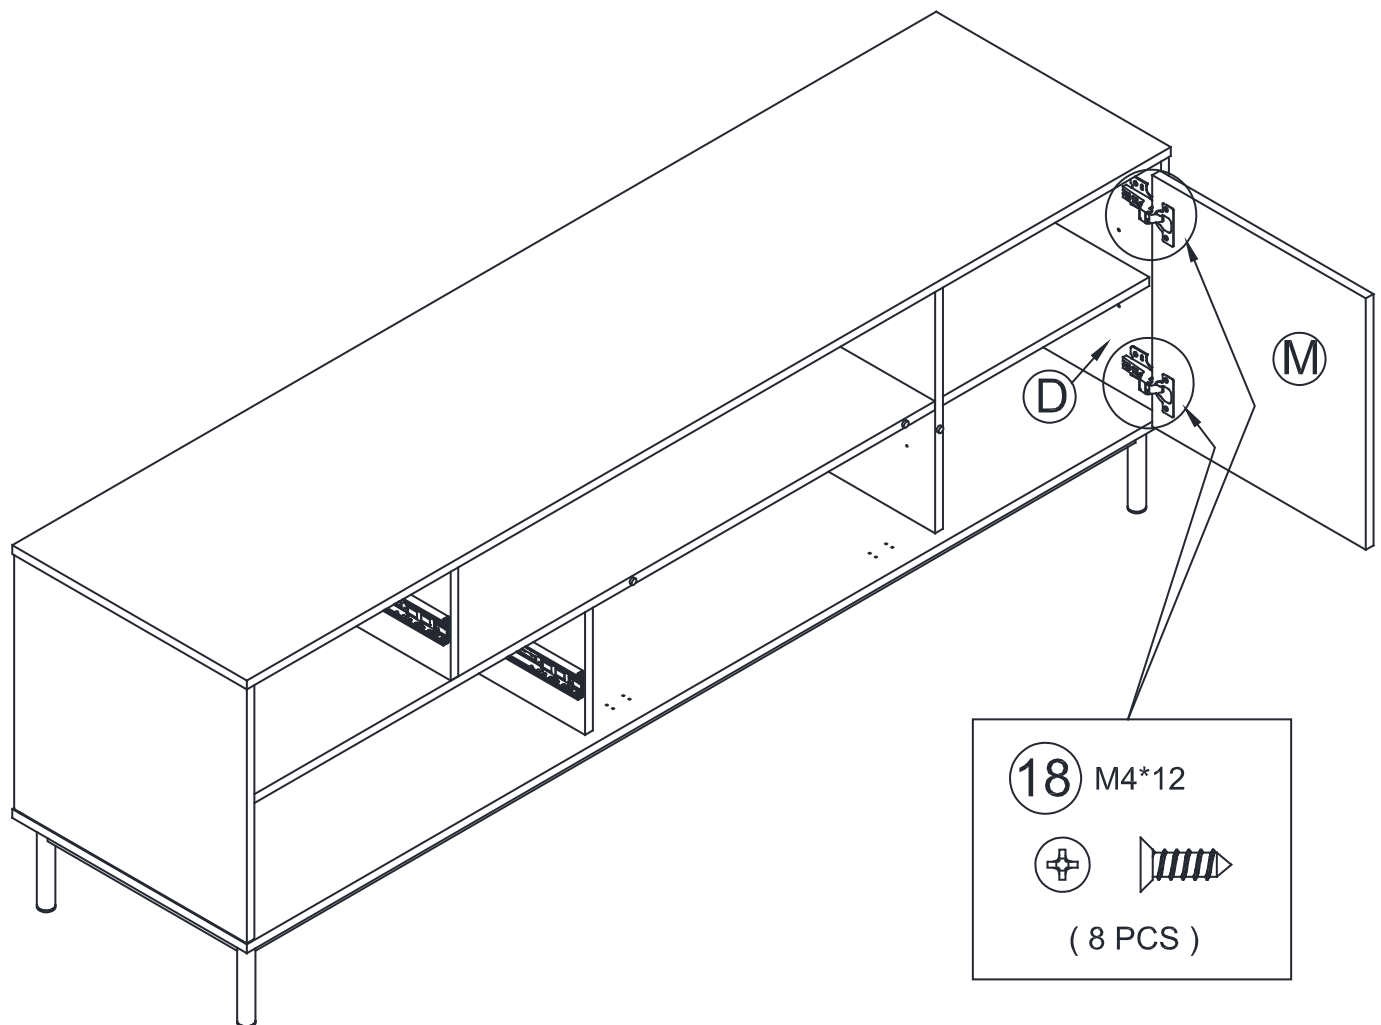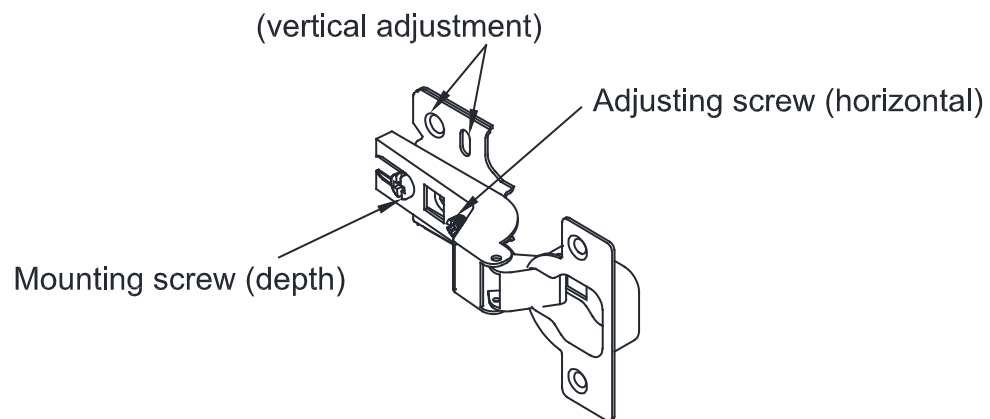




Step 22

- ◆ Mount the Center Door (L) onto the Bottom Panel (B) using Flat Head Screw (18).

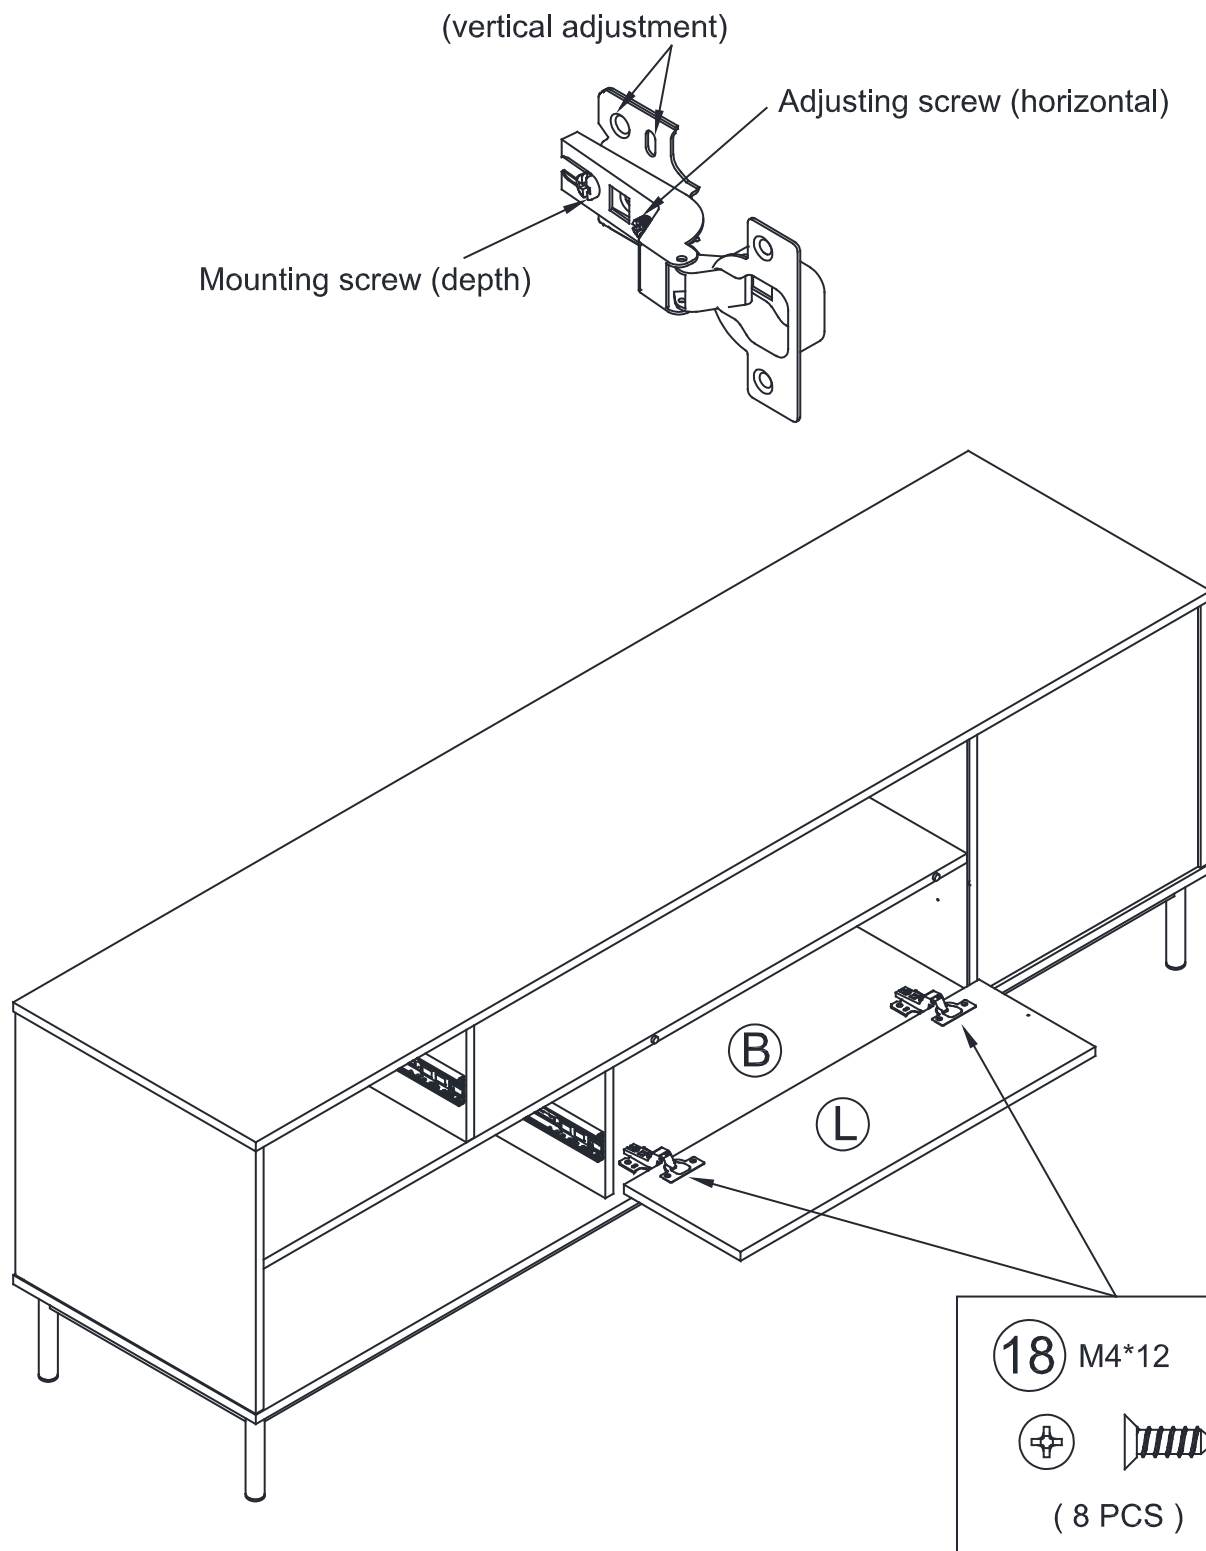


Step 23

- ◆ Attach the Door Restraint Rope (11) to the Center Vertical Panel (E) and Center Door (L) using Pan Head Screw(16).

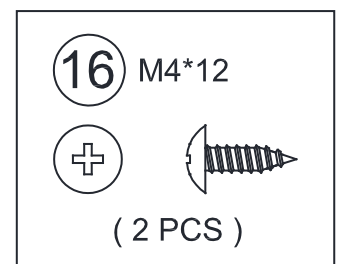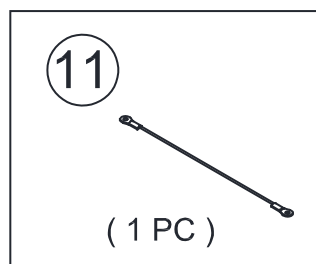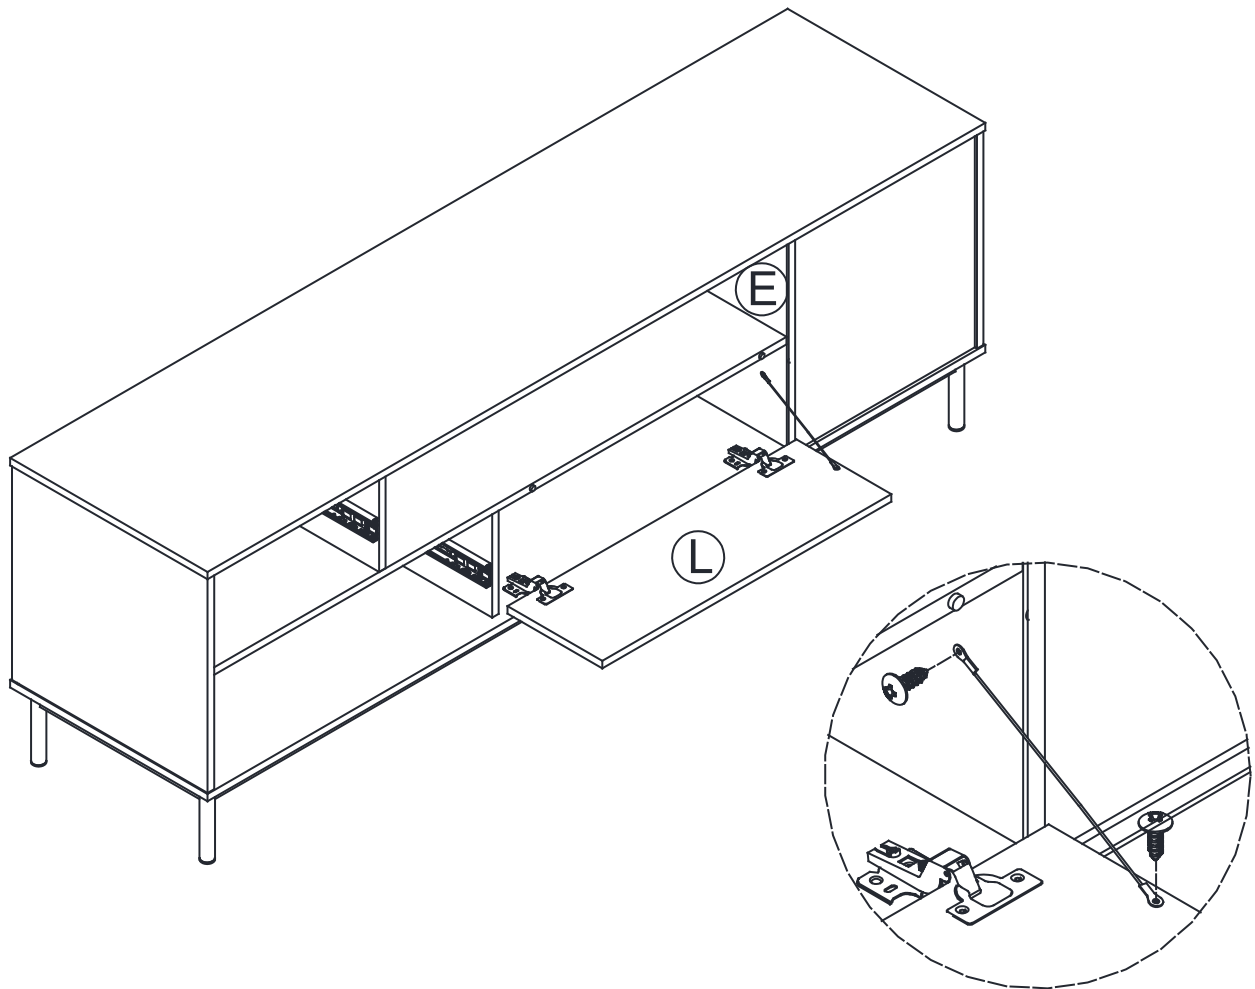


Step 24

- ◆ Secure the Drawer Left/Right Side Panels (Q & R) to the Upper Drawer Back Panel (S) using Pan Head Screw (15).

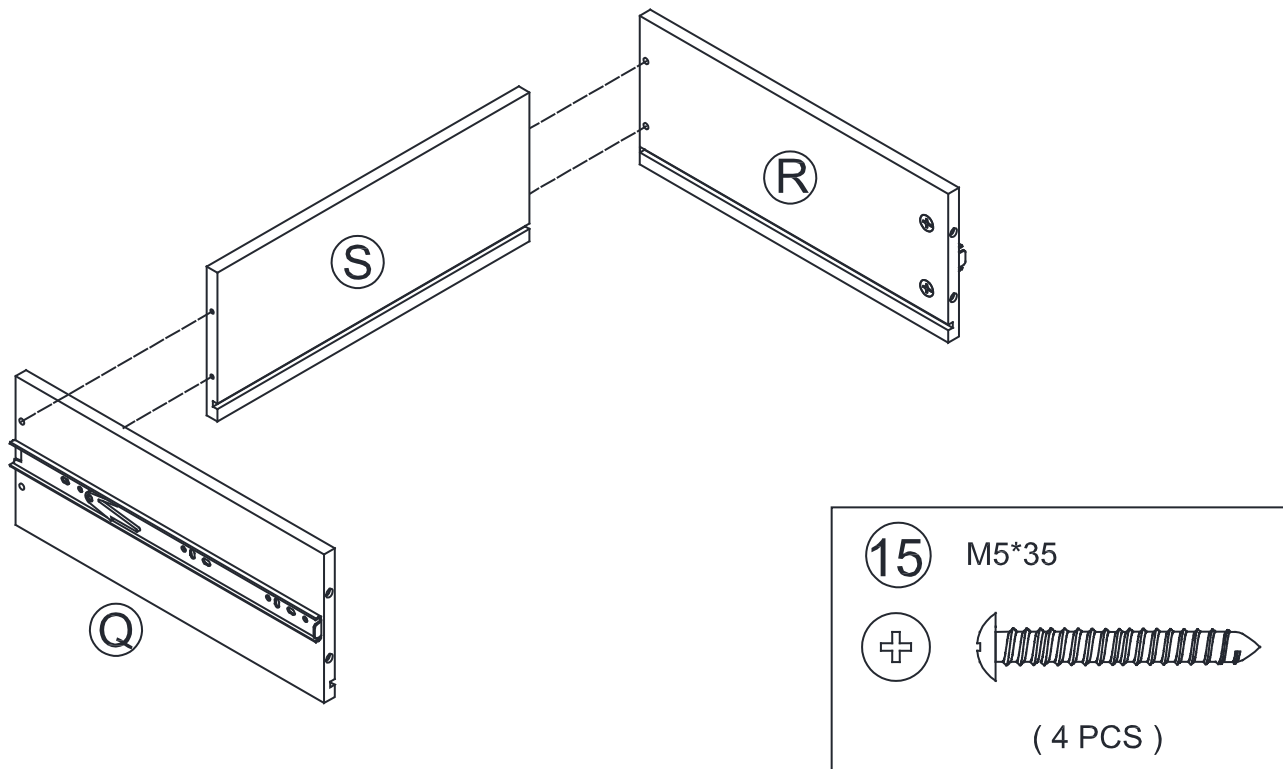


- ◆ Slide the Upper Drawer Bottom Panel (T) into the grooves.

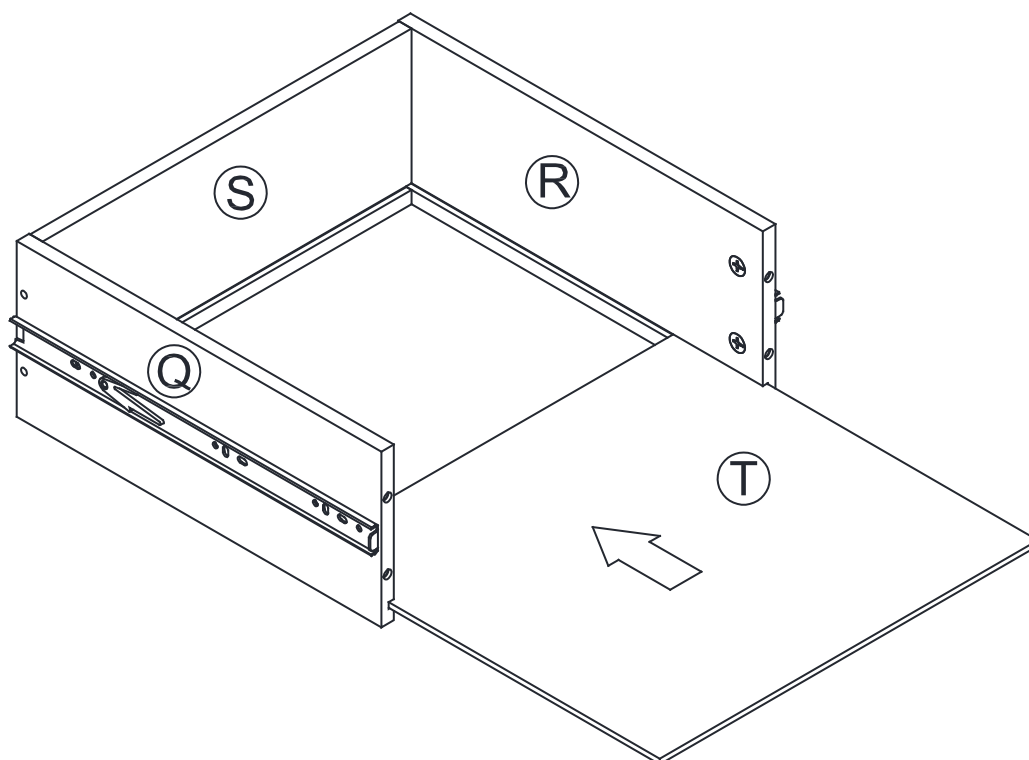


Step 25

- ◆ Attach the Upper Drawer Front (O) to the Drawer Left/Right Side Panels (Q & R) using cam locks.

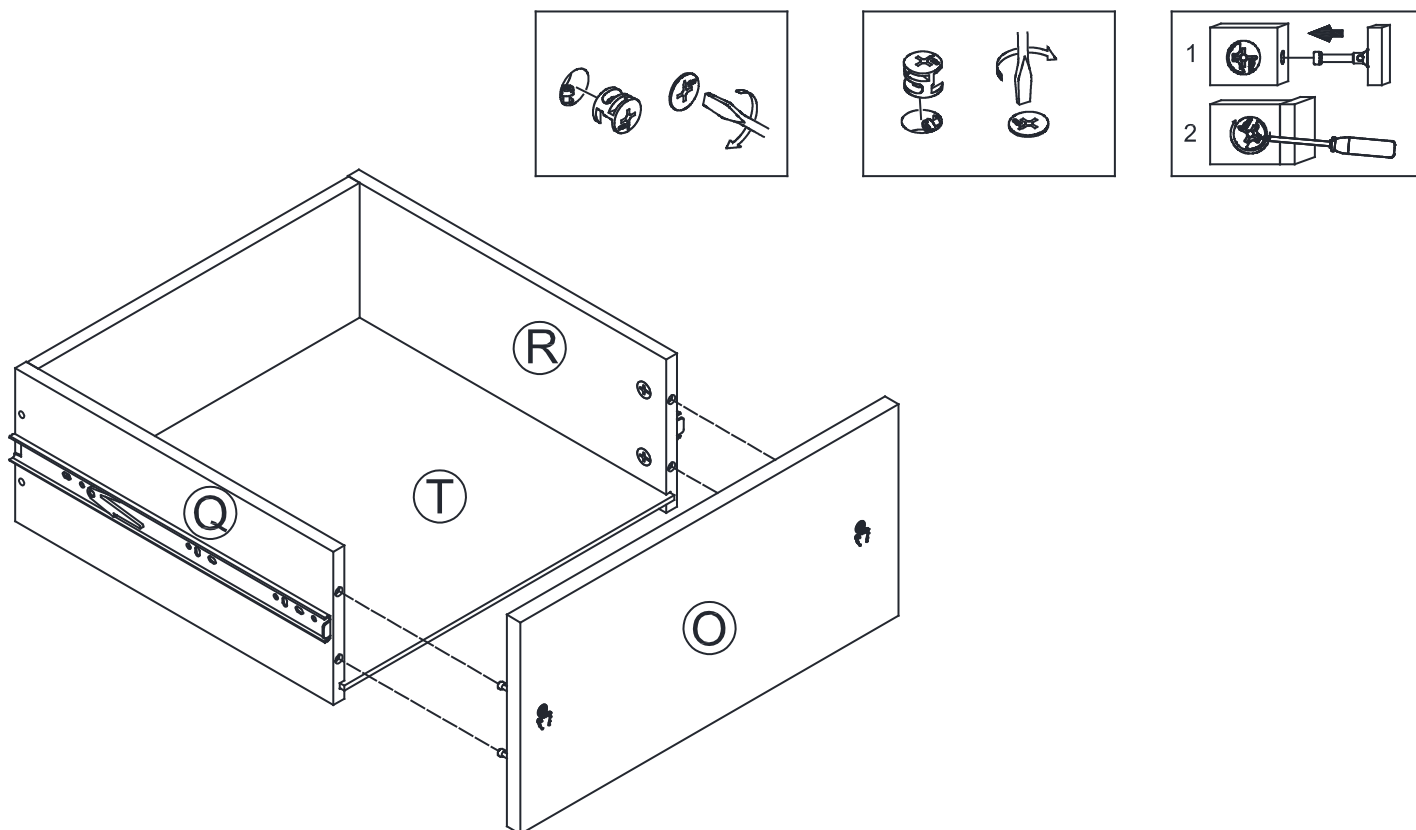


- ◆ Secure the Drawer Left/Right Side Panels (Q & R) to the Lower Drawer Back Panel (U) using Pan Head Screw (15).




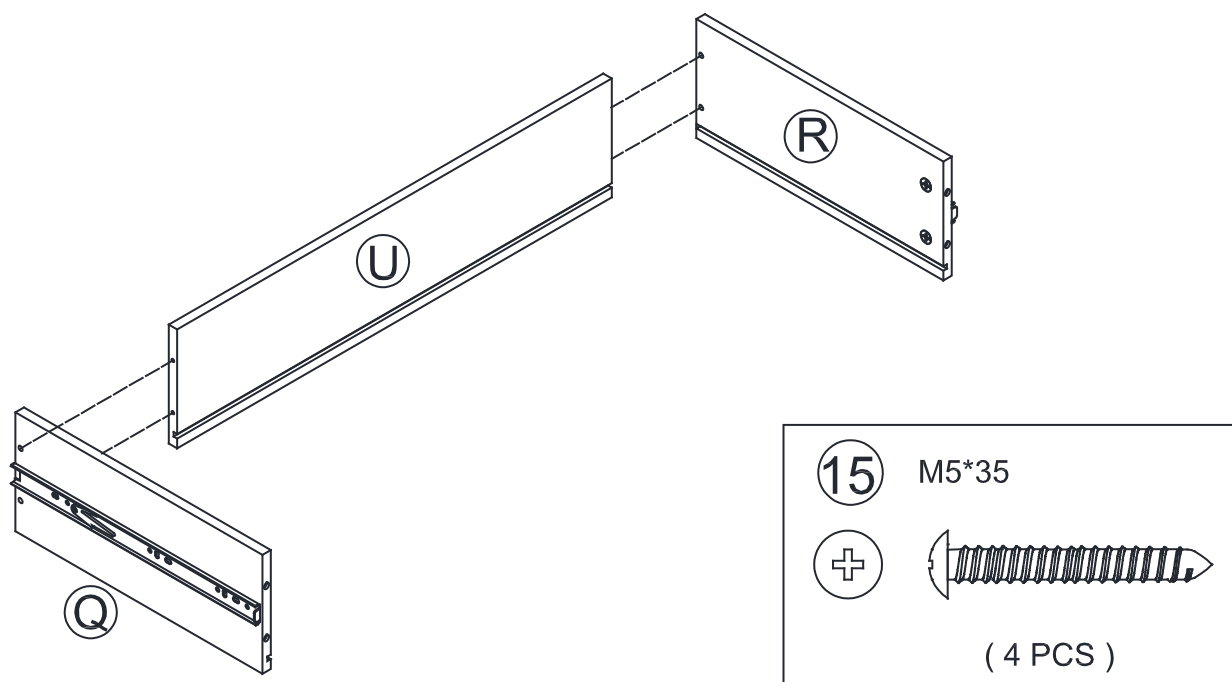


Step 26

- ◆ Slide the Lower Drawer Bottom Panel (W) into the grooves.


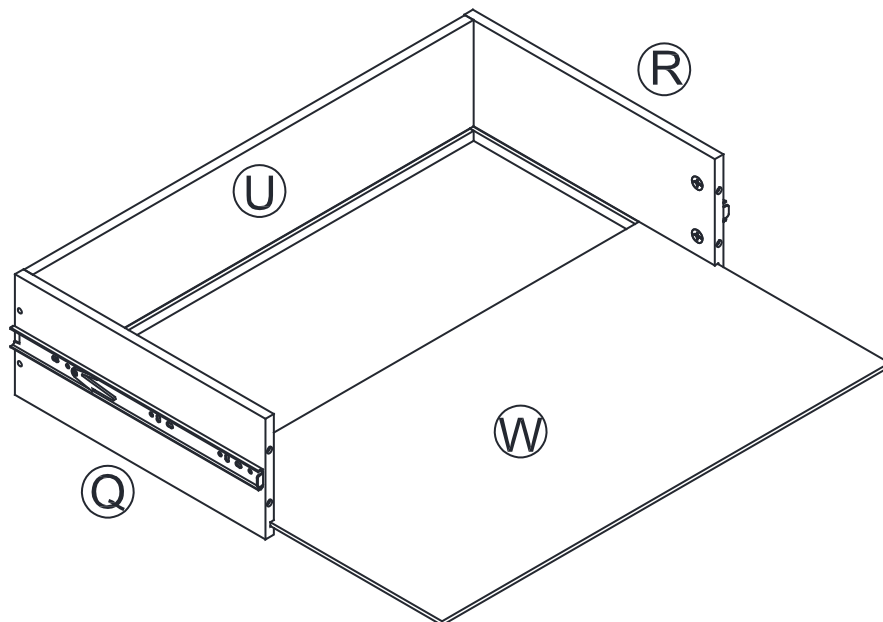


- ◆ Attach the Lower Drawer Front (P) to the Drawer Left/Right Side Panels (Q & R) using cam locks.

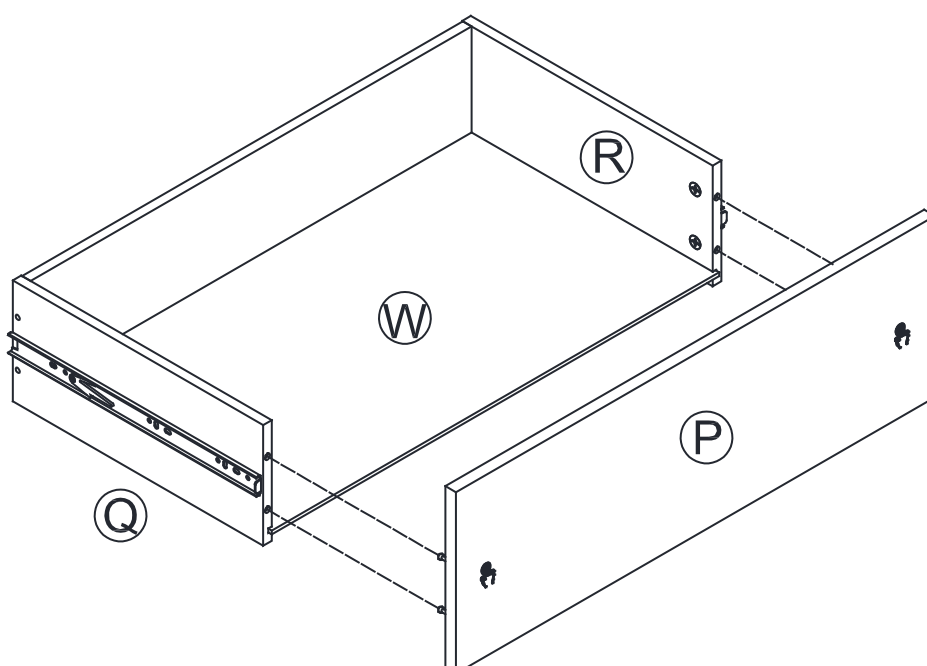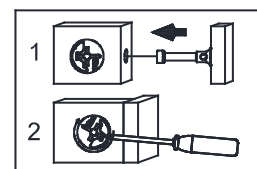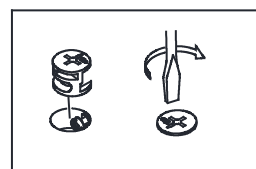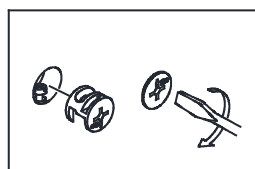


Step 27

- ◆ Align and insert the drawer slides into both drawers.

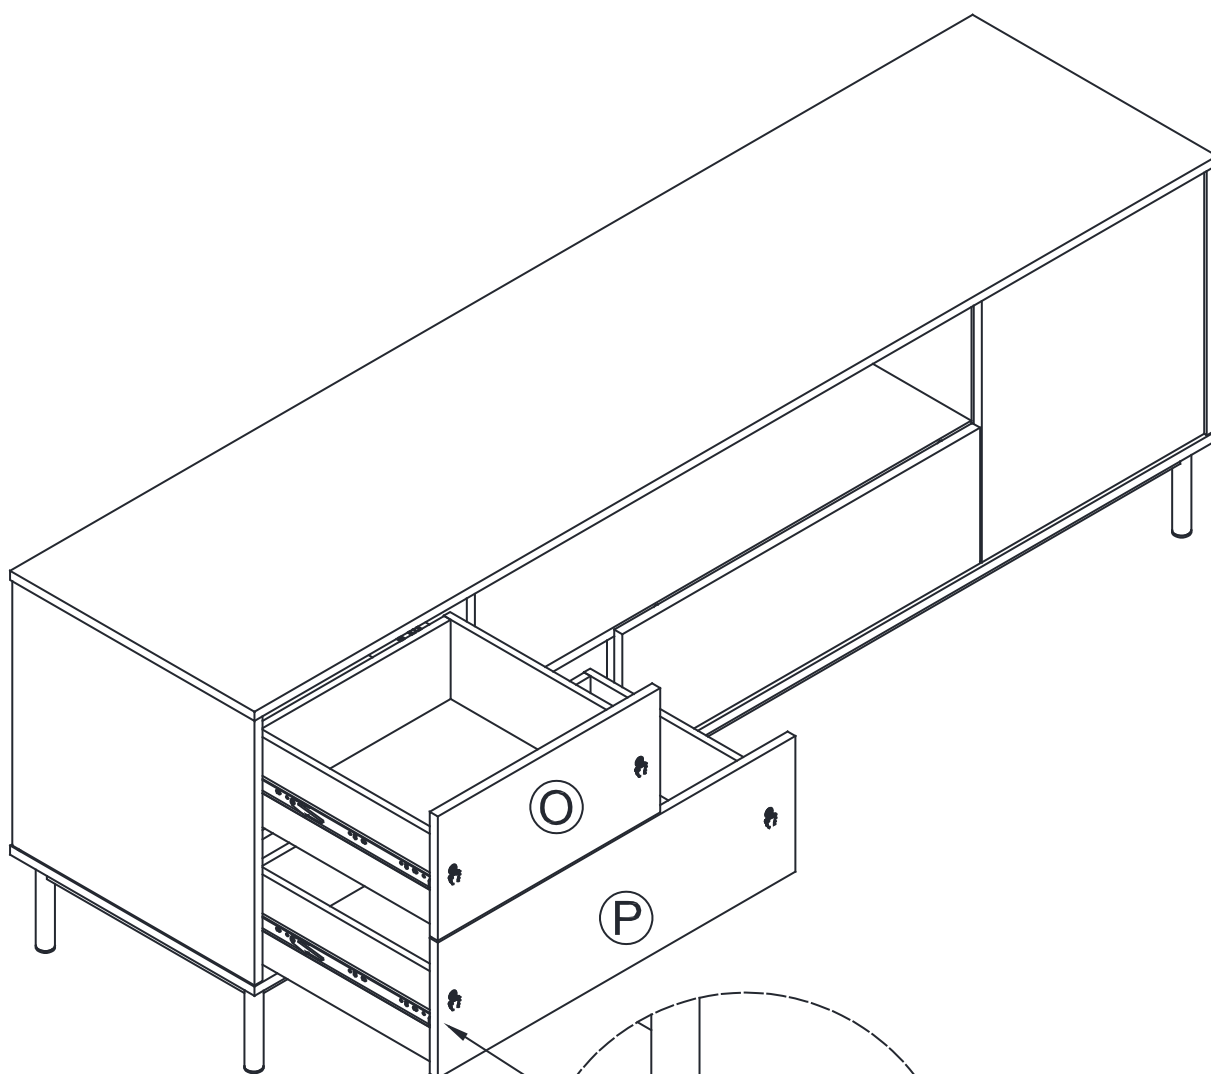
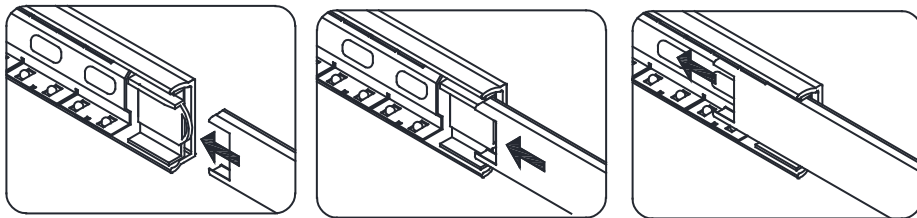


Important: To open the drawers, press both marked areas simultaneously with two hands.

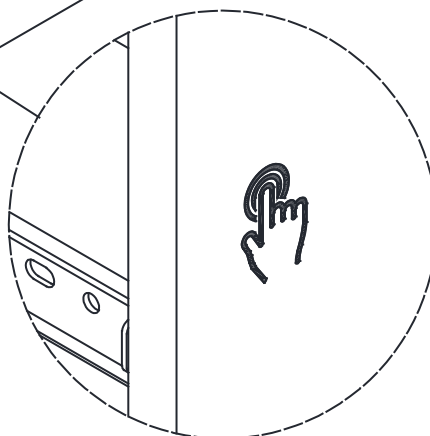

Step 28

- ◆ Peel APPLIQUES from the APPLIQUE CARD (3) and stick them onto each visible HIDDEN CAM.

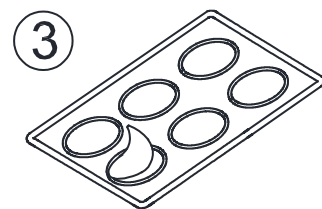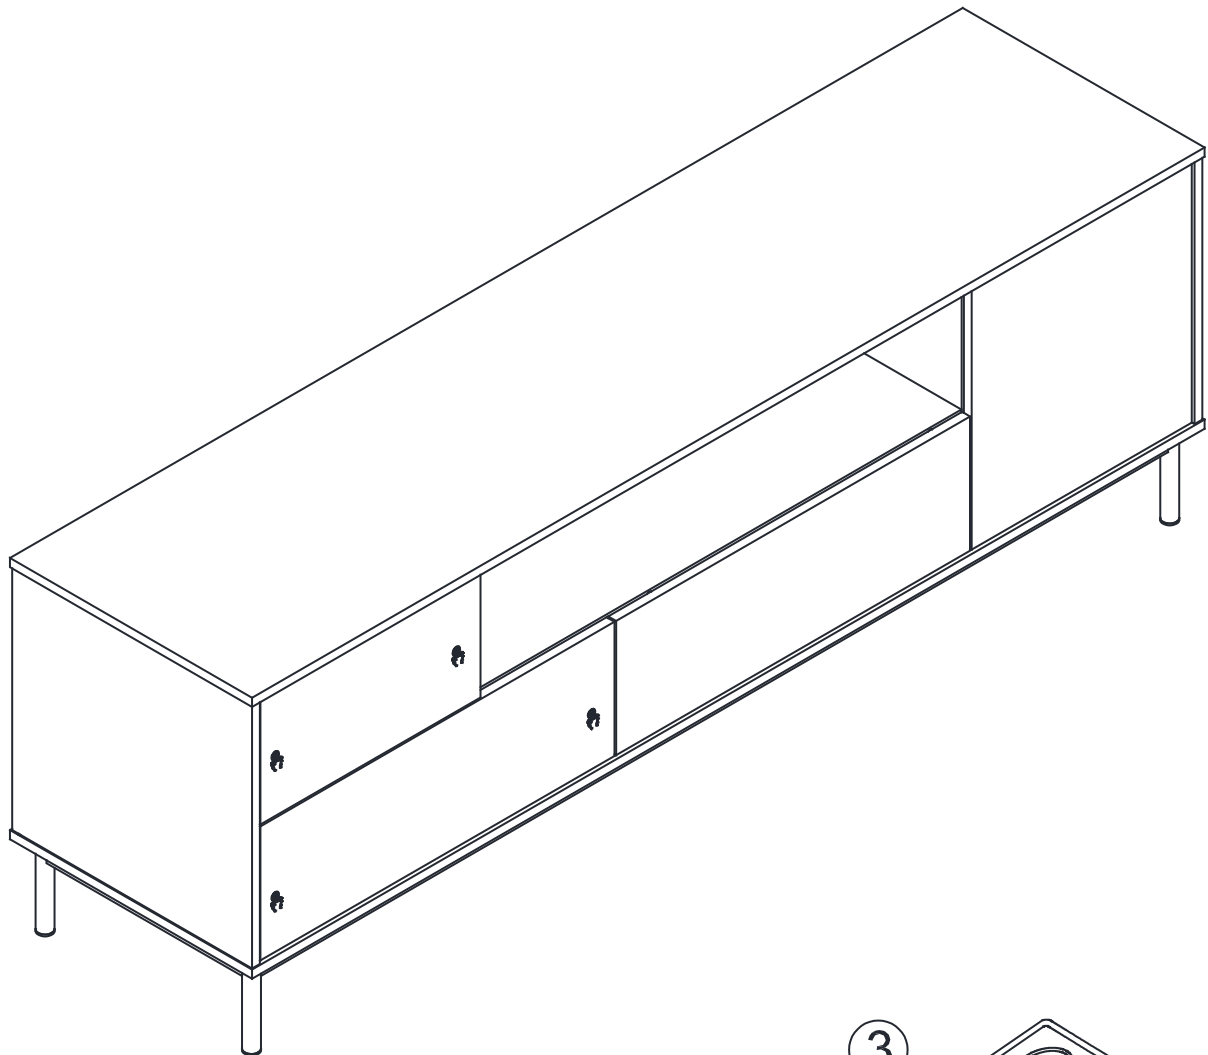



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818