


Installation steps



- 1 Brake forward / Remove bar nuts
- 2 Remove black washer
- 3 Lift the chain above the sprocket

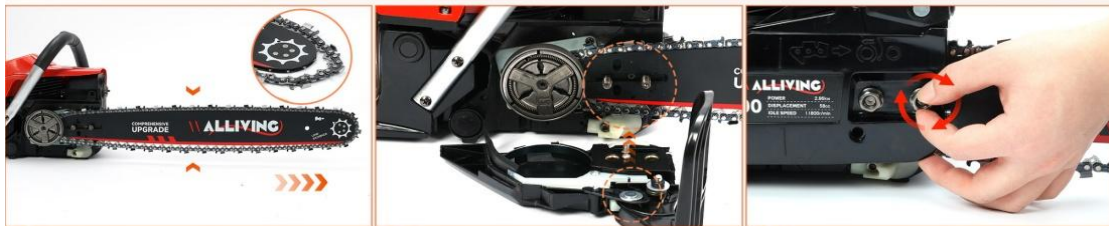

- 4 Install the bar & put chain into groove
- 5 Steer adjuster pin to the bar hole
- 6 Finger tighten bar nuts



- 7 Tighten the saw chain clockwise
- 8 Test saw chain
- 9 Tighten bar nuts with tools



Instructions

9600_{all}