




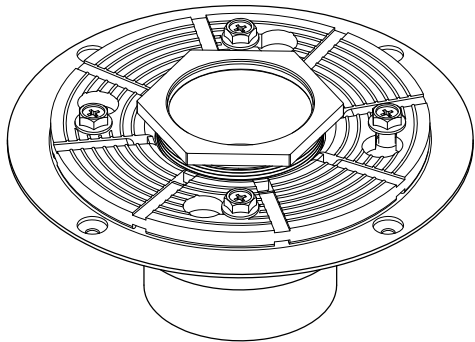


Shower Drain with or without Flange Kit Installation Instructions

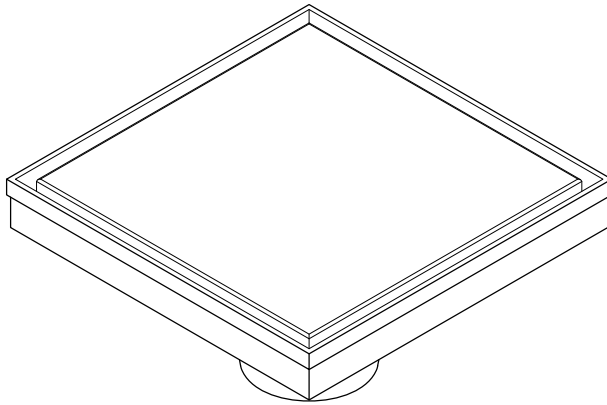


Tools Required

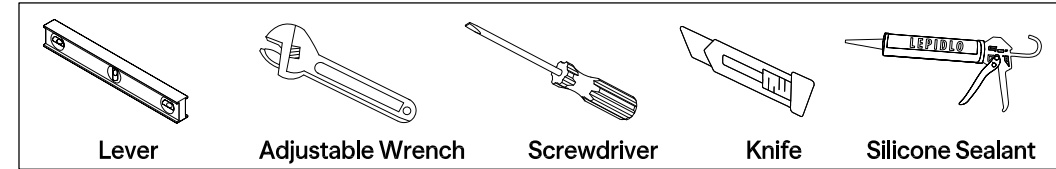


Installation Step :

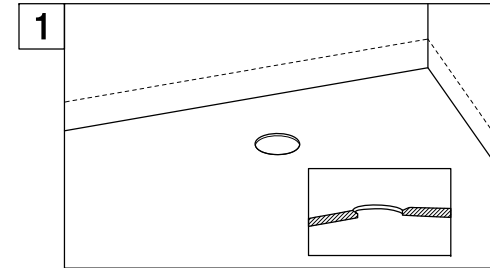


1. Cut a chamfered hole at the location where the drain will be located, the maximum diameter at the upper part of the hole should be 6-1/2", this will allow the flange to sit flush with the sub-floor.

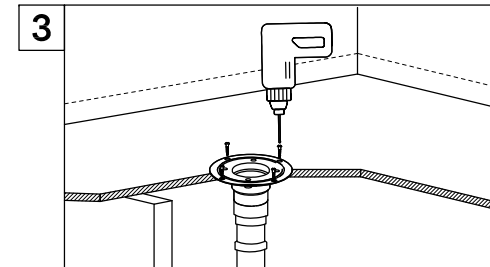


3. Connect the flange to the drainpipe; drive wood screws into the 4 holes on the flange edge, the top of the flange should be flush with the subfloor.

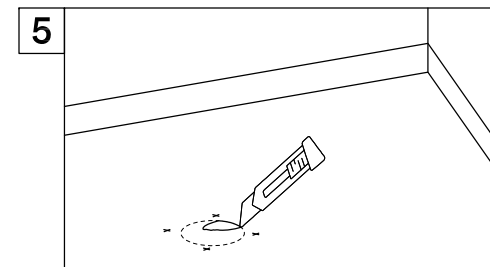


5. Using a utility knife cut an x at the location where the 4 bolts will be threaded and in the center of the drain, carefully cut off the excess pieces of liner from the center of the drain by running your knife along the inside diameter of the drain flange, re-thread all 4 bolts into the flange.

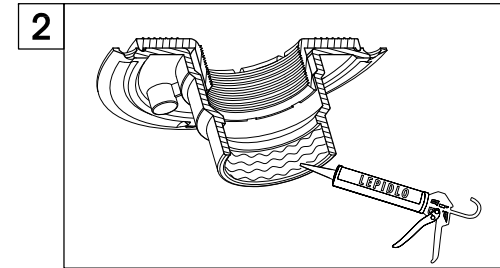

2. Evenly apply adhesive to the inside area where the flange will be connected to the drain.

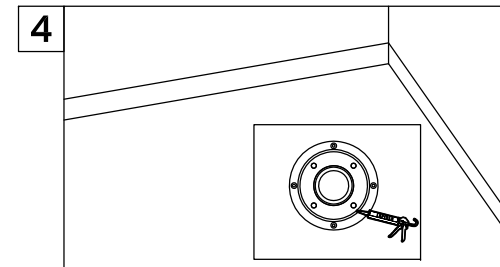

4. Prep the floor for a waterproof membrane using the appropriate methods and materials, apply adhesive to the grooved part of the flange and install membrane as per manufacturer's instructions.

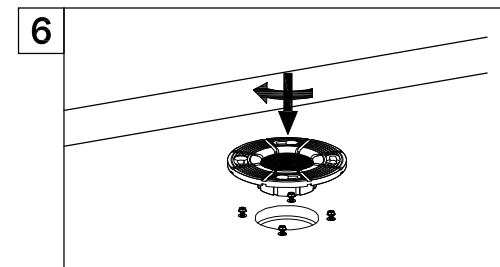


6. Insert and turn the clamping ring on the flange and tighten the bolts.

NOTICE


Failure to follow all directions may cause leaks which may result in water damage

www.kingstonbrass.com


TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

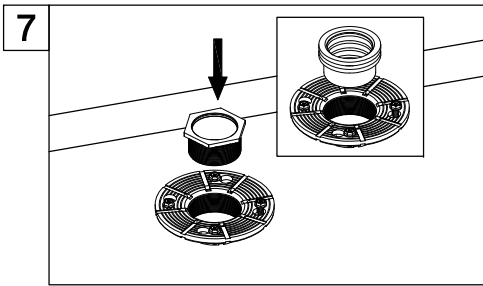


7. Connect the adapter and install on the flange (Hexagonal thread adapter and rubber adapter are optional).

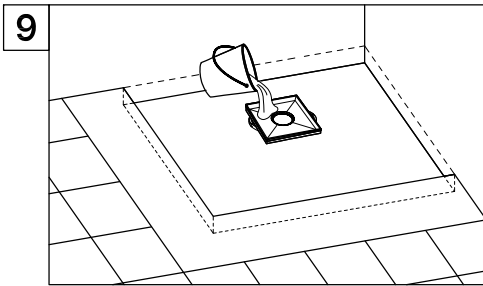


9. Test that all connections are watertight by pouring some water and checking for leaks.

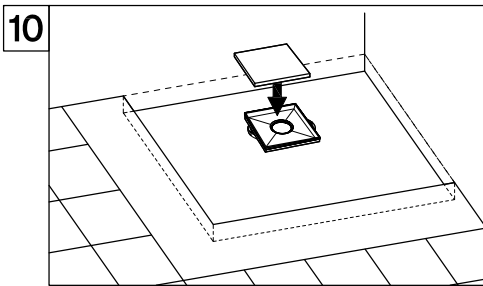


10. Cover the drain opening to prevent any debris from going into the drain.

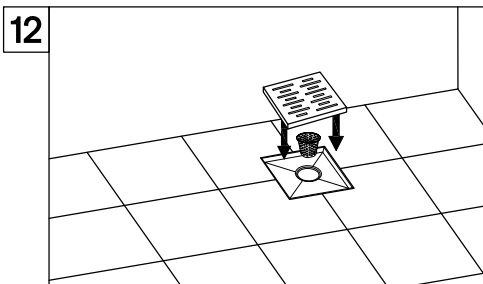

12. Install the trim pieces.

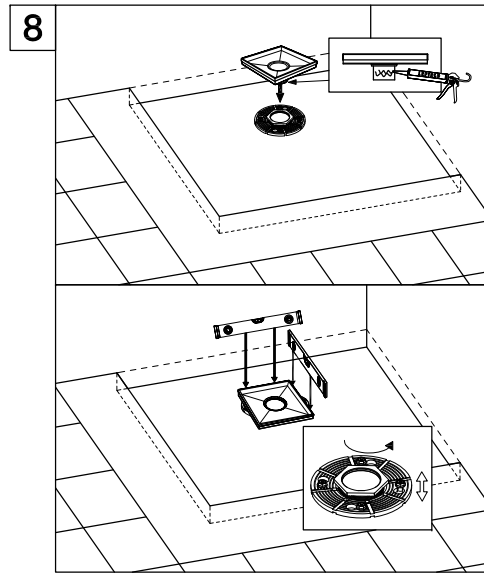

8. Apply adhesive to the outer surface of the drain housing connector and insert into the shower drain adapter, although the drain should be set at 1/6" below the finish floor level, you can do a final adjustment prior to installing the final flooring surface by inserting or pulling the adapter, or the adjusting feet of the shower drain, make sure to level the drain housing.

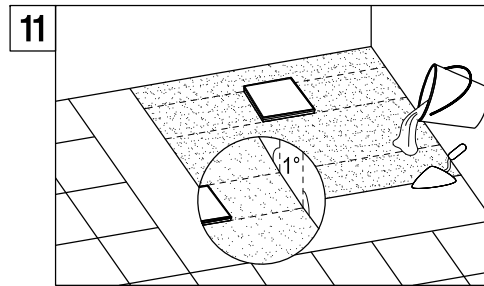

11. Pour the mortar and install the final flooring surface, make sure to slope the mortar at a 2% grade or 1/4" /ft.