



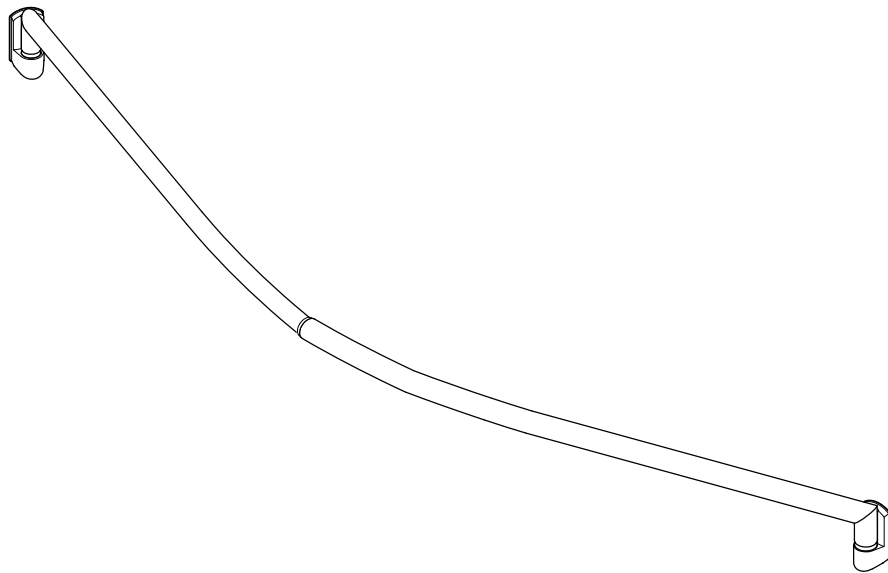

Curved Shower Curtain Rod Installation Instructions



Parts:

Mounting Screw & Anchor	Set Screw
	
4 Pcs	2 Pcs


www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

! CAUTION

Failure to follow all installation directions may cause product to detach from the wall and cause serious injury

Tools Required

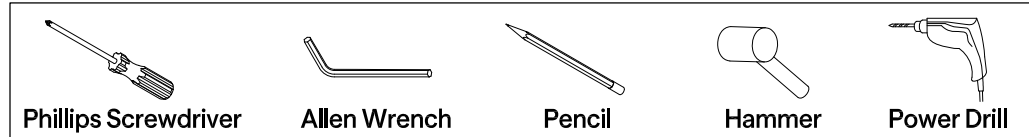

Before Installation:

1. This shower rod is only as good as how it is installed, it is recommended that this shower rod be attached to wood bracing, if no wood bracing available, select the appropriate anchors for your specific application.
2. The recommended height for placement of the Shower rod is 75" to 77".
3. This shower rod is designed to be installed on opposite walls or corner shower applications.

Installation Steps:

- Step 1. Place wall brackets at the desired location, please note, the right side bracket has a larger diameter opening for placement of the shower rod, mark the location of the holes, remove the wall brackets.
- Step 2. Drill holes for either the wood screws or anchors, if you are using anchors, insert anchors, secure brackets using the appropriate screws.
- Step 3. Assemble the shower rod by inserting the clear plastic inserts at the end of each section and insert the left side rod into the right side rod, adjust to size by sliding the left side in and out of the right side rod.
- Step 4. Insert shower rod ends into the wall brackets and press down, secure by tightening set screw.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.

©2025 LVC Kingston LLC. All Rights Reserved.
2025-05-T