
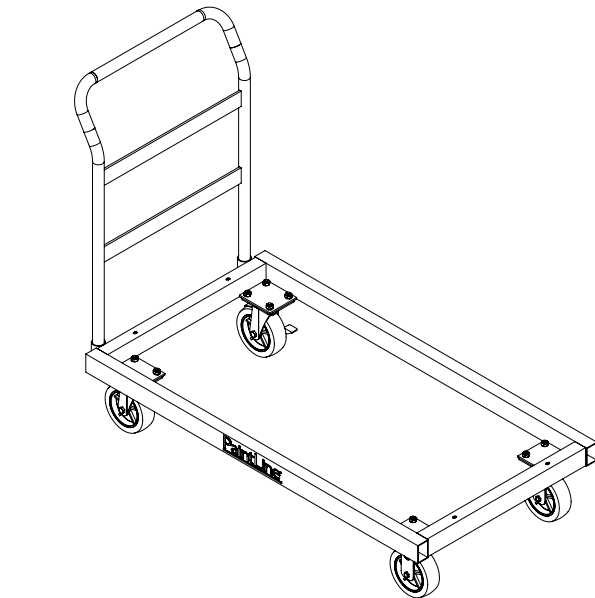



Parts List

A Handle	F M10 Lock Washer
B Base	G M10 Nut
C Caster	H M6 x 75mm Bolt
D Locking Caster	I M6 Lock Washer
E M10 x 25mm Bolt	J M6 Nut


Included Tools




A x1

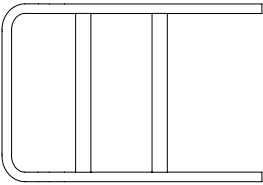


B x1

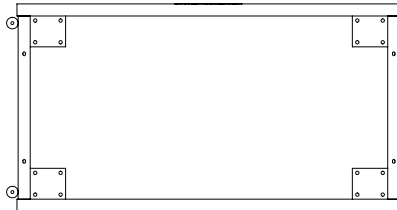


C x2

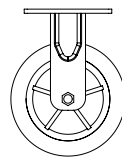


D x2

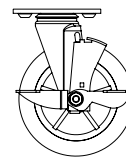


E x18



I x4



F x18




J x4




G x16



H x4

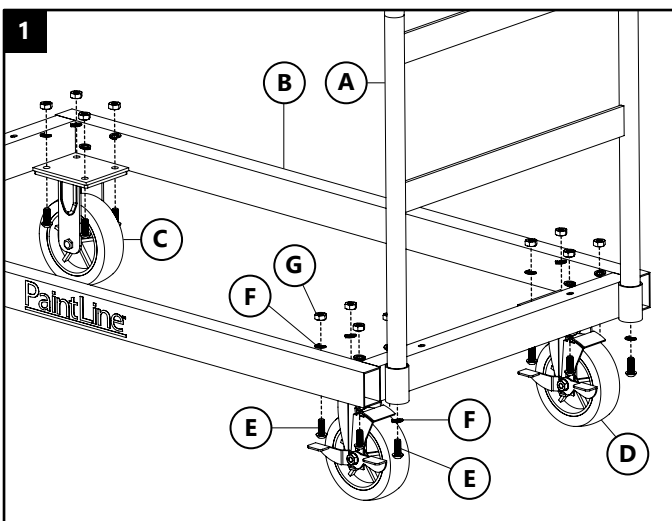

- Attach handle (A) to frame (B) using M10 bolts (E) and M10 lock washers (F). Bolt casters (C) and locking casters (D) to frame using bolts (E), lock washers (F), and M10 nuts (G).

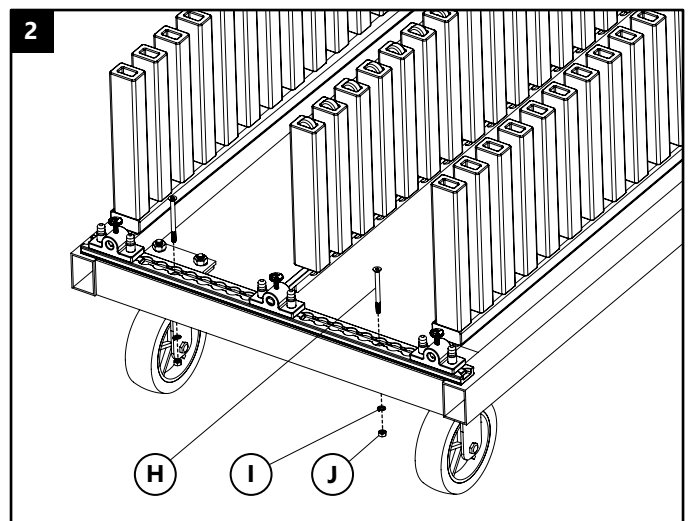

- Place ProDryingRack Transport (not included) on transport cart and align holes. Fasten using four M6 bolts (H), M6 lock washers (I), and M6 nuts (J).