
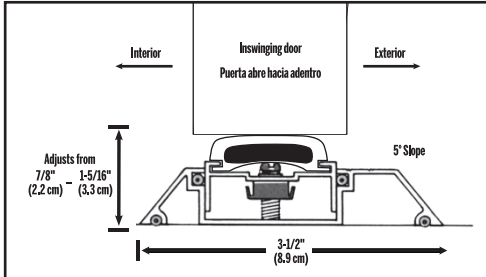


Tools Required:


Herramientas Requeridas:



INSTRUCTIONS:

1. With a hacksaw cut the threshold to the proper length.
Note: Existing threshold could be used as pattern. Care should be taken to make sure the floor mounting holes in the height adjustable channel and base threshold are in alignment when cutting to length.


2. Notch each end around door facing so the height adjustable channel of threshold will fit directly under the door.

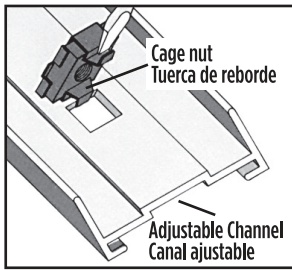

3. Insert cage nut flange into one side of square hole. Drop other flange down flat against aluminum insert. With screwdriver, push downward on flange and snap into hole.



4. Insert positive air seal strips as shown.

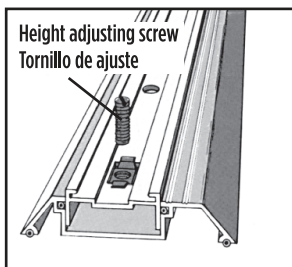

5. Install the four short adjustment screws into the height adjustable channel of the threshold (the section that fits directly under the door).

6. Raise channel section of threshold to desired height by turning adjusting screws. Leave 1/4" clearance between door and top of aluminum channel at each adjusting screw.

7. Install screws through holes in threshold into floor.

8. Cut vinyl insert strip to correct length and press into place.

INSTRUCCIONES:

1. Con una sega corte el sardinel al largo apropiado.
NOTA: El sardinel existente puede usarse como patrón. Se debe asegurar que los agujeros en el canal de altura ajustable y los agujeros en el sardinel estén alineados cuando se corte al largo deseado.
2. Marque cada punta alrededor de la parte frontal de la puerta para que el canal de altura ajustable del sardinel quede fijo directamente debajo de la puerta.
- 3) Inserte la pestaña de la tuerca enjaulada en un lado del agujero cuadrado. Deje caer otra pestaña hacia abajo de forma plana contra el inserto de aluminio. Con un destornillador, presione hacia abajo en la brida y coloque a presión en el agujero.
- 4) Inserte bandas de sello de aire positivo como se ilustra.
- 5) Instale los cuatro tornillos cortos de ajuste en el canal de alto ajustable del umbral (la sección que encaja directamente debajo de la puerta).
6. Alce la sección del canal del sardinel a la altura deseada haciendo girar los tornillos ajustables. Deje 6.35mm de espacio libre entre la puerta y la parte superior del canal de aluminio en cada tornillo ajustable.
7. Instale los tornillos a través de los agujeros en el sardinel al piso.
8. Corte la tira de vinilo al largo correcto y presione en su sitio.



QUESTIONS? | PREGUNTAS?
800.654.8454
MDBUILDINGPRODUCTS.COM

