

Instruction Manual


- Polycarbonate sheets installation steps

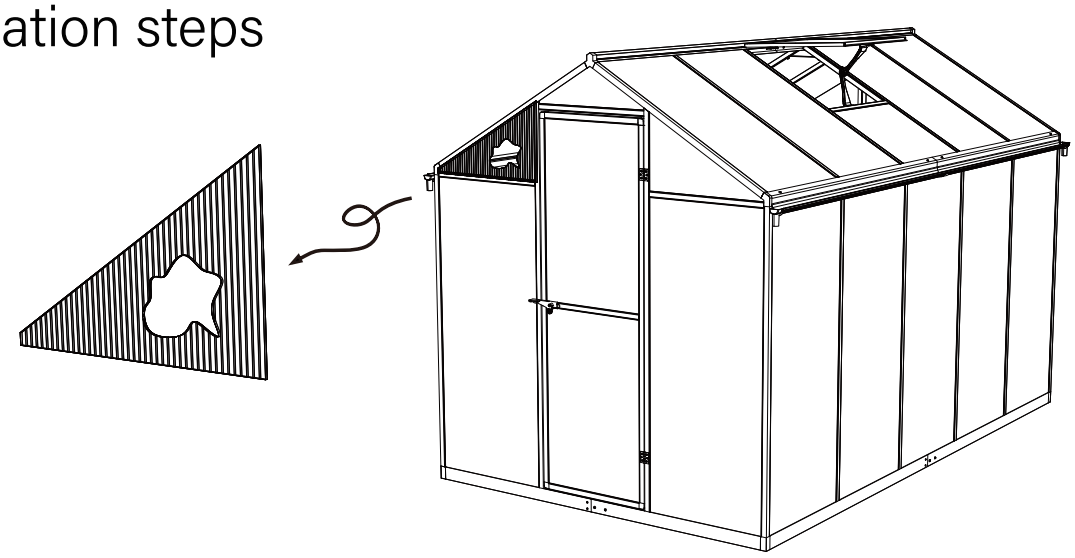

❶ Disassemble the original damaged polycarbonate sheets.

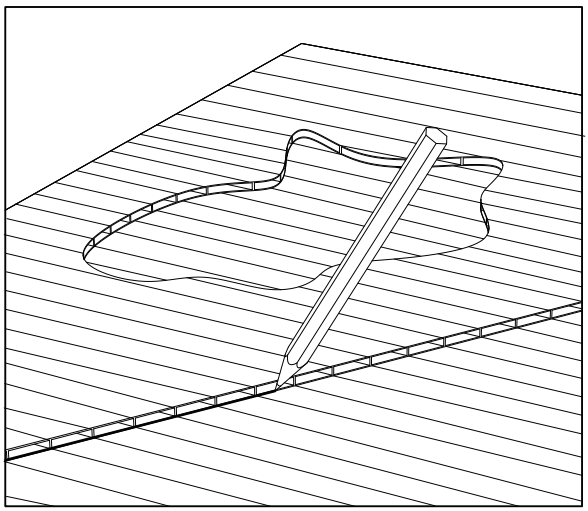

❷ Place the original damaged polycarbonate sheets over the new polycarbonate sheets and mark along the edge with a pencil.

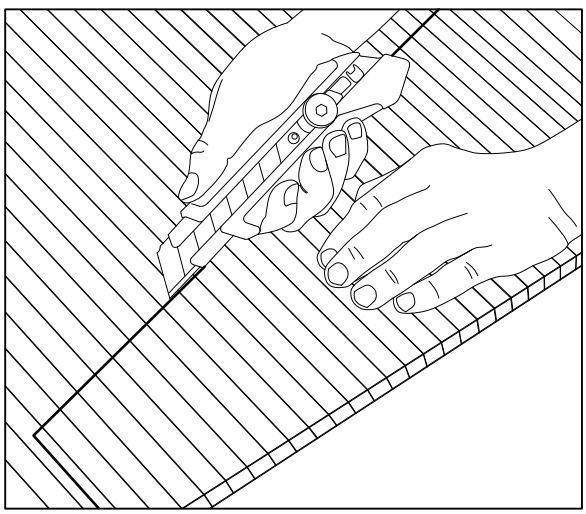


❸ Then use a utility knife or circular saw to cut along the line.


Save this manual for future reference

- The solar panel needs to be replaced under the following conditions:

  - hail damaged
  - damage
  - long-term use weathering

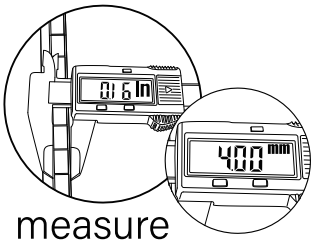


measure

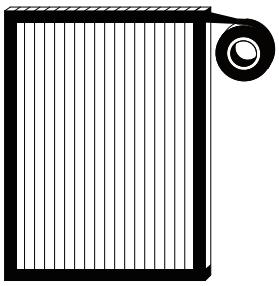


- Preparation before replacement


❶ First remove the damaged polycarbonate sheets which need to be replaced.Compare the size between damaged and new polycarbonate sheet.


❷ Note that the direction of the cutting ploycarbonate sheets should be consistent with the original board.

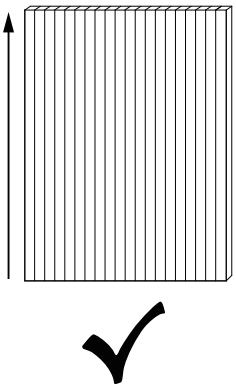

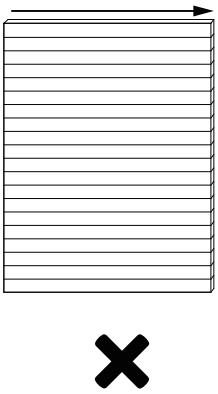

❸ Ploycarbonate sheets can easily be cut with Utility Knife and Saber Saw or manual tools depending on the length of the cutt , the width of the panel , and the type of cut.

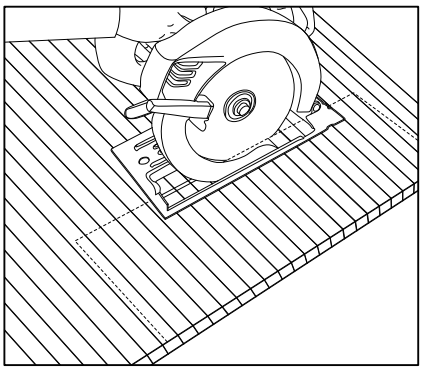

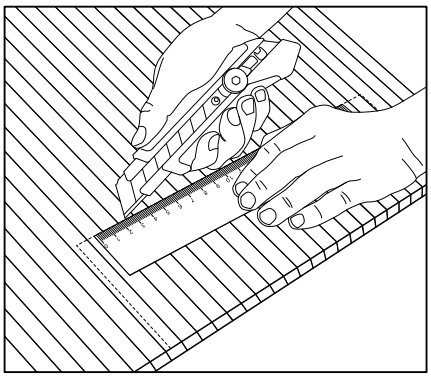

Please don't hesitate to contact us for any further questions, your satisfaction is guaranteed.