


Champion Power Equipment, Inc., Santa Fe Springs, CA USA

MODEL #100416

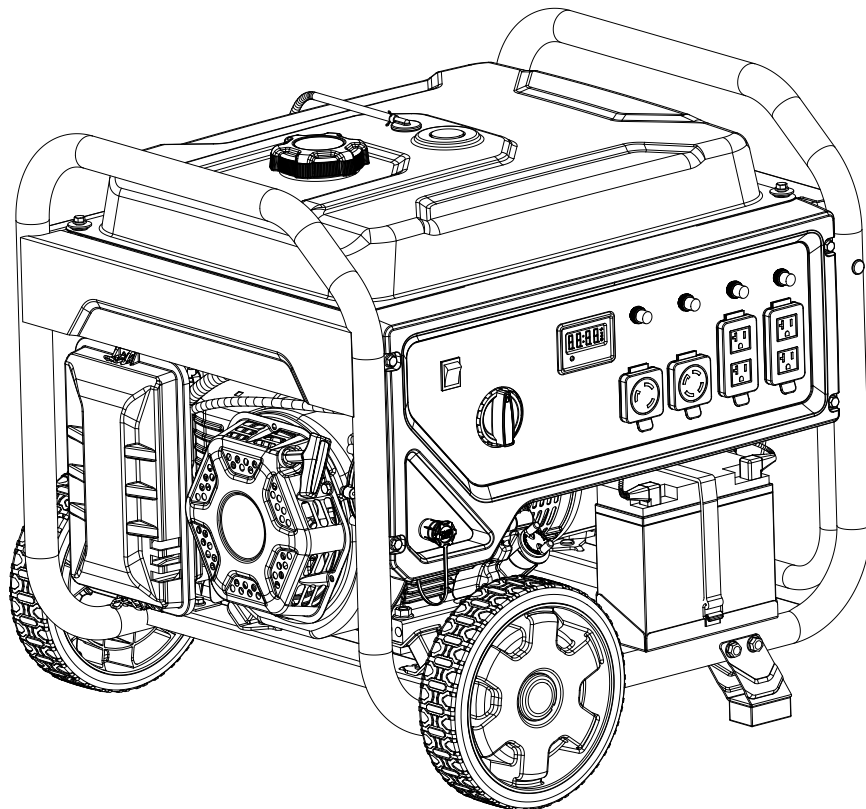

PARTS INFORMATION

8000W TRI-FUEL PORTABLE GENERATOR

SERIAL NUMBER RANGE: Y2203170000+



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram..... 3

Generator Parts List 4

Engine Parts Diagram 6

Engine Parts List 7

Cylinder Head Parts Diagram 9

Cylinder Head Parts List 10

Alternator Parts Diagram 11

Alternator Parts List 12

Fuel Tank Parts Diagram 13

Fuel Tank Parts List..... 14

Control Panel Parts Diagram 15

Control Panel Parts List 16

Frame Parts Diagram 17

Frame Parts List 18

Wiring Diagram 19

GENERATOR PARTS DIAGRAM

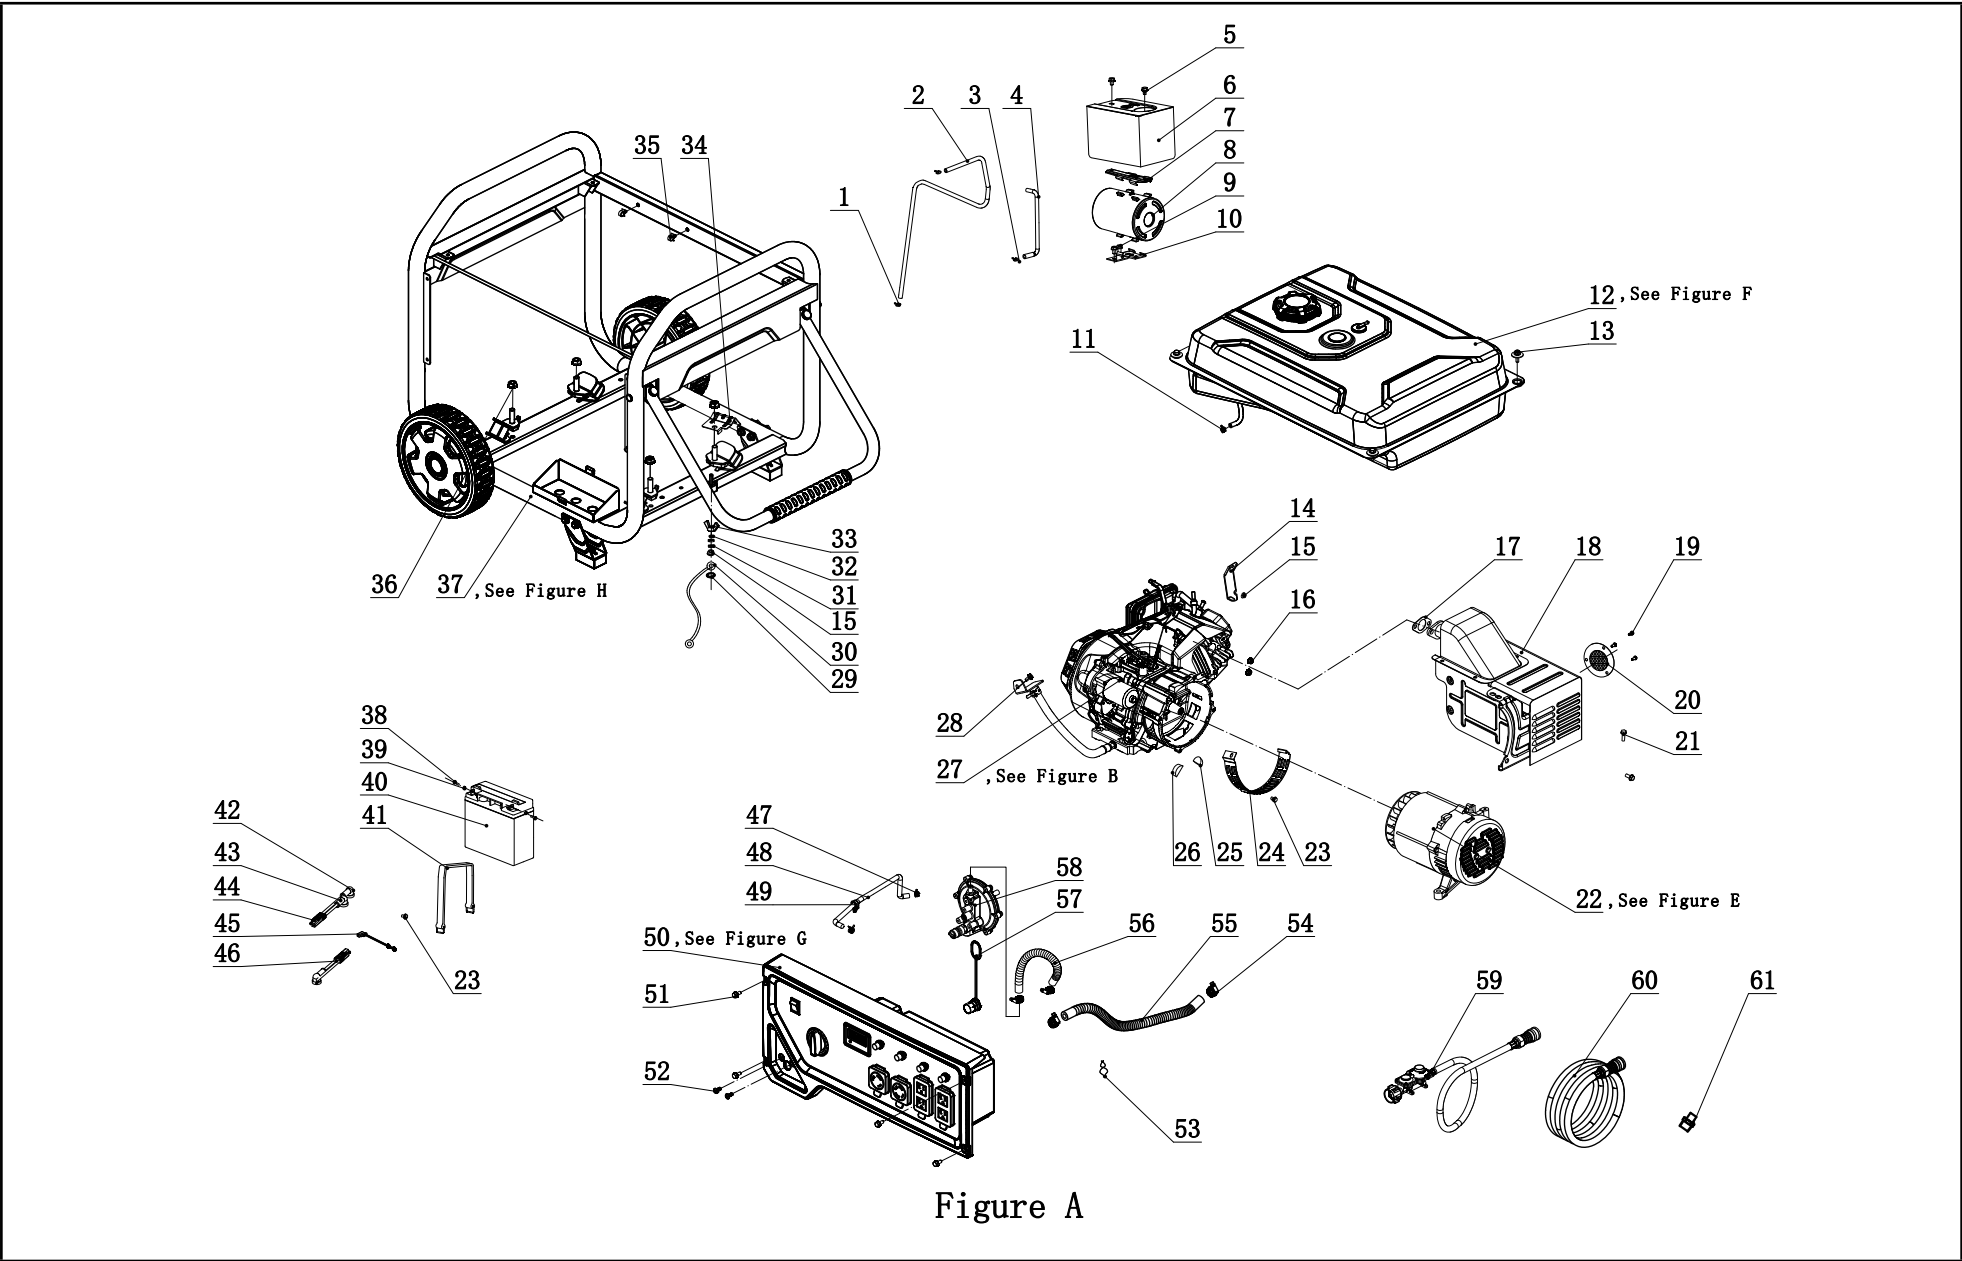


Figure A


GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	2.06.006	Clamp, Ø7 x Ø1	2
2	122.070014.01	Pipe, Reversal Valve	1
3	2.06.004	Clamp, Ø8 x Ø1	1
4	152.070013.03	Pipe, Air Cleaner, 135 mm	1
5	1.5789.0608.1	Flange Bolt M6 x 8, Black	2
6	152.070018.03	Heat Shield, Carbon Canister	1
7	152.070702.06	Bracket, Carbon Canister Heat Shield	1
8	152.070700.04	Carbon Canister, 750cc	1
9	1.16674.0812	Flange Bolt M8 x 12	2
10	152.070702.05	Bracket, Carbon Canister Mounting	1
11	2.06.007	Clamp Ø8.7 x b8	2
12	152.070000.60.48	Fuel Tank, 32L, Yellow See Figure F	1
13	2.08.143.1	Flange Bolt/Washer Assembly M6 x 20, Black	4
14	45.090006.20	Bracket, Air Cleaner Support	1
15	1.6177.1.06	Lock Nut M6, Flange	2
16	1.6177.1.08	Lock Nut M8, Flange	2
17	46.100001.07	Gasket, Exhaust	1
18	46.101000.01.2	Muffler Assembly	1
19	1.9074.4.0510	Screw/Washer Assembly M5 x 10	3
20	46.101300.00	Spark Arrester	1
21	1.16674.0820	Flange Bolt M8 x 20	2
22	153.190000.33	Alternator, See Figure E	1
23	1.5789.0608	Flange Bolt M6 x 8	2
24	152.192300.01	Vent, Alternator Fan	1
25	152.190005.00	Rubber, Fore-Cover, A	1
26	152.190005.01	Rubber, Fore-Cover, B	1
27	48.695	Engine, 459cc, See Figure B	1
28	1.5789.0612	Flange Bolt M6x12	1
29	1.862.06	Lock Washer Ø6, Toothed	1
30	5.1900.076	Grounding Line 150 mm	1

#	Part Number	Description	Qty.
31	1.97.1.06.2	Washer Ø6	2
32	1.93.06	Lock Washer Ø6	1
33	1.62.06	Butterfly Type Nut M6	1
34	152.100007.00	Heat Shield, Motor Mount	1
35	2.05.001	Clamp, Ø8 x 6.5	2
36	1.6177.1.10	Lock Nut M10, Flange	4
37	65300.100416	Frame, See Figure H	1
38	1.9074.3.0510	Screw/Washer Assembly M5 x 10	2
39	1.6177.1.05	Lock Nut M5, Flange	2
40	9.1000.150	Battery 12V15AH	1
41	152.200904.00	Strap, Battery Holding	1
42	152.200013.02	Jacket, Wire, Black	1
43	152.200013.02.3	Jacket, Wire, Red	2
44	5.1900.127	Wire Harness, Battery SAE	1
45	152.200013.03	Sleeve, Connector	1
46	5.1900.129	Wire Harness, Motor SAE	1
47	2.06.016	Clamp Ø8.8xb8	1
48	152.070011.31	Fuel Tube, Fuel Valve to Carburetor, 410+25mm	1
49	2.05.009	Clamp Ø12.5 x 7	1
50	100416-1.21	Control Panel Assembly, See Figure G	1

#	Part Number	Description	Qty.
51	1.5789.0615.1	Flange Bolt M6 x 15, Black	4
52	1.818.0614.1	Bolt M6 x 14	2
53	2.06.050	Clamp, Ø8 x Ø18	1
54	2.06.023	Clip Ø20	4
55	152.070012.22	Hose 420mm	1
56	152.070012.20	Hose 230mm	1
57	9.1500.006	Sleeve, Connector	1
58	47.136000.06	Regulator	1
59	152.070012.19	LPG Hose With Regulator 6.56 ft.	1
60	152.070012.23	Hose Assembly, Natural Gas, 1/2 in. x 25 ft.	1
61	152.250501.00	Fitting, Adapter, 1/2" 37° Male Flare x 1/2" Male NPT	1

ENGINE PARTS DIAGRAM

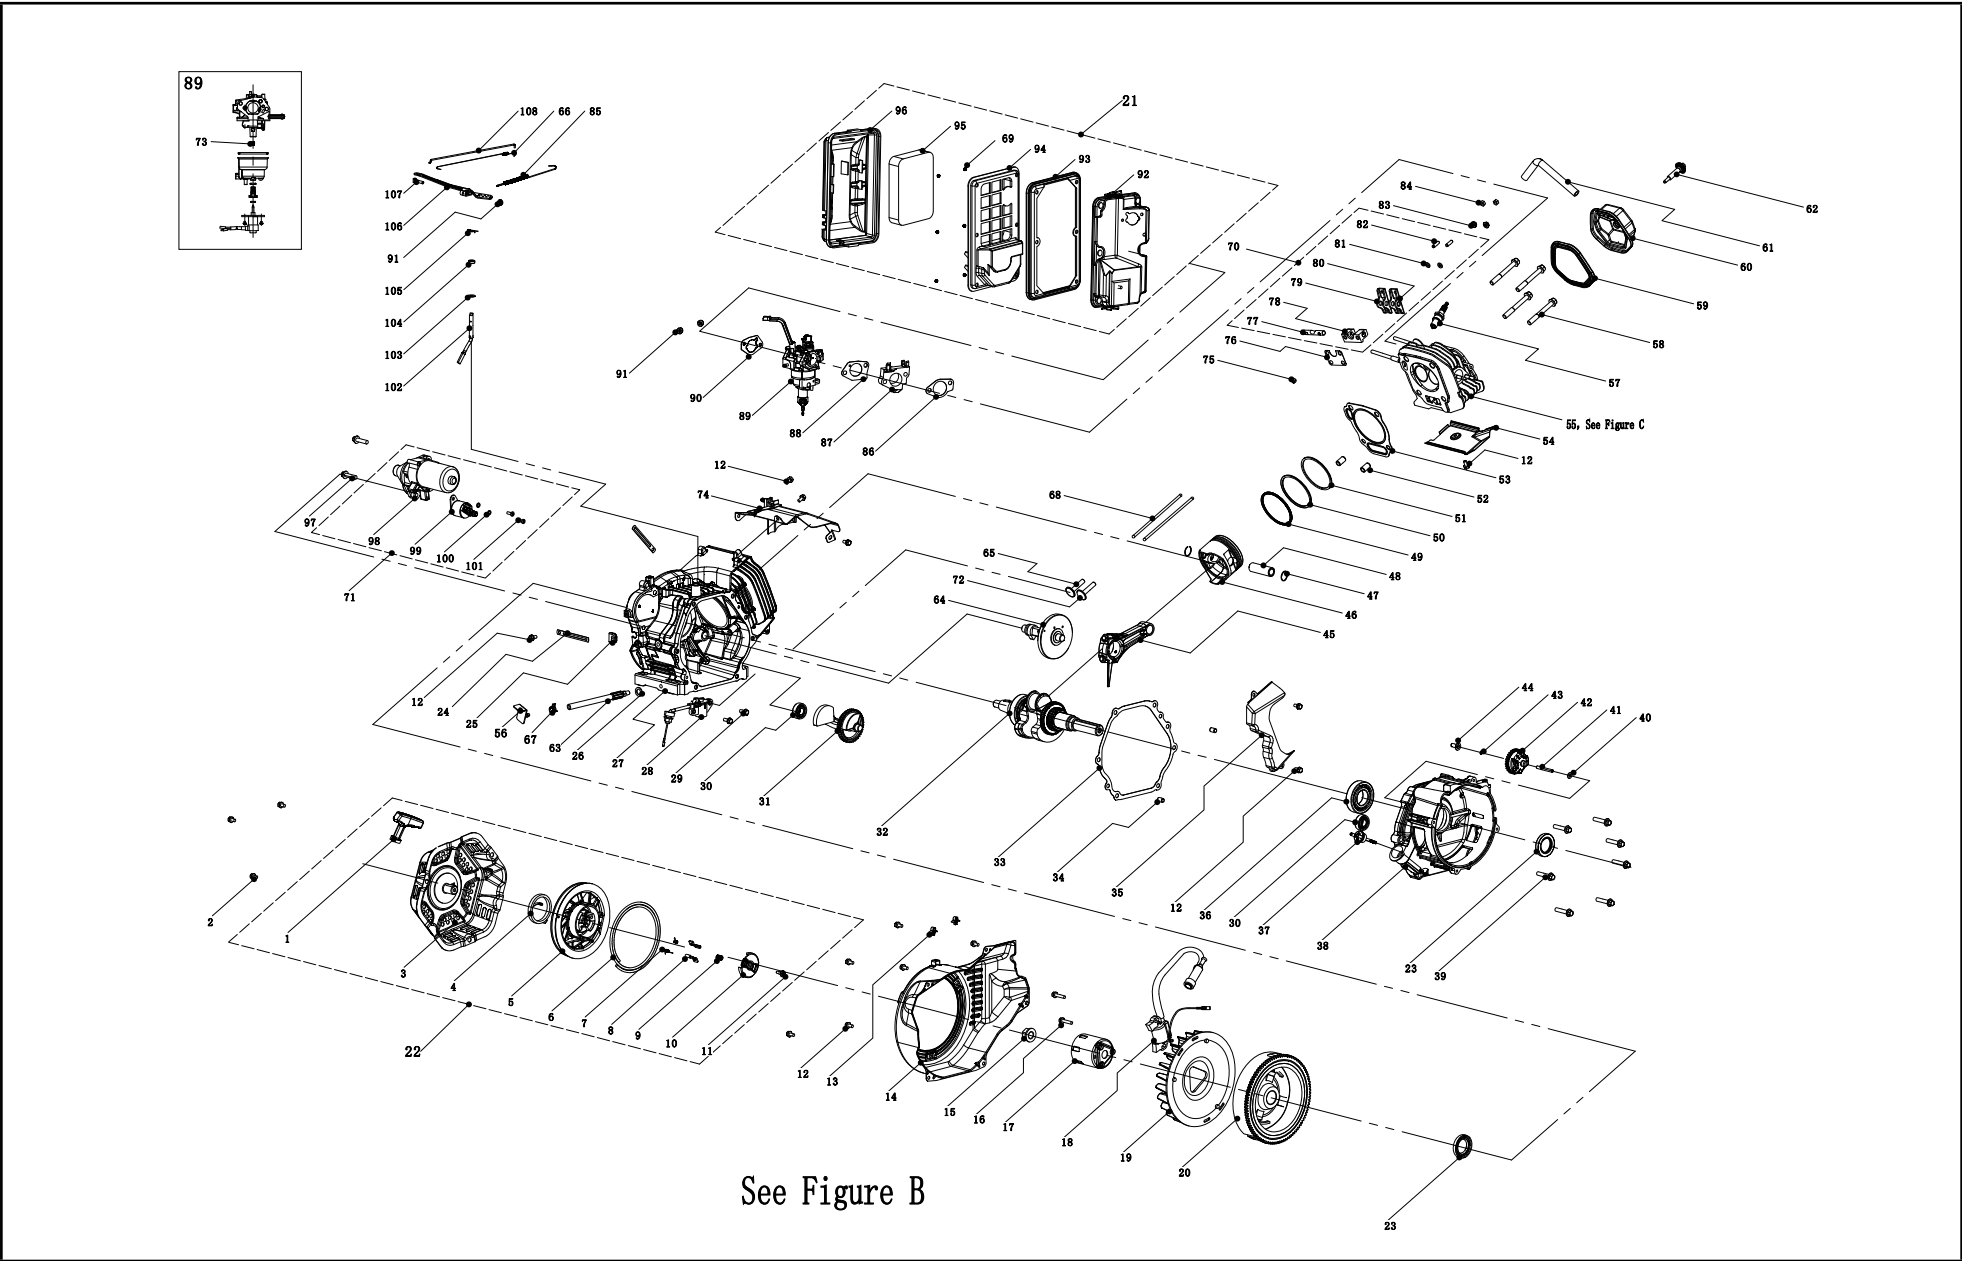

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	21.061300.01.48	Handle, Recoil, Soft, Yellow	1
2	1.16674.0608	Flange Bolt M6 x 8	3
3	46.061100.03.2	Cover, Recoil Starter, Black	1
4	45.060005.00	Spring, Recoil Starter	1
5	45.061102.00	Reel, Recoil Starter	1
6	2.10.003.1	Rope Ø4 x 1550, Black	1
7	45.060003.00	Spring, Ratchet	2
8	45.060002.00	Starter Ratchet, Steel	2
9	45.060009.00	Spring, Ratchet Guide	1
10	45.060007.00	Ratchet Guide	1
11	45.060008.00	Screw, Ratchet Guide	1
12	1.5789.0612	Flange Bolt M6 x 12	12
13	2.05.009	Clamp Ø12.5 x 7	2
14	47.080100.01.48	Fan Cover, Yellow	1
15	2.02.007	Nut M16 x 1.5	1
16	1.5789.0629	Flange Bolt M6 x 29	2
17	45.060001.00	Pulley, Starter	1
18	46.123000.07	Ignition Coil	1
19	48.080001.00	Cooling Fan	1
20	46.120100.05	Flywheel	1
21	46.091000.11	Air Cleaner Assembly	1
22	46.061000.03	Recoil Assembly	1
23	2.11.007	Oil Seal Ø35 x Ø52 x 8	2
24	2.05.050	Wire Clip 100 mm	2
25	152.070031.01	Sheath, Wire	1
26	2.03.023	Washer Ø12.5 x Ø20 x 2 , Drain Bolt	1
27	48.030100.00	Crankcase	1
28	45.127000.02	Oil Level Sensor	1
29	1.5789.0615	Flange Bolt M6 x 15	2
30	1.276.6202	Bearing 6202	2

#	Part Number	Description	Qty.
31	48.050006.00	Weight Balancer	1
32	47.050100.01	Crankshaft Assembly	1
33	46.030008.00	Gasket, Crankcase Cover	1
34	2.04.001	Dowel Pin Ø9 x 14	2
35	46.080600.00	Air Guide, Right Side	1
36	1.276.6207	Bearing 6207	1
37	46.031000.01.48	Oil Dipstick Assembly, Yellow	1
38	45.030007.00	Cover, Crankcase	1
39	1.5789.0840	Flange Bolt M8 x 40	7
40	2.03.021.1	Washer Ø6.4 x Ø13 x 1, Black	1
41	45.110013.00	Shaft, Governor Gear	1
42	45.110100.00	Gear, Governor	1
43	21.110011.00	Clip, Governor Gear	1
44	45.110012.00	Bushing, Governor Gear, Steel	1
45	47.050200.00	Connecting Rod Assembly	1
46	48.050005.00	Piston	1
47	2.09.004	Circlip Ø21 x Ø1	2
48	45.050003.00	Pin, Piston	1
49	48.050303.00	Ring, Oil	1
50	48.050302.00	Ring, Second Piston	1
51	48.050301.00	Ring, First Piston	1
52	2.04.004	Dowel Pin Ø12 x 20	2
53	48.030009.00	Gasket, Cylinder Head	1
54	46.080400.00	Air Guide, Lower	1
55	47.010000.01	Cylinder Head Assembly, See Figure C	1
56	45.030200.00	Support	1
57	2.15.008	Spark Plug F7RTC	1
58	2.08.122	Flange Bolt M10 x 95	4
59	46.020002.00	Gasket, Cylinder Head Cover	1
60	47.021000.00	Cover, Cylinder Head	1

#	Part Number	Description	Qty.
61	45.020001.02	Breather Tube	1
62	47.020100.00	Bolt, Cylinder Head Cover	1
63	45.032000.00	Hose, Oil Drain	1
64	48.041000.00	Camshaft	1
65	48.040013.00	Lifter, Intake Valve	1
66	45.110005.00	Spring, Throttle Return	1
67	2.06.013	Clamp Ø13.5 x b10	1
68	46.040005.00	Push Rod	2
69	1.6177.1	Flange Nut M5	6
70	46.040200.00	Rocker Arm Assembly	1
71	45.125000.03	Starter Motor Assembly	1
72	45.040013.00	Lifter, Exhaust Valve	1
73	48.131017.01	Standard Main Jet	1
	48.131017.01.01	Altitude Main Jet	/
74	46.080300.20	Air Guide, Upper	1
75	45.040008.00	Rotator, Exhaust Valve	1
76	46.040004.00	Guide Plate, Push Rod	1
77	46.040016.00	Shaft, Rocker Arm	1
78	46.040201.00	Retainer, Rocker Arm	1
79	46.040009.00	Rocker Arm, Intake Valve	1
80	46.040018.00	Rocker Arm, Exhaust Valve	1
81	1.97.1.06	Washer Ø6	2
82	22.040012.00	Screw, Valve Adjustment	2
83	1.6177.1.06	Flange Nut M6	2
84	21.040021.00	Nut M6 x 0.5, Lock	2
85	45.110007.01	Spring, Governor	1
86	46.130002.20	Gasket, Insulator	1
87	45.130001.00	Insulator, Carburetor	1
88	46.130003.20	Gasket, Carburetor	1
89	48.131000.23	Carburetor	1
90	46.130004.20	Gasket, Air Cleaner	1
91	1.6177.06	Flange Nut M6	3

#	Part Number	Description	Qty.
92	46.091100.09	Base, Air Cleaner	1
93	45.091002.20	Seal, Air Cleaner	1
94	45.091001.20	Separator, Air Cleaner	1
95	45.091003.20	Element, Air Cleaner	1
96	46.091200.11	Cover, Air Cleaner	1
97	1.5789.0835	Flange Bolt M8 x 35	2
98	45.125100.00	Starter Motor	1
99	45.125200.03	Relay, Starter	1
100	1.93.05	Lock Washer Ø5	2
101	1.16674.0516	Flange Bolt M5 x 16	2
102	45.110001.00	Shaft, Governor Arm	1
103	2.03.019	Washer Ø8.2 x Ø17 x 0.8	1
104	2.11.006	Oil Seal Ø7 x Ø14 x 5	1
105	45.110008.00	Pin, Shaft	1
106	45.110003.01	Arm, Governor	1
107	2.08.040	Bolt M6 x 21, Governor Arm	1
108	45.110006.00	Rod, Governor	1

CYLINDER HEAD PARTS DIAGRAM

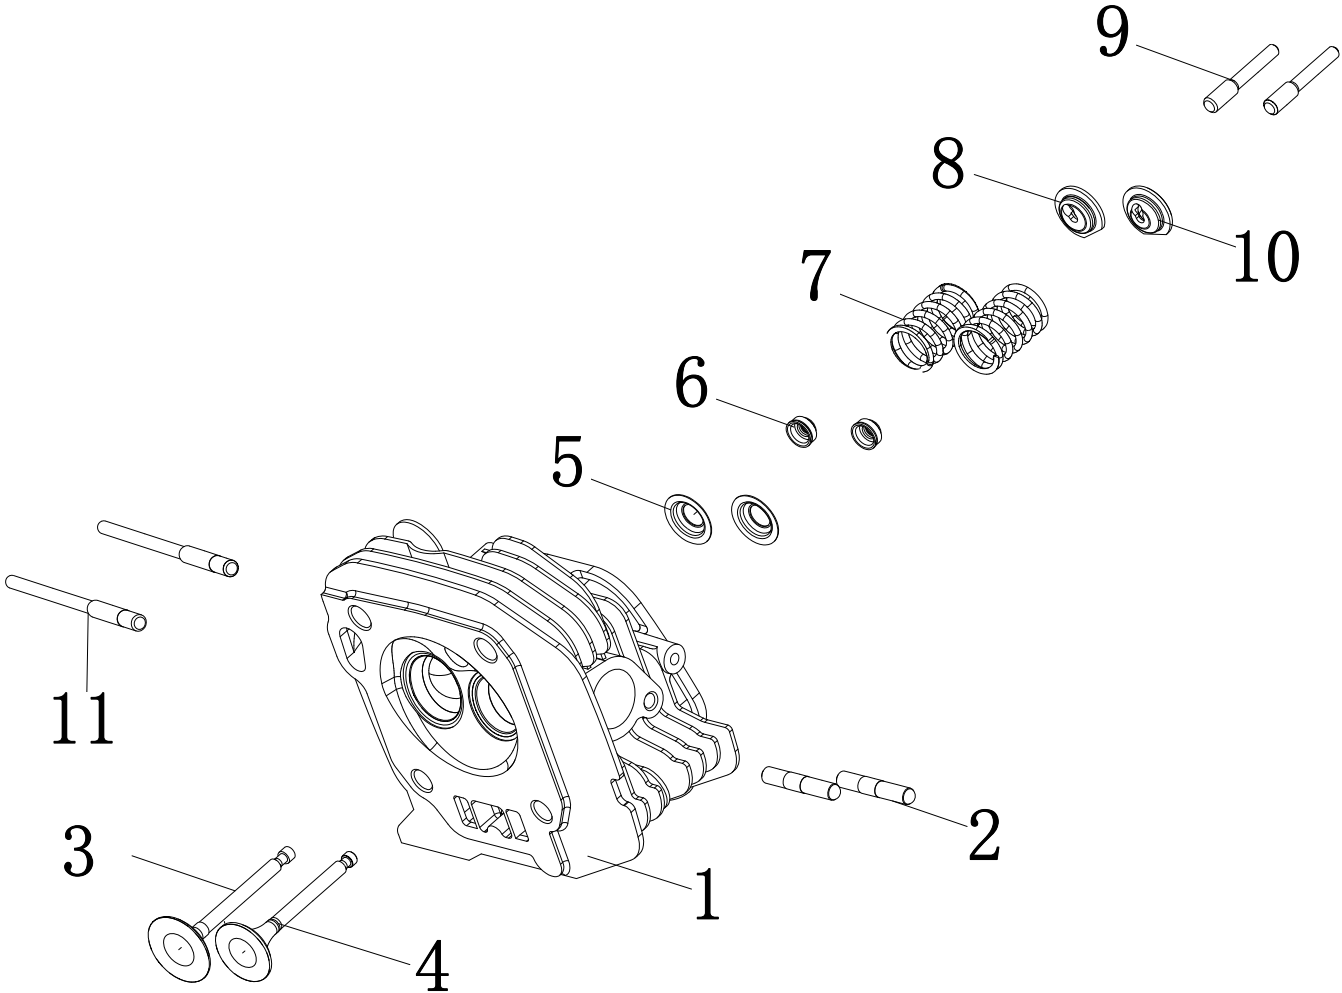


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	47.010100.01	Cylinder Head	1
2	2.01.010	Stud Bolt M8 x 35	2
3	47.040002.00	Valve, Intake	1
4	47.040006.00	Valve, Exhaust	1
5	45.040015.00	Retainer, Valve Spring	2
6	45.040017.00	Oil Seal, Valve	2
7	45.040003.00	Spring, Valve	2
8	45.040001.00	Retainer, Intake Valve Spring	1
9	23.040010.00	Bolt, Rocker Arm	2
10	45.040007.00	Retainer, Exhaust Valve Spring	1
11	2.01.008	Stud Bolt M6 x M8 x 105	2

ALTERNATOR PARTS DIAGRAM

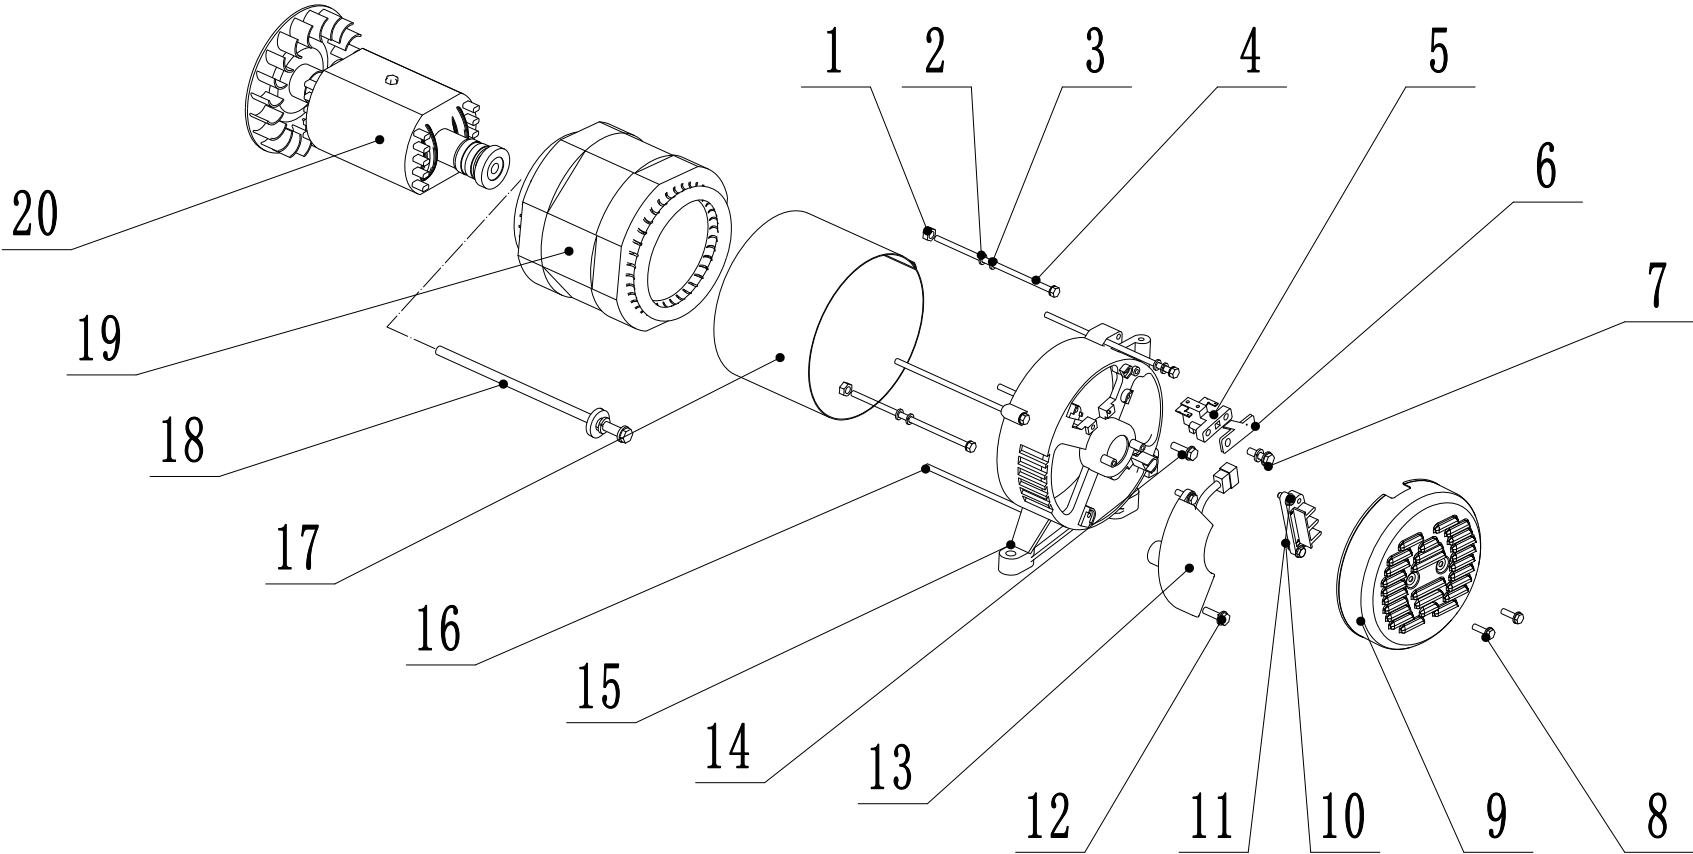


Figure E

ALTERNATOR PARTS LIST

#	Part Number	Description	Qty.
1	1.6175.05	Nut M5	2
2	1.97.1.05	Washer Ø5	2
3	1.93.05	Lock Washer Ø5	2
4	2.08.071	Bolt M5 x 229	2
5	152.190300.00	Carbon Brush Assembly	1
6	122.190004.01	Bracket, Carbon Brush Holder	1
7	1.9074.15.0520	Bolt/Washer Assembly M5 x 20	1
8	1.16674.0512.1	Flange Bolt M5 x 12, Black	2
9	152.190003.00.48	Cover, End Housing, Yellow	1
10	1.9074.17.0516	Screw/Washer Assembly M5 x 16	2
11	122.190400.00	Terminal Block	1
12	1.16674.0516	Flange Bolt M5 x 16	2
13	153.190200.03	AVR	1
14	1.16674.0512	Flange Bolt M5 x 12	1
15	152.190002.00	End Housing	1
16	2.08.069	Flange Bolt/Washer Assembly M6 x 194	4
17	154.191002.00	Stator Cover	1
18	2.08.070	Flange Bolt/Washer Assembly M10 x 280	1
19	153.191200.33	Stator Assembly, Al, Ø190 x 158 mm, DC 12V	1
20	153.191100.18	Rotor Assembly, Al, Ø190 x 158 mm, DC 12V	1

FUEL TANK PARTS DIAGRAM

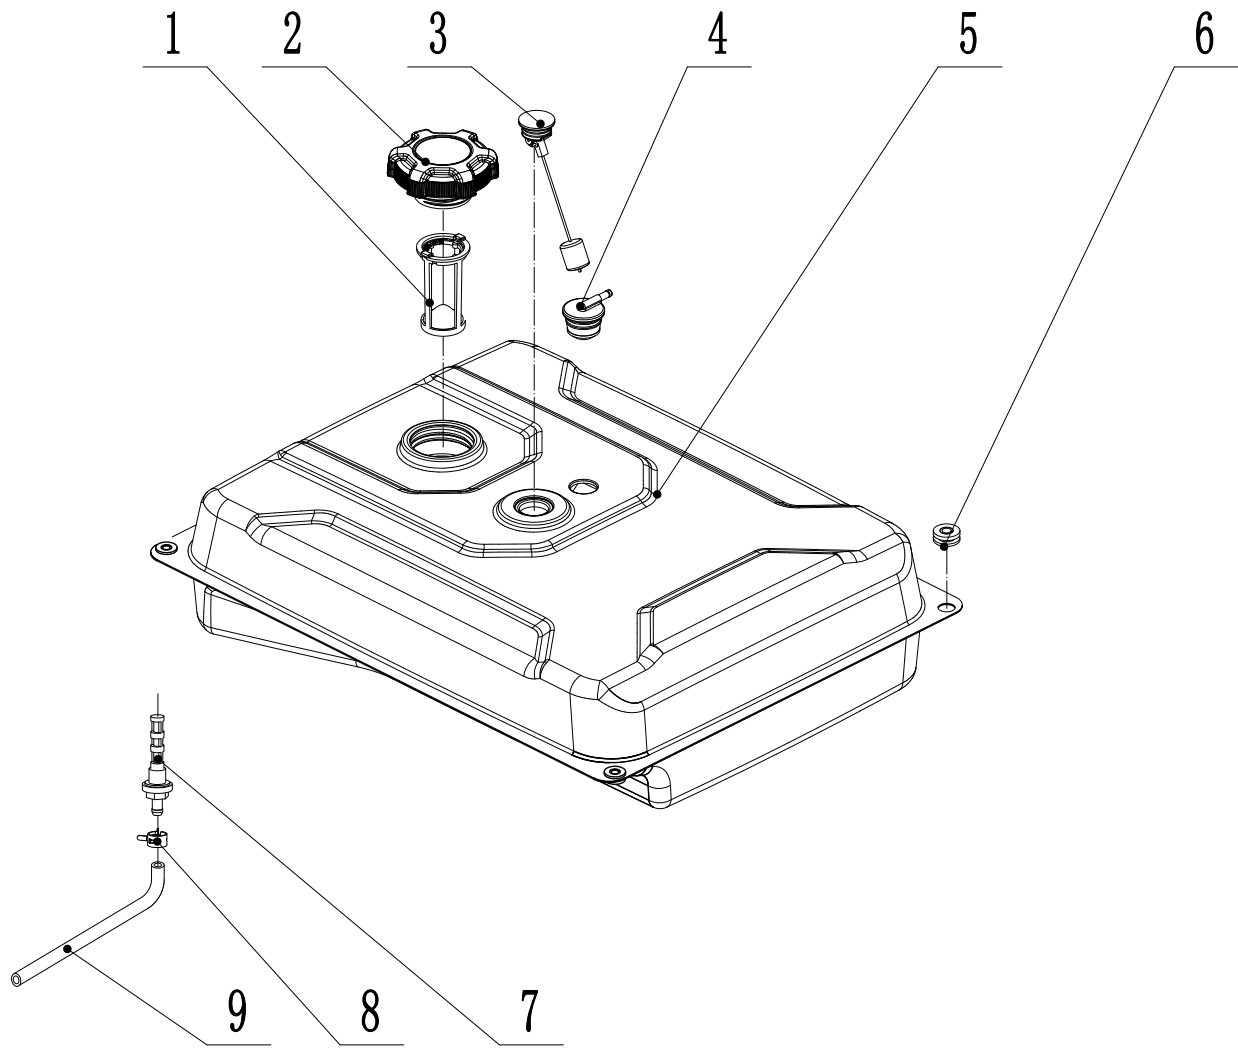


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	122.070300.03	Fuel Filter	1
2	122.070100.09	Fuel Tank Cap	1
3	152.072000.06	Fuel Gauge	1
4	24.070800.00	Reversal Valve	1
5	152.071000.60.48	Fuel Tank, 32L, Yellow	1
6	122.070015.01	Mount Vibration, Fuel Tank	4
7	21.070600.03	Fitting, Fuel Filter	1
8	2.06.016	Clamp Ø8.7 x b8	1
9	122.070011.15	Fuel Pipe 180+25 mm, Fuel Tank to Fuel Valve	1

CONTROL PANEL PARTS DIAGRAM

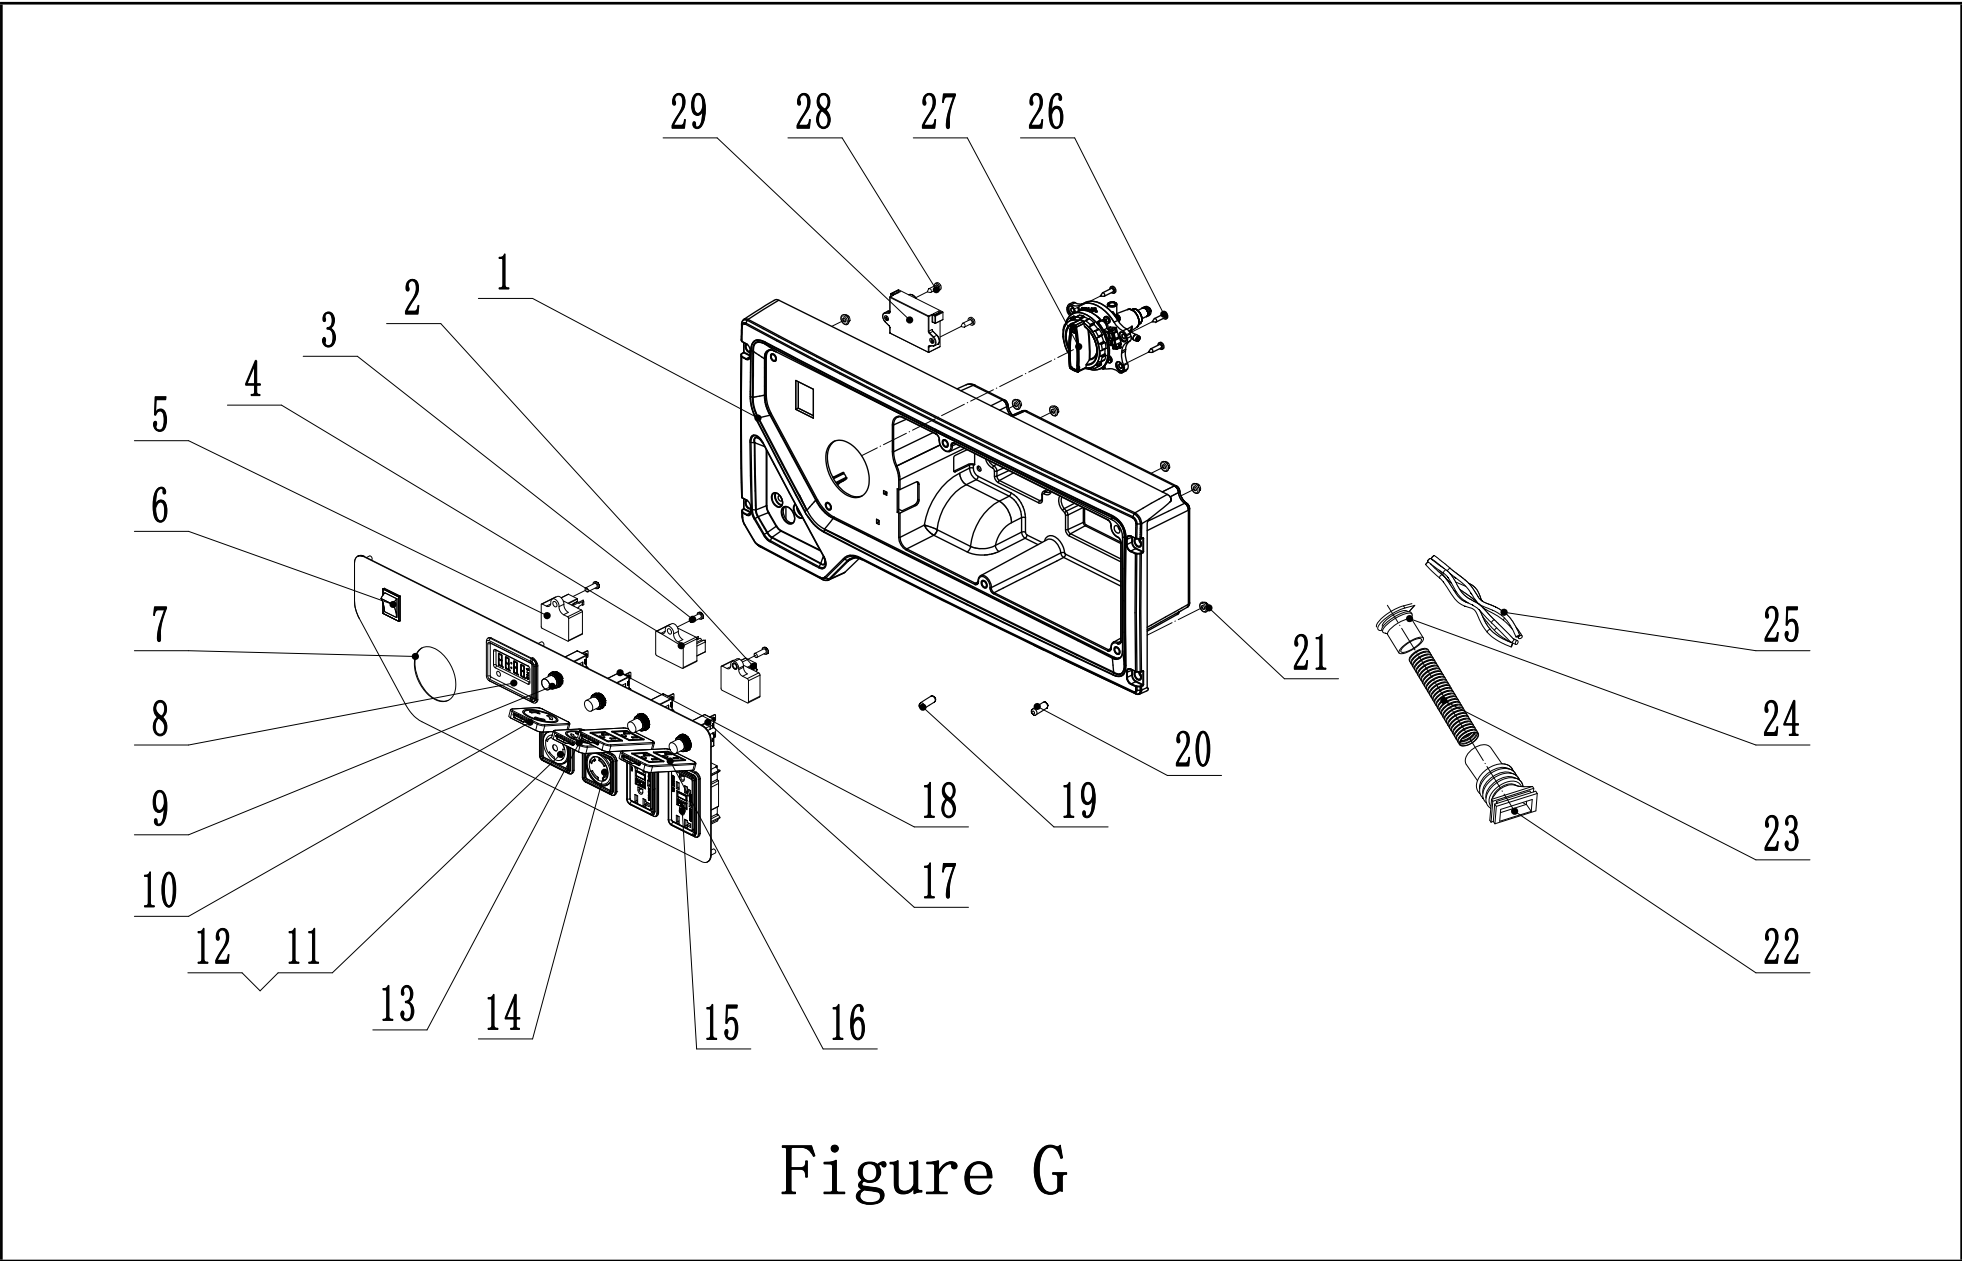


Figure G

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	152.210002.66	Control Box	1
2	5.1800.006	Rectifier	1
3	1.818.0514.2	Screw M5 x 14	3
4	5.1810.004	VFO Diode, CSA	1
5	5.1820.009	Charger Module	1
6	5.1000.005.3	Ignition Switch, Red	1
7	152.289.2.2	Control Panel	1
8	5.1470.000	Intelligauge, INT1AOF	1
9	5.1870.014	Circuit Breaker Cover, Push Button	4
10	5.1870.023	Cover, L5-30R Receptacle	1
11	5.1120.008	Receptacle L5-30R	1
12	1.6177.1.04.1	Lock Nut M4, Flange, Black	8
13	5.1870.020	Receptacle L14-30R	1
14	5.1120.009	Cover, Receptacle L14-30R	1
15	5.1120.050	Receptacle 5-20R, Duplex GFCI	2
16	5.1870.022	Cover, Receptacle 5-20R, Duplex GFCI	2
17	5.1210.920	20A Circuit Breaker, Push Button, CSA	2

#	Part Number	Description	Qty.
18	5.1210.930	30A Circuit Breaker, Push Button, CSA	2
19	5.1280.003	Fuse, 10A	1
20	5.1280.008	Fuse, 5A	1
21	1.6177.1.05	Lock Nut M5, Flange, Black	6
22	152.210003.02	Rubber Gromet, Control Box	1
23	5.1330.116	Sheath, Wire Harness	1
24	122.210003.01	Rubber Gromet, Control Box	1
25	100416-1.21.10	Wire Harness Assembly	1
26	1.845.4816	Screw, ST4.8 x 16	4
27	152.139000.03	Fuel Select Dial	1
28	1.845.4216	Screw, ST4.2 x 16	2
29	5.1830.022	CO Module	1

FRAME PARTS DIAGRAM

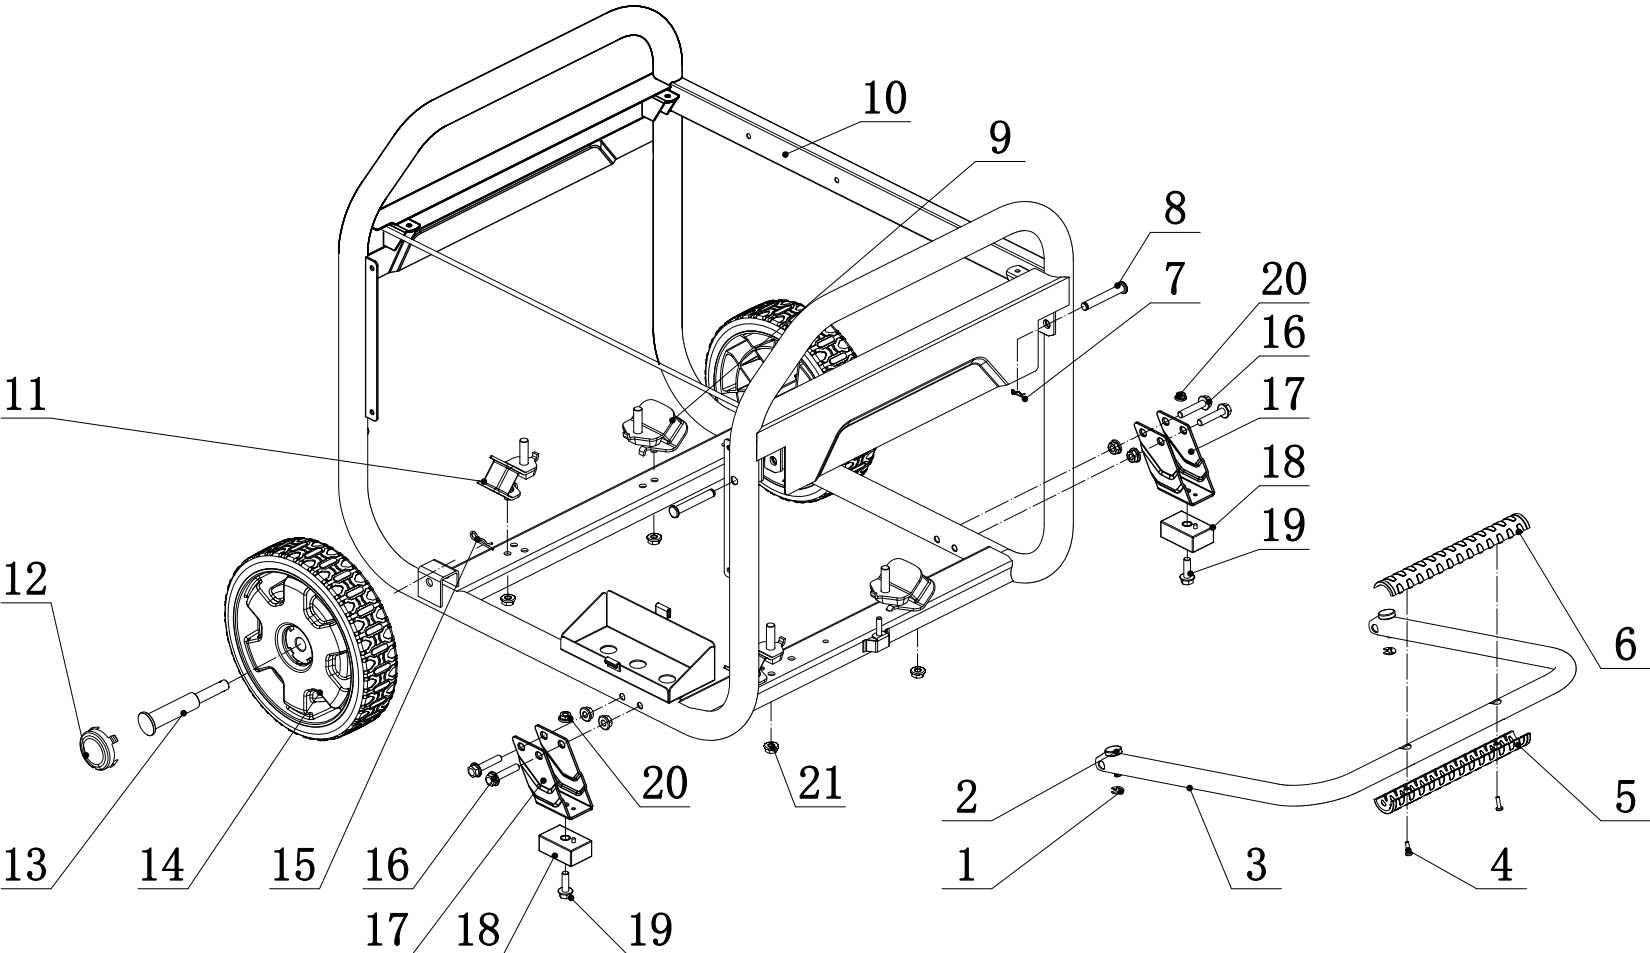


Figure H

FRAME PARTS LIST

#	Part Number	Description	Qty.
1	1.894.1.08	Circlip Ø8	2
2	152.200703.02	Short Pin, Handle	2
3	152.200701.22	Handle, U Shape	1
4	1.818.0414.1	Screw M4 x 14, Black	2
5	122.200702.13	Handle Cover, Upper	1
6	122.200702.14	Handle Cover, Lower	1
7	11.110008.00	"R" Shape	2
8	152.200703.02	Short Pin, Handle	2
9	152.201200.04	Motor Mount 2	2
10	65300.0.10.2	Frame, 700 x 576 x 585mm	1
11	152.201200.03	Motor Mount 1	2
12	122.201702.11.48	Wheel Cover, Tooth Profile 8-10 in, Yellow	2
13	122.201501.23.1	Pin Roll, Wheel, Ø16 x Ø10 x 97, Black	2
14	152.201701.13.48	9.5 in. Wheel, PU, Yellow	2
15	2.16.001.1	Pin Ø2 x 33, "R" Shape, Black	2
16	1.5789.0850.1	Flange Bolt M8 x 50, Black	4
17	152.200002.18.2	Support Leg, 78 mm, Black	2
18	122.201400.04	Rubber, Foot	2
19	1.5789.0825.1	Flange Bolt M8 x 25, Black	2
20	1.6177.1.08.1	Lock Nut M8, Flange, Black	6
21	1.6177.1.08	Lock Nut M8, Flange	4

WIRING DIAGRAM

