



MicromagTM

PATENT PENDING

Ultimate Filtration Technology

CORRECT METHOD FOR DISMANTLING, CLEANING AND REBUILDING THE MICROMAG

Removal and refitting of the Micromag bowl must be done using the following procedure.



1 The bowl spanner can be used for the initial release of the bowl




2 Undo the bowl anti-clockwise



3 Allow the bowl to drain



4 Remove the bowl leaving the lid and core

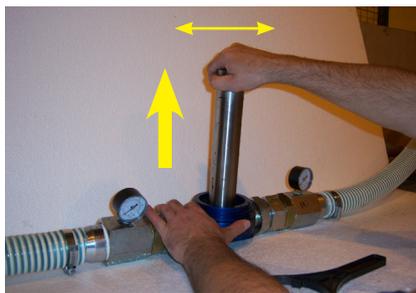

5 Remove the core




6 Clean the core



7 Clean the mating faces and the magnet mount



8 Check and clean the seal on the bowl

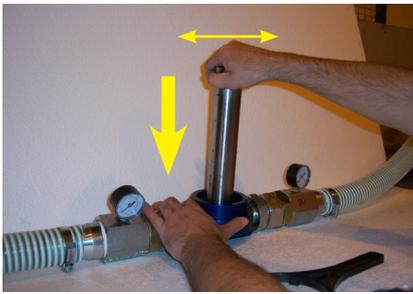

9 Replace the core




10 Replace the bowl

11 Tighten the bowl correctly and check for leaks

Do NOT over tighten

Do NOT use the spanner for tightening the bowl

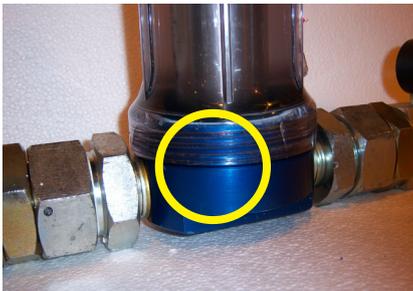

12 Final check for leaks

