RIB® Functional Devices, Inc.™

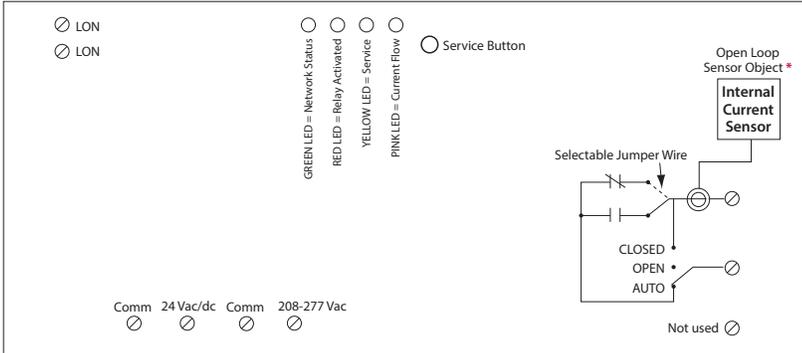(800) 888-5538   sales@functionaldevices.com   www.functionaldevices.com

NETWORK COMPATIBLE RELAY / CURRENT SENSOR COMBO

RIBMNWX2402SB-LN

2.75″ Track Mount LonWorks® Twisted-Pair FT-10 Network Dual I/O Device; One Binary Output (20 Amp Relay SPST + Override); One Binary Input (Current Sensor 0.25 - 20 Amp, Relay Load Sensing), 24 Vac/dc or 208-277 Vac Power Input

c UL us LISTED

LONMARK® 3.4

CE

RoHS

MADE IN THE U.S.A.

LON
LON

GREEN LED = Network Status
RED LED = Relay Activated
YELLOW LED = Service
PINK LED = Current Flow

Service Button

Open Loop Sensor Object *

Internal Current Sensor

Selectable Jumper Wire

CLOSED
OPEN
AUTO

Not used

Comm   24 Vac/dc   Comm   208-277 Vac

SPECIFICATIONS

# Relays & Contact Type:	One (1) SPST Continuous Duty Coil
Expected Relay Life:	10 million cycles minimum mechanical
Operating Temperature:	-30 to 140° F
Humidity Range:	5 to 95% (noncondensing)
Operate Time:	18ms
Green LED:	Network Status
Red LED:	Relay Status
Yellow LED:	Service Status
Dimensions:	6.00″ x 2.75″ x 1.75″
Track Mount:	MT212-6 Mounting Track Provided
Approvals:	FCC, LonMark®, CE, RoHS UL Listed, UL916, C-UL
Gold Flash:	No
Override Switch:	Yes
Channel:	TP/FT-10
Transceiver Type:	FT5000 Smart Transceiver
Functional Blocks:	0000 Node Object
	0004 Closed Loop Actuator Object
	0001 Open Loop Sensor Object
Downloadable Files:	PDF, XIF, APB, VSS and NXE available on website.

Contact Ratings:
20 Amp Resistive @ 277 Vac
20 Amp Ballast @ 120/277 Vac (N/O)
10 Amp Ballast @ 120/277 Vac (N/C)
Not rated for Electronic Ballast
10 Amp Tungsten @ 120 Vac (N/O)
1110 VA Pilot Duty @ 277 Vac
770 VA Pilot Duty @ 120 Vac
2 HP @ 277 Vac
1 HP @ 120 Vac

Power Input Ratings:
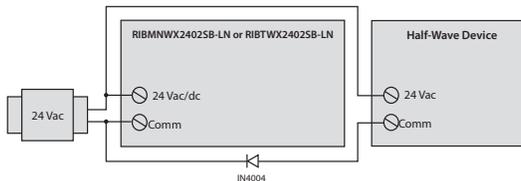105 mA @ 24 Vac
78 mA @ 24 Vdc
120 mA @ 208-277 Vac

Current Sensor Range:
0.25 - 20 Amps
Threshold fixed at .25 Amps.

Notes:
• Normally Open or Normally Closed selected by yellow jumper wire.
• When connecting 24 Vac to both the RIB(s) and a half-wave device, damage to device can occur. Option 1: Use separate transformers for each device. Option 2: Add diode between devices, see Option 2 note below. ^^

DESCRIPTION	SNVT NAME	SNVT TYPE
Command to open/close relay	nvi Value	SNVT_switch
Command status of relay	nvo Value Fb	SNVT_switch
Default state of relay on/off	nci Default	SNVT_switch
Communication timer	nci Max Receive T	SNVT_elapsed_tm
Status of Binary Input	nvo Value	SNVT_switch
Invert status of Binary Input	nci Invert	SNVT_lev_disc
Max time between updates	nci Max Send T	SNVT_elapsed_tm
Min time between updates	nci Min Send T	SNVT_elapsed_tm

The relay will go to the default state when the communication timer times out. Setting the timer value to zero will cause the communication to never time out.

It is recommended to put a value in nci Max Send T to ensure the RIB re-synchronizes itself on the network after power loss. It is the responsibility of the user to ensure this value does not cause conflicts in network traffic. (No value = No "heartbeat" updates / no re-sychronization; Low Value = Many updates but may cause many traffic collisions; High value = Few updates but many less collisions.)

RIBMNWX2402SB-LN or RIBTWX2402SB-LN   **Half-Wave Device**

24 Vac
24 Vac/dc   24 Vac
Comm   Comm

IN4004

^^ Option 2: Add diode on 24 Vac power (Comm) interconnection between devices. Band on diode faces towards RIB(s).

Node Object

NV1 nvi Request   NV2 nvo Status

Closed Loop Actuator
(Binary Output)

NV1 nvi Value   NV2 nvo Value Fb

nci Default
nci Max Receive T

* Open Loop Sensor Object
(Binary Input)

NV1 nvo Value

nci Invert
nci Max Send T
nci Min Send T