

The Unix Beyond Solar Wall Light is a high-efficiency, solar-powered fixture crafted in a sleek and compact design, perfect for both decorative and functional applications. Featuring advanced PIR motion sensing and a durable build, it's ideal for lighting up Exterior Walls, Corridors, Staircases, Balconies, Courtyards, and various other low-height areas.

Specifications

Lumens..... 2000LM

Solar Panel

Power Monocrystalline silicon, 4.86V/ 2.2W

Li-ion battery

Capacity 3.7V 14.8WH

Charging / Discharging Temp 0~113 °F/ -4~140 °F

Charging Time 8.9H

LED 2835, 38pcs

CCT 4000K, Ra>70

Efficiency 160lm/W

Types of Lighting Anti-glare

Performance

Lighting Time in Rainy day >10 days

Core Technology ALS2.3

PIR 120°, 5m.Max

IP Class IP54

Material ABS

Dimensions

Product Size 9.1*4.5 In

Weight /

Model Number.....AVS-Lunix-53
SKU 790118



Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.

FROSTED LAMPSHADE. ANTI-GLARE.

Designed to emit light from all sides, this fixture offers a wide and even lighting range for maximum coverage.



PIR: 120° 5m.Max

Highlight when people come, and light down when people go.



Lighting Mode

M1: 10% + PIR 60S till dawn / M2: 0% + PIR 60S till dawn
M3: 30% Timed 6Hrs / M4: 100% Timed 2Hrs



Control Mode

Button Switch, ON/OFF Long Press 1.5s

Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.

Ideal for lighting up Exterior Walls, Corridors, Staircases, Balconies, Courtyards, and various other low-height areas.



Solar Charging Efficiency: >21%



PIR: 120°, 5m.Max




High lumen LEDs 160lm/W




Bracket

Optical Figure


Road Simulated Diagram

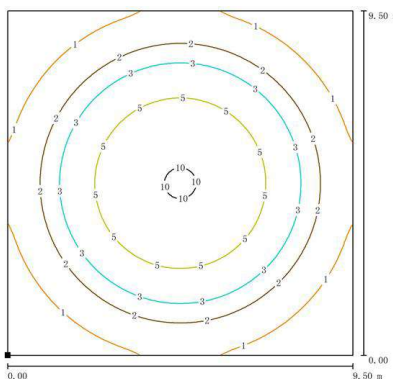

Illumination Curve

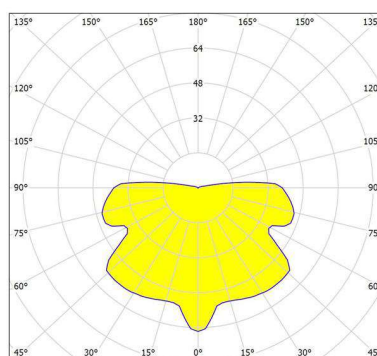


Luminance Distribution

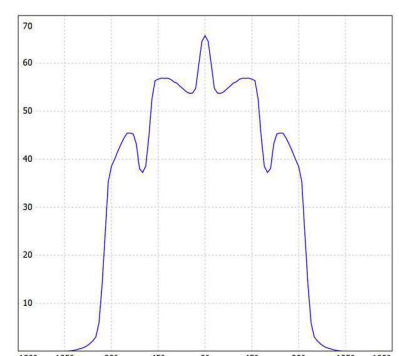

Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.

Dimensions

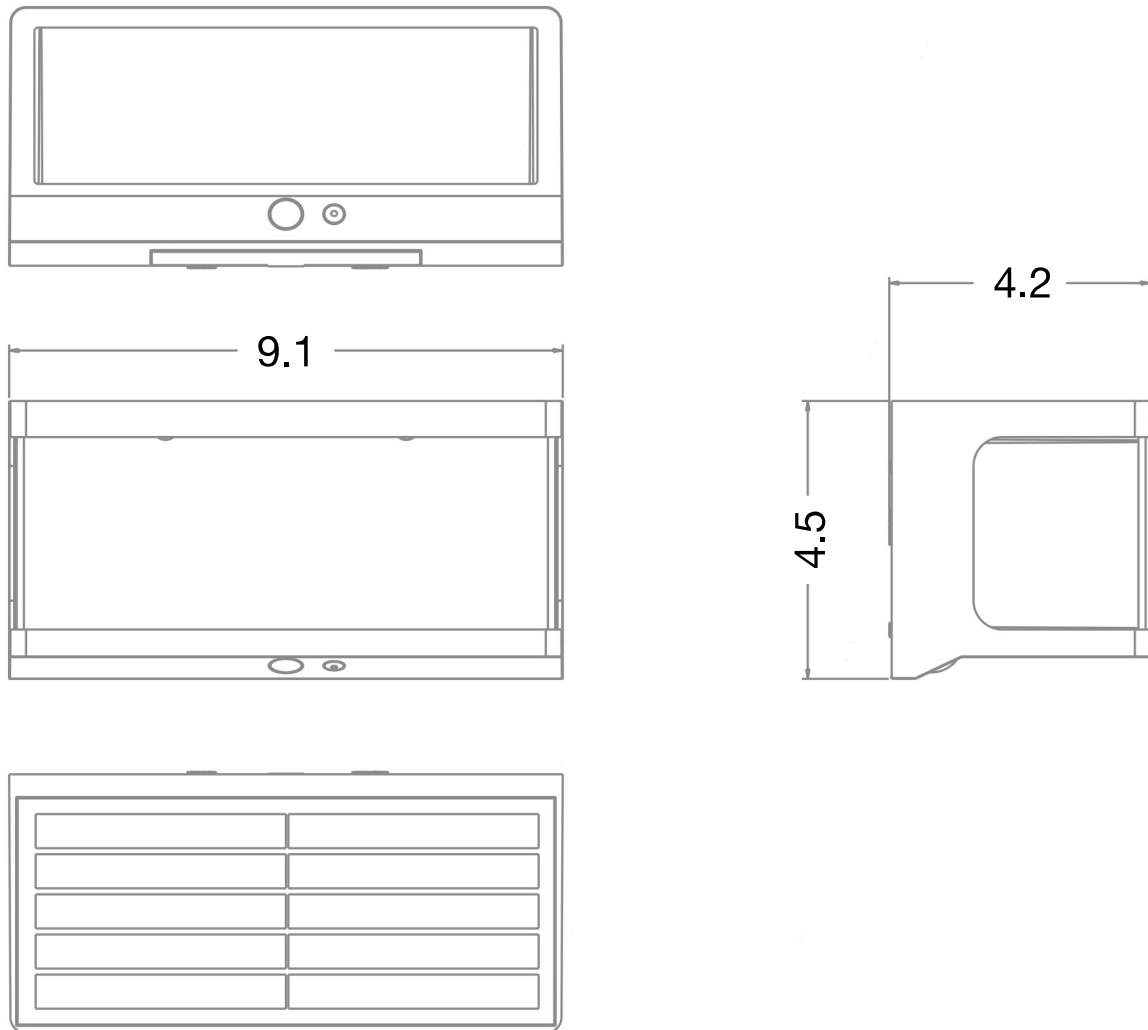


*All Dimensions are in Inches (in)


Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.

Installation Instructions


- 1 Remove the wall bracket and position the bracket hole

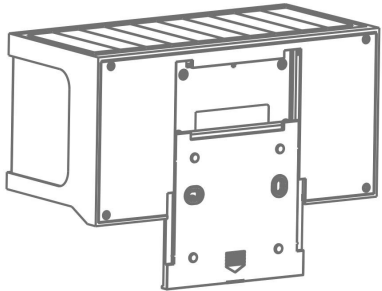


- 2 Install plastic expansion column

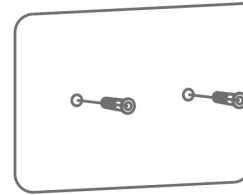

- 3 Fixed bracket

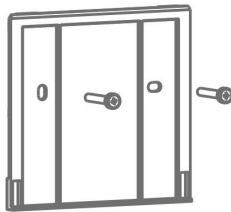

- 4 Install lamps

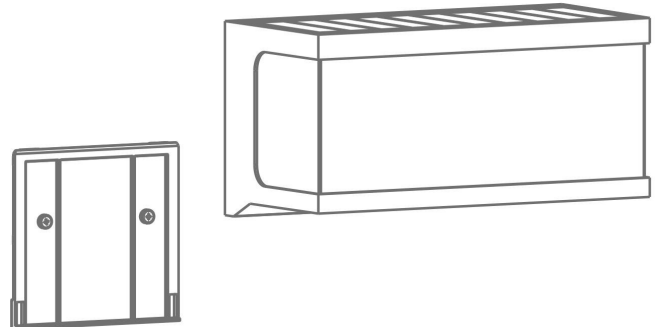


Package



PRODUCT LIST
BRACKET: 1 PC
INSTRUCTIONS: 1 PC
SCREW: 1 SET



INNER BOX
1 PC / 1 BOX

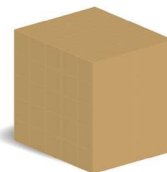

5 LAYERS
1 LAYER = 10 BOXES




BRACKET CARTON
18 BOXES / CTN

PACKING METHOD	PCS/CTN	QTY(PCS)	CTN QTY	CARTON SIZE(IN)	N.W(LBS)	G.W(LBS)
Inner Box	1	1	1	9.3x4.8x4.5	/	/
Carton	18	18	1	24.8x19.4x23.4	/	/

Net weight and gross weight are for reference only

Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.

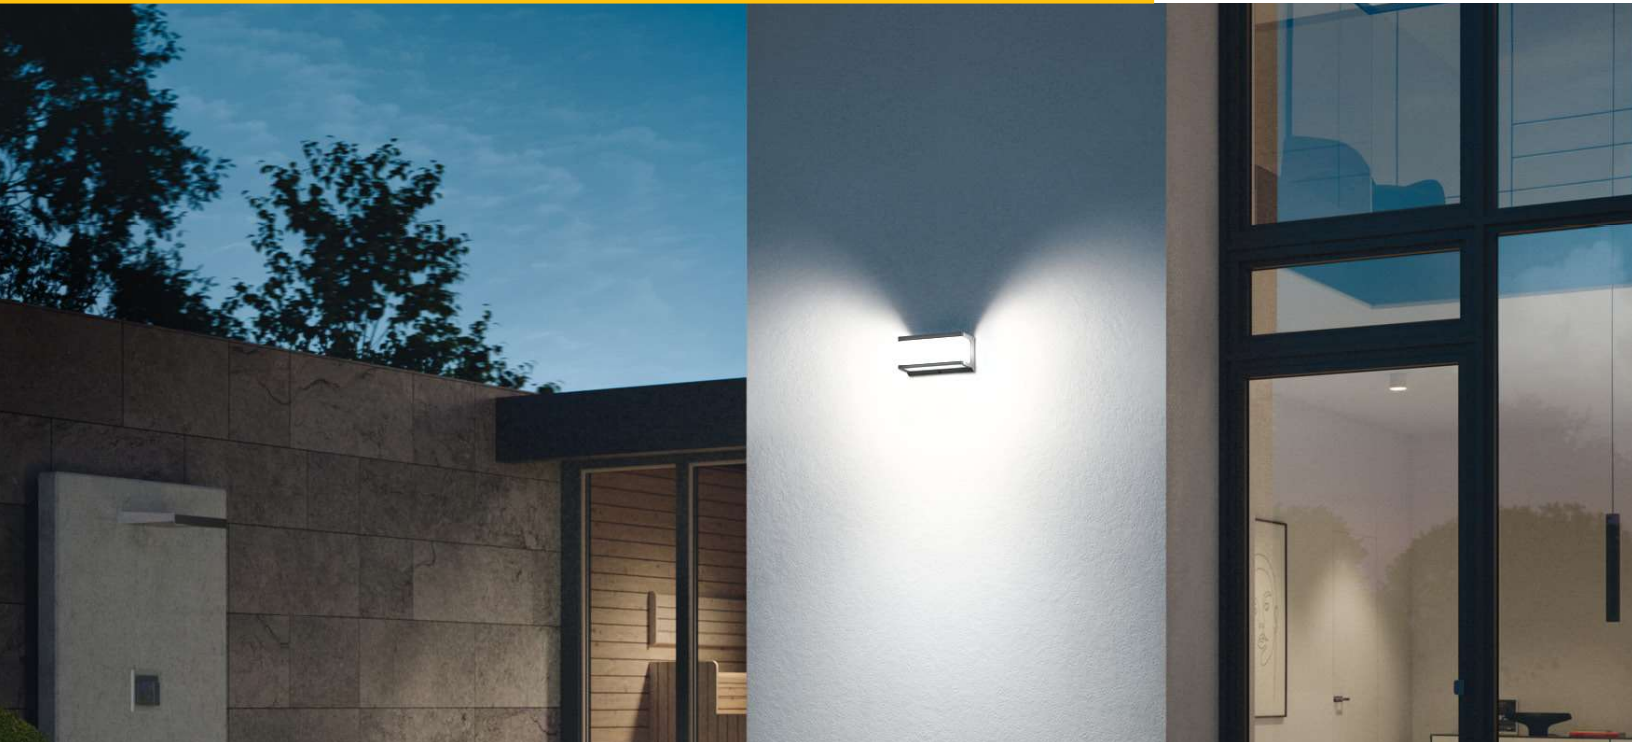

Beyond Solar retains the right to modify or change product specifications without prior notice, as part of our ongoing commitment to improvement.