


SPC10S
 SPC10SW
 SPC10SB
 SPC10B

Installation Instructions


SYSTEMA

Systema | 135mm Post C-Clamp


Component Checklist

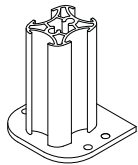


C-Clamp Base Plate with Post

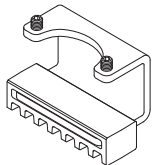

C-Clamp Bracket with Spacer Block and Set Screw M8x16 (2x)

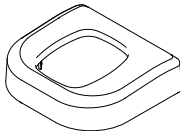


C-Clamp Cover



Pole Cap

HARDWARE



4mm Ball-tip Allen Key


IMPORTANT INFORMATION:

- ! **IMPORTANT - Install Systema 100mm Post as per installation instruction.**
- ! Systema 100mm Post is compatible with the Systema SS monitor arm
- ! The manufacturer accepts no responsibility for incorrect installation.


Step 1. Check Components

Check what you have received against the component checklist above.

Step 2. Mount C-Clamp

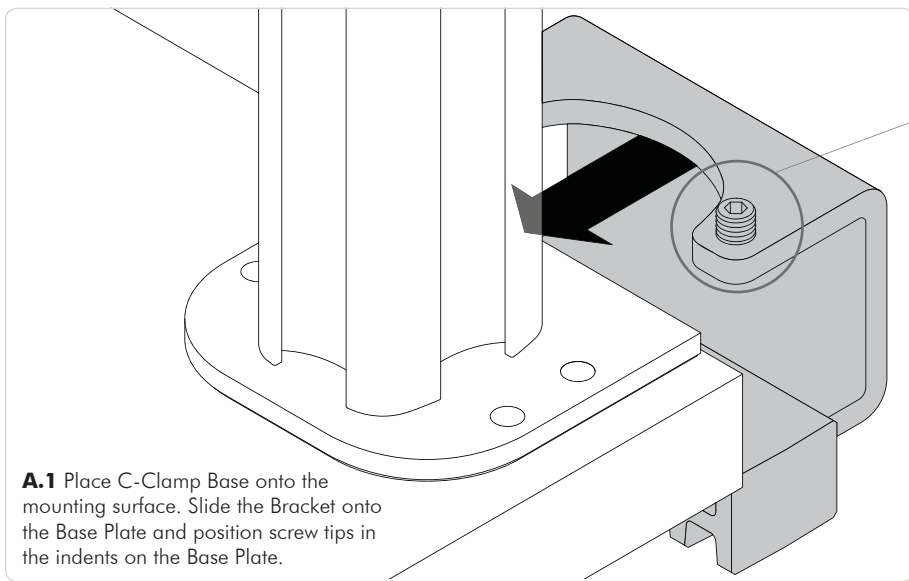


A.1 Place C-Clamp Base onto the mounting surface. Slide the Bracket onto the Base Plate and position screw tips in the indents on the Base Plate.

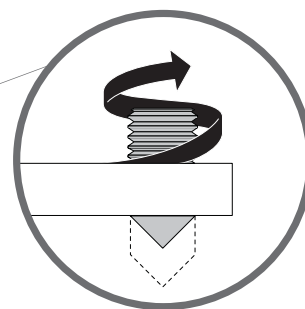

A.2 Depending on the thickness of the mounting surface you may need to extend the set screws out of the plate using the 4mm Allen key.

A.3 The C-Clamp supports a range of different mounting surface thicknesses. By inverting the Spacer Block on the Clamp Bracket, mounting surfaces with a thinner profile can be supported.

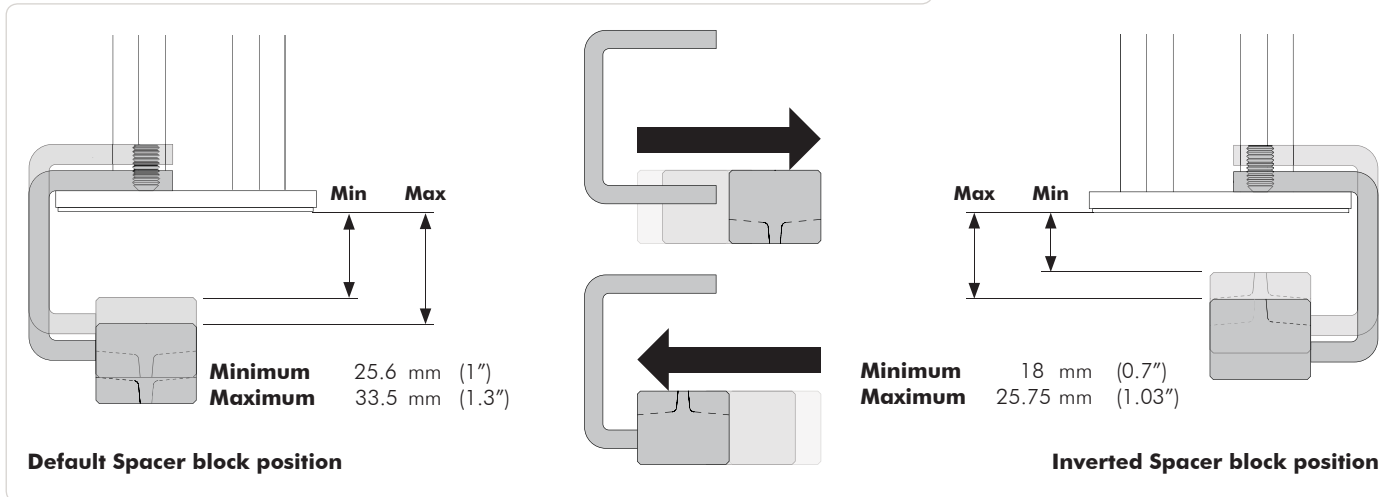


Default Spacer block position



Inverted Spacer block position

Step 2. Mount Base (cont.)


A.4 Ensure the Set Screws are mounted in position.

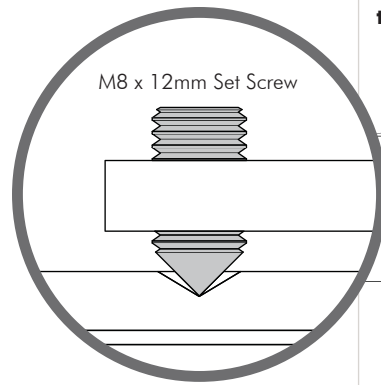

NOTE: Ensure the desk clamp bracket is positioned tight up against the Mounting surface edge

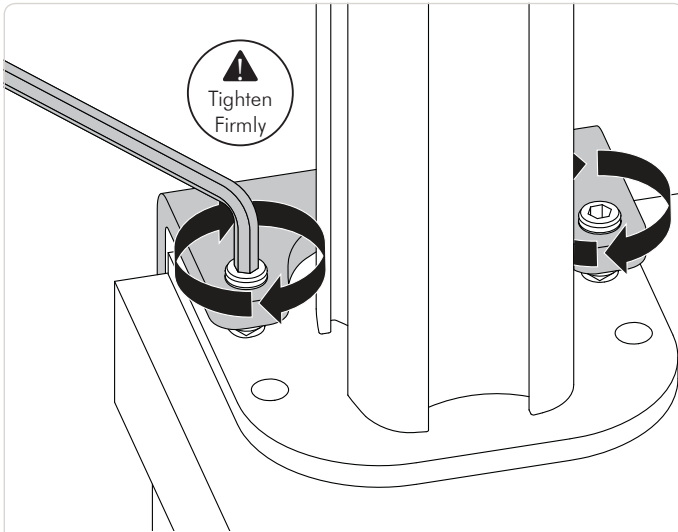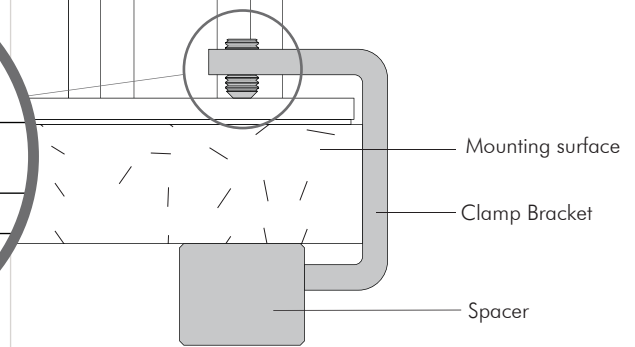

A.5 Tighten Set Screws **evenly** on both sides of the Desk Clamp Bracket using the 4mm Allen Key.

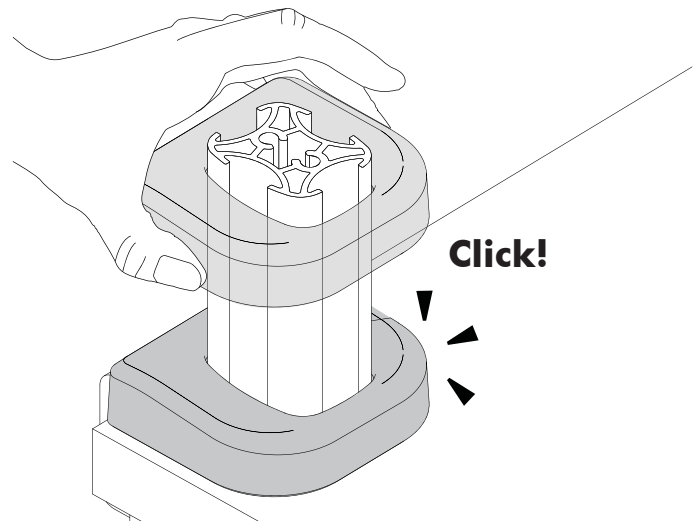

A.6 Locate the C-Clamp Cover over the Post. Guide over the holes in the Base Plate and gently apply pressure on the cover until it clicks into place.

Ergonomic Guidelines

Many experts believe that the extended use of any computer screen has the potential to cause serious injury to your eyes, neck and back. This can be largely avoided by correctly positioning your display.


Viewing angle: Ergonomists recommend that the optimal position of your display should be slightly below eye level. When looking at the display's centre the user should have a downward visual angle of approximately 10°-20°.

Height: As a guide, the height (**h**) of your display should approximately be as follows:

- Tall Male (Max): 560mm (22")
- Short Male (Min): 368mm (14.5")
- Tall Female (Max): 520mm (20.5")
- Short Female (Min) 356mm (14")

Distance: For visual comfort, a viewing distance (**d**) between 500mm (20") to 750mm (29.5") is recommended.

Tilt Angle: Angular adjustments to reduce reflection on your monitor should range between 5° forward tilt to 15° backward tilt.

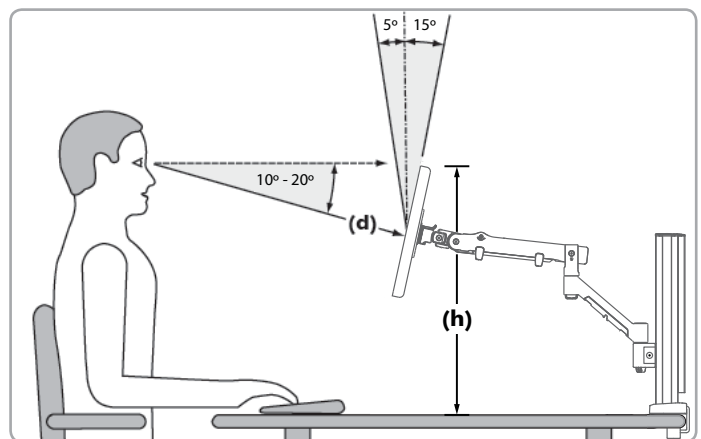

Installation Complete

You are now ready to install your Systema Monitor Arms.
Please refer to the Installation Instructions Included with these products.



No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published 12.10.15 ©