



59.5*17.5mm



64.5*36.5mm

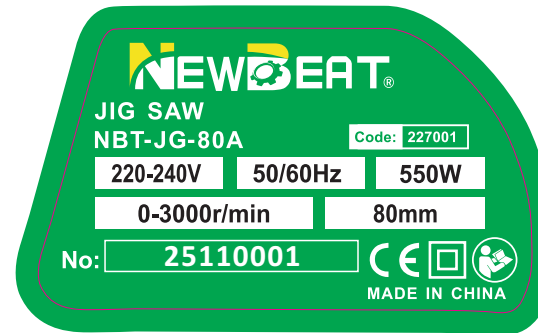

52*26mm

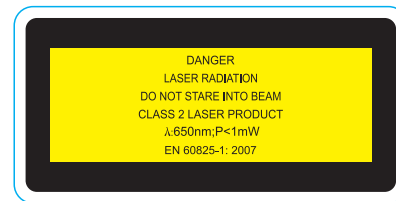

20*18mm




NEWBEAT®

*Professional Series
For Industrial Use Only*

NEWBEAT®

OPERATING MANUAL JIG SAW

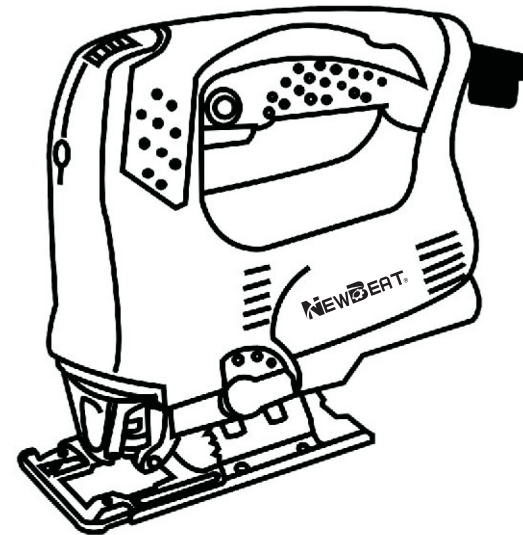

NBT-JG-80A

SPECIFICATIONS

Rated Voltage: 220-240V

Rated Frequency: 50/60Hz

Rated Input Power: 550W

No Load Speed: 0-3000r/min

Max cutting depth: 80mm

MADE IN CHINA



Read through carefully and understand these instructions before use.

ENGLISH (Original instructions)

SPECIFICATIONS

Model	NBT-JG-80A	
Length of stroke	18 mm	
Blade type	B type	
Max. cutting capacities	Wood	80 mm
	Mild steel	6 mm
Strokes per minute	0-3000	
Overall length	217 mm	
Net weight	1.8 kg	

General Power Tool Safety Warnings

⚠ **WARNING** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

1. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
3. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

Electrical Safety

4. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.

5. **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
6. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
7. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
8. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
9. **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of an GFCI reduces the risk of electric shock.

Personal Safety

10. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
11. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

WARRANTY POLICY

CONGRATULATIONS for becoming a proud owner of NEWBEAT power tool(s). It is warranted to be free of defects from workmanship and materials for the period of SIX MONTHS from the date of original purchase.

This warranty covers the normal operation of the products and excludes damage caused by

- A) Accident, negligence, abuse and improper use.
- B) fire, flood and natural calamities;
- C) unauthorized repairs and alterations;
- D) wrong voltage/wild voltage fluctuation;
- E) entry into machine of water, slurry, dust, etc.;
- F) normal wear and tear;
- G) seal, carbon brush and other spare parts that easy to be worn and broken;
- H) rough transportation after sale.
- I) improper or lack of maintenance as indicated in the Operation Instructions;
- J) not using our company original spare parts & accessories as stipulated.

WARRANTY STRICTLY FOR ARMATURE AND FIELD COIL ONLY.

To ensure the effectiveness of this warranty, the following particulars must be entered on the Warranty Card on the date of purchase: Dealer's stamp, the date of purchase, the particular of buyer.

PLEASE KEEP THIS WARRANTY CARD SAFE WITH YOU. WARRANTY WILL NOT BE PROVIDED WITHOUT THIS WARRANTY CARD. This warranty is neither Assignable nor Transferable. Should any trouble develop during this six months period, return the COMPLETE tool, together with the warranty card and purchase bill of the related machine, to where it was bought for repair.

Note: The contents of this warranty card may be changed without prior notice and we reserves the authority for final interpretation.

NEWBEAT®

WARRANTY CARD



MADE IN CHINA



12. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
13. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
14. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
15. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
16. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

Power tool use and care

17. **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
18. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
19. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

JIG SAW SAFETY WARNINGS

1. **Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring or its own cord.** Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
2. **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
3. **Always use safety glasses or goggles.** Ordinary eye or sun glasses are NOT safety glasses.
4. **Avoid cutting nails. Inspect workpiece for any nails and remove them before operation.**
5. **Do not cut oversize workpiece.**
6. **Check for the proper clearance beyond the workpiece before cutting so that the blade will not strike the floor, workbench, etc.**
7. **Hold the tool firmly.**
8. **Make sure the blade is not contacting the workpiece before the switch is turned on.**
9. **Keep hands away from moving parts.**
10. **Do not leave the tool running. Operate the tool only when hand-held.**

11. Always switch off and wait for the blade to come to a complete stop before removing the blade from the workpiece.
12. Do not touch the blade or the workpiece immediately after operation; they may be extremely hot and could burn your skin.
13. Do not operate the tool at no-load unnecessarily.
14. Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data.
15. Always use the correct dust mask/respirator for the material and application you are working with.

SAVE THESE INSTRUCTIONS.

△ WARNING:
 DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product. MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.



Return receipt

WARRANTY CARD

DEALER'S NAME AND ADDRESS: _____

Please fill all the details and return the warranty registration card within 7 days from the date of purchase to the Dealer's address mentioned above. Unregistered warranty card is not applicable for any warranty service.

MODEL NO.: _____ SERIAL NO.: _____

NAME: _____ DATE OF PURCHASE: _____

ADDRESS: _____



Customer copy

WARRANTY CARD

MODEL NO.: _____ SERIAL NO.: _____


NAME: _____

ADDRESS: _____

DATE OF PURCHASE: _____

DEALER'S STAMP & SIGNATURE: _____

JIG SAW NBT-JG-80A EXPLODED DIAGRAM

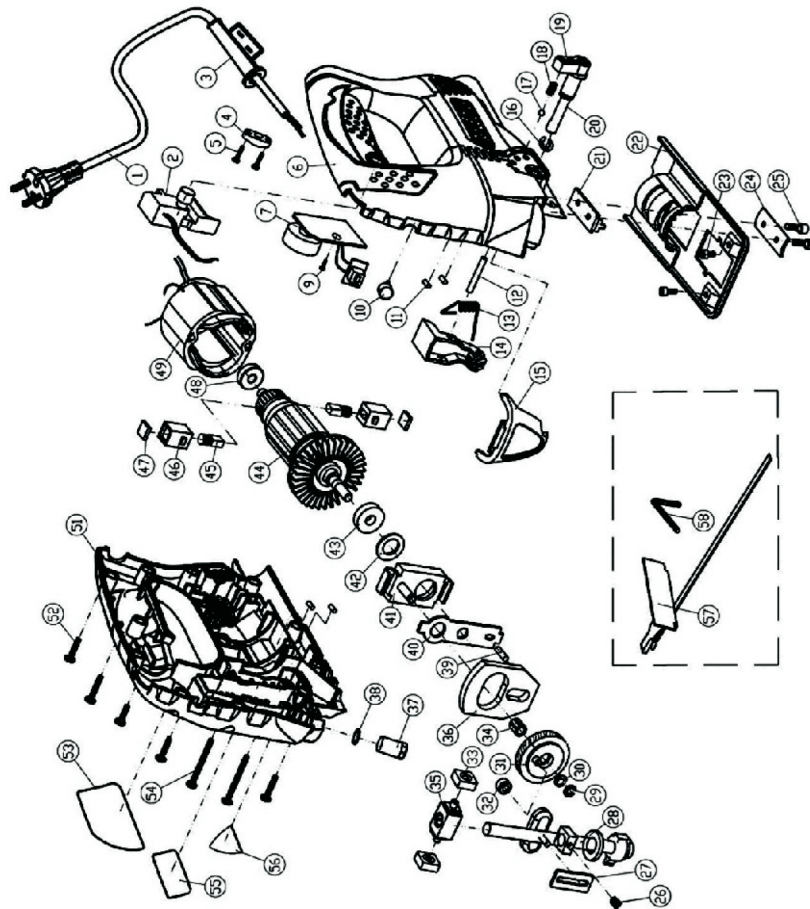


FUNCTIONAL DESCRIPTION

△ CAUTION:

- Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

Selecting the cutting action

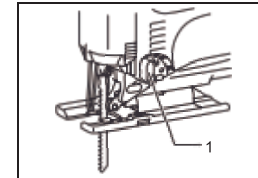


1. Cutting action changing lever

This tool can be operated with an orbital or a straight line (up and down) cutting action. The orbital cutting action thrusts the blade forward on the cutting stroke and greatly increases cutting speed.

To change the cutting action, just turn the cutting action changing lever to the desired cutting action position. Refer to the table to select the appropriate cutting action.

Position	Cutting action	Applications
0	Straight line cutting action	For cutting mild steel, stainless steel and plastics. For clean cuts in wood and plywood.
I	Small orbit cutting action	For cutting mild steel, aluminum and hardwood.
II	Medium orbit cutting action	For cutting wood and plywood. For fast cutting in aluminum and mild steel.
III	Large orbit cutting action	For fast cutting in wood and plywood.

Switch action

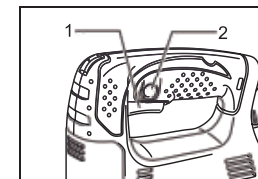

1. Switch trigger
2. Lock button

△ CAUTION:


- Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.
- Switch can be locked in "ON" position for ease of operator comfort during extended use. Apply caution when locking tool in "ON" position and maintain firm grasp on tool.

To start the tool, simply pull the switch trigger. Release the switch trigger to stop.

For continuous operation, pull the switch trigger and then push in the lock button.

To stop the tool from the locked position, pull the switch trigger fully, then release it.

Speed adjusting dial

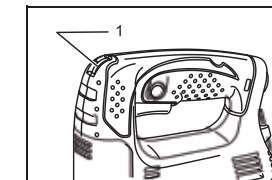

1. Speed adjusting dial

The tool speed can be infinitely adjusted between 500 and 3,100 strokes per minute by turning the adjusting dial. Higher speed is obtained when the dial is turned in the direction of number 6; lower speed is obtained when it is turned in the direction of number 1.

Refer to the table to select the proper speed for the workpiece to be cut. However, the appropriate speed may differ with the type or thickness of the workpiece. In general, higher speeds will allow you to cut workpieces faster but the service life of the blade will be reduced.

Workpiece to be cut	Number on adjusting dial
Wood	5 - 6
Mild steel	3 - 6
Stainless steel	3 - 4
Aluminum	3 - 6
Plastics	1 - 4

△ CAUTION:


- If the tool is operated continuously at low speeds for a long time, the motor will get overloaded and heated up.
- The speed adjusting dial can be turned only as far as 6 and back to 1. Do not force it past 6 or 1, or the speed adjusting function may no longer work.

ASSEMBLY

△ CAUTION:

- Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.

Installing or removing saw blade

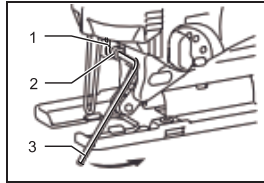


- Blade holder
- Bolt
- Hex wrench

△ CAUTION:

- Always clean out all chips or foreign matter adhering to the blade and/or blade holder. Failure to do so may cause insufficient tightening of the blade, resulting in a serious personal injury.
- Do not touch the blade or the workpiece immediately after operation; they may be extremely hot and could burn your skin.
- Always secure the blade firmly. Insufficient tightening of the blade may cause blade breakage or serious personal injury.
- Use only B type blades. Using blades other than B type blades causes insufficient tightening of the blade, resulting in a serious personal injury.

To install the blade, loosen the bolt counterclockwise on the blade holder with the hex wrench.

With the blade teeth facing forward, insert the blade into the blade holder as far as it will go. Make sure that the back edge of the blade fits into the roller. Then tighten the bolt clockwise to secure the blade.

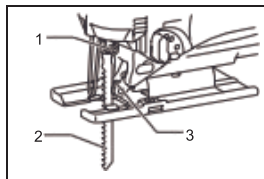


- Bolt
- Blade
- Roller

To remove the blade, follow the installation procedure in reverse.

NOTE:

- Occasionally lubricate the roller.


Hex wrench storage

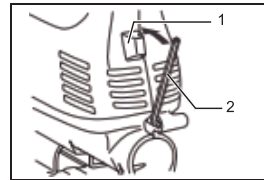

- Hook
- Hex wrench

When not in use, store the hex wrench as shown in the figure to keep it from being lost.

Adjusting roller

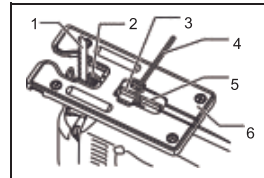


- Blade
- Roller
- Retainer
- Hex wrench
- Bolt
- Base

Loosen the bolt on the back of the base with the hex wrench. Move the retainer so that the roller contacts the blade lightly. Then tighten the bolt to secure the base and the retainer.

NOTE:

- Occasionally lubricate the roller.

Dust cover

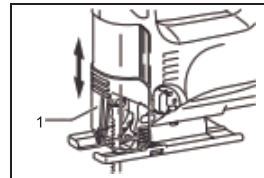

- Dust cover


△ CAUTION:

- Always wear safety goggles even when operating the tool with the dust cover lowered.
- Lower the dust cover to prevent chips from flying. However, when making bevel cuts, raise it all the way.

JIG SAW NBT-JG-80A PART LIST

Part No.	English Name	QTY	Part No.	English Name	QTY
1	Cable	1PCS	41	Bracket	1PCS
2	Switch	1PCS	42	Wool ring	1PCS
3	Cable guard	1PCS	43	Bearing	1PCS
4	Strain relief	1PCS	44	Armature	1PCS
5	Tapping screw	2PCS	45	Carbon brush	2PCS
6	Housing	1PCS	46	Brush holder	2PCS
7	Speed controller	1PCS	47	Brush cap	2PCS
9	Tapping screw	2PCS	48	Bearing	1PCS
10	Laser button	1PCS	49	Stator	1PCS
11	Pin	4PCS	51	Housing	1PCS
12	Locating pin	1PCS	52	Tapping screw	12PCS
13	Torsional spring	1PCS	53	Label	1PCS
14	Wheel frame Ass'y	1PCS	54	Tapping screw	2PCS
15	Transparent shield	1PCS	55	Laser warning label	1PCS
16	Baffle ring	1PCS	56	Laser label	1PCS
17	Steel ball	1PCS	57	Ruler	1PCS
18	Spring	1PCS	58	Wrench	
19	Rotary knob	1PCS			
20	Rotary pin	1PCS			
21	Cleat	1PCS			
22	Base	1PCS			
23	Screw	2PCS			
24	Cleat	1PCS			
25	Screw	2PCS			
26	Spring	1PCS			
27	Locating frame	1PCS			
28	Reciprocating lever Ass'y	1PCS			
29	Baffle ring	1PCS			
30	Flat washer	1PCS			
31	Gear	1PCS			
32	Truckle	1PCS			
33	Frame locating piece	2PCS			
34	Bearing	1PCS			
35	Frame	1PCS			
36	Balance piece	1PCS			
37	Laser cover	1PCS			
38	O ring	1PCS			
39	Locating pin	1PCS			
40	Plate	1PCS			

Cover plate for aluminum base (Optional accessory)

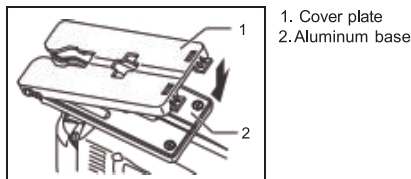

1. Cover plate
2. Aluminum base

Use the cover plate when cutting decorative veneers, plastics, etc. It protects sensitive or delicate surfaces from damage. Fit it on the back of the tool base.

MAINTENANCE

△ CAUTION:

- Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.
- Never use gasoline, benzine, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

To maintain product SAFETY and RELIABILITY, repairs, carbon brush inspection and replacement, any other maintenance or adjustment should be performed by Authorized Service Centers, always using replacement parts.

OPTIONAL ACCESSORIES

△ CAUTION:

- These accessories or attachments are recommended for use with your tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Service Center.

- Jig saw blades
- Hex wrench
- Rip fence (guide rule) set
- Anti-splintering device
- Hose (For vacuum cleaner)
- Cover plate (For aluminum base type)

NOTE:


- Some items in the list may be included in the tool package as standard accessories. They may differ from country to country.

OPERATION

△ CAUTION:


- Always hold the base flush with the workpiece. Failure to do so may cause blade breakage, resulting in a serious injury.
- Advance the tool very slowly when cutting curves or scrolling. Forcing the tool may cause a slanted cutting surface and blade breakage.

Turn the tool on without the blade making any contact and wait until the blade attains full speed. Then rest the base flat on the workpiece and gently move the tool forward along the previously marked cutting line.

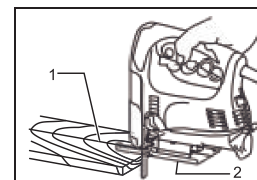

1. Cutting line
2. Base

Bevel cutting

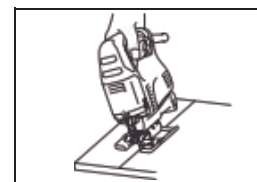


△ CAUTION:

- Always be sure that the tool is switched off and unplugged before tilting the base.
- Raise the dust cover all the way before making bevel cuts.


With the base tilted, you can make bevel cuts at any angle between 0° and 45° (left or right).

Loosen the bolt on the back of the base with the hex wrench. Move the base so that the bolt is positioned in the center of the cross-shaped slot in the base.

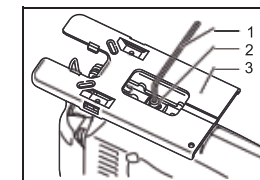


1. Hex wrench
2. Bolt
3. Base

Tilt the base until the desired bevel angle is obtained. The edge of the motor housing indicates the bevel angle by graduations. Then tighten the bolt to secure the base.

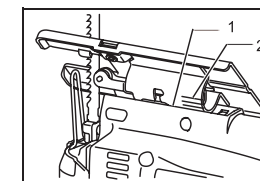

1. Edge
2. Graduation

Front flush cuts

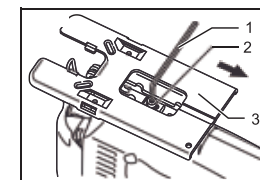


1. Hex wrench
2. Bolt
3. Base

Loosen the bolt on the back of the base with the hex wrench and slide the base all the way back. Then tighten the bolt to secure the base.

Cutouts

Cutouts can be made with either of two methods A or B.


A) Boring a starting hole

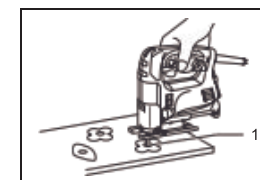

1. Starting hole

For internal cutouts without a lead-in cut from an edge, pre-drill a starting hole 12 mm or more in diameter. Insert the blade into this hole to start your cut.


B) Plunge cutting

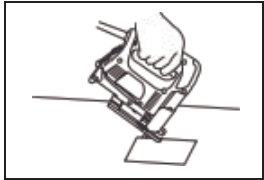

You need not bore a starting hole or make a lead-in cut if you carefully do as follows.

- (1) Tilt the tool up on the front edge of the base with the blade point positioned just above the workpiece surface.
- (2) Apply pressure to the tool so that the front edge of the base will not move when you switch on the tool and gently lower the back end of the tool slowly.
- (3) As the blade pierces the workpiece, slowly lower the base of the tool down onto the workpiece surface.
- (4) Complete the cut in the normal manner.

Finishing edges

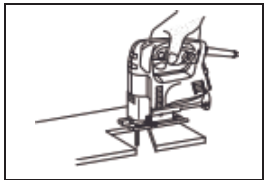


To trim edges or make dimensional adjustments, run the blade lightly along the cut edges.

Metal cutting

Always use a suitable coolant (cutting oil) when cutting metal. Failure to do so will cause significant blade wear. The underside of the workpiece can be greased instead of using a coolant.

Dust extraction

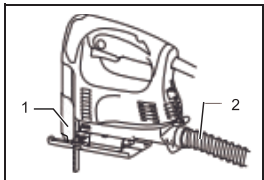

1. Dust cover
2. Hose

Clean cutting operations can be performed by connecting this tool to a vacuum cleaner. Insert the hose of the vacuum cleaner into the hole at the rear of the tool. Lower the dust cover before operation.

NOTE:


- Dust extraction cannot be performed when making bevel cuts.

Rip fence (optional accessory)

△ CAUTION:


- Always be sure that the tool is switched off and unplugged before installing or removing accessories.

1. Straight cuts

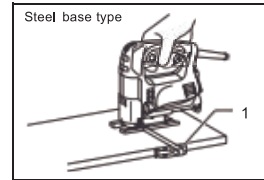


1. Rip fence (Guide rule)

When repeatedly cutting widths of 160 mm or less, use of the rip fence will assure fast, clean, straight cuts.

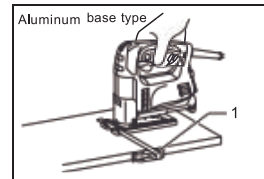


1. Rip fence (Guide rule)

To install, insert the rip fence into the rectangular hole on the side of the base with the fence guide facing down. Slide the rip fence to the desired cutting width position, then tighten the bolt to secure it.

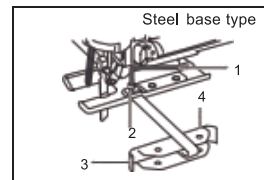


1. Hex wrench
2. Bolt
3. Rip fence (Guide rule)
4. Guide facing

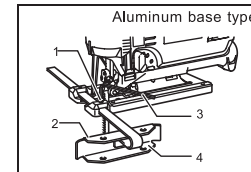


1. Bolt
2. Fence guide
3. Hex wrench
4. Rip fence (Guide rule)


2. Circular cuts

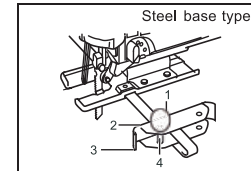


1. Threaded knob
2. Guide facing
3. Rip fence (Guide rule)
4. Pin

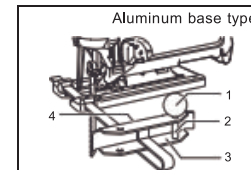

1. Threaded knob
2. Pin
3. Rip fence (Guide rule)
4. Fence guide

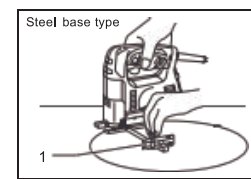

1. Rip fence (Guide rule)

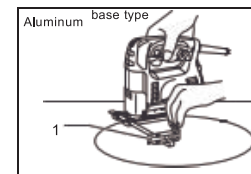

1. Rip fence (Guide rule)

When cutting circles or arcs of 170 mm or less in radius, install the rip fence as follows. Insert the rip fence into the rectangular hole on the side of the base with the fence guide facing up.


Insert the circular guide pin through either of the two holes on the fence guide. Screw the threaded knob onto the pin to secure the pin.

Now slide the rip fence to the desired cutting radius, and tighten the bolt to secure it in place. Then move the base all the way forward.

NOTE:

- Always use blades No. B-17, B-18, B-26 or B-27 when cutting circles or arcs.

Anti-splintering device for steel base (optional accessory)

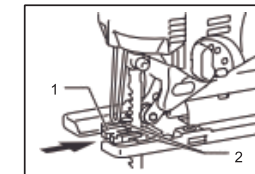


1. Anti-splintering device
2. Protrusions

For splinter-free cuts, the anti-splintering device can be used. To install the anti-splintering device, move the base all the way forward and insert it between the two protrusions of the base.

NOTE:

- The anti-splintering device cannot be used when making bevel cuts.

Anti-splintering device for aluminum base (Optional accessory)

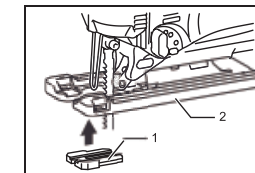

1. Anti-splintering device
2. Aluminum base

For splinter-free cuts, the anti-splintering device can be used. To install the anti-splintering device, move the tool base all the way forward and fit it from the back of tool base. When you use the cover plate, install the anti-splintering device onto the cover plate.

△ CAUTION:

- The anti-splintering device cannot be used when making bevel cuts.