



Safe Keeper

USER INSTRUCTION MANUAL

WORK POSITIONING DEVICE



**This instruction manual applies
to the following models:**

FAP31798-SK



BKLSKR 14

Do not skip this instruction manual. Read the instruction manual carefully before using the equipment. If failed in doing so it may cause serious injury or Death.

SAFE KEEPER, 314 E. CANAL ST. MULBERRY, FL 33860

This manual must be read and understood in its entirety and used as part of fall protection training program as required by OSHA or any state regularity agency. These instructions are intended to meet the manufacturer instructions as required by ANSI Z359.3.2017 and OSHA 1926. The user must fully understand the proper equipment use and limitations.


The Instructions Manual applies to the following models : FAP31798-SK

1. GENERAL REQUIREMENTS, WARNINGS AND LIMITATIONS:

The Equipment is designed for use as a part of a personal fall protection system. Components must not be used for any other operation other than that which it has been designed and approved. Fall Arrest system are designed to comply with OSHA. Fall Restraint System must be designed by a Qualified Person, and must be installed and used under the supervision of a competent person.

- All authorized persons/users must refer the regulations governing occupational safety, as well as applicable ANSI or CSA standards. Please refer to product labeling for information on specific OSHA regulations, and ANSI and CSA standards met by product.
- **Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces. Age, fitness, health conditions can seriously affect the worker a fall occur. Pregnant Women and minors should not use this equipment.**
- Proper precautions should always be taken to remove any obstructions, debris, material, or other recognized hazards from the work area that could cause injuries or interfere with the operation of the system. All equipment must be inspected before each use according to the manufacturer's instructions. All equipment should be inspected by a qualified person on a regular basis.
- To minimize the potential for accidental disengagement, a competent person must ensure system compatibility.
- Equipment must not be altered/misused in any way. Repairs must be performed only by the Manufacturer, or persons or entities authorized in writing by the manufacturer.
- Any product exhibiting deformities, unusual wear, or deterioration must be immediately discarded. Any equipment subject to a fall must be removed from service. The authorized person/user shall have a rescue plan and the means at hand to implement it when using this equipment.
- Never use fall protection equipment for purposes other than those for which it was designed. Fall protection equipment should never be used for towing or hoisting.
- All synthetic material must be protected from slag, hot sparks, open flames, or other heat sources. The use of heat resistant materials is recommended in these applications.
- Never use natural materials (manila, cotton, etc.) as part of a fall protection system.
- Do not expose this equipment to chemicals which may have a harmful effect on the materials used to construct it. Be especially aware of caustic environment, or those that contain high levels of organic acids or bases. If you are uncertain about the safe operation of this equipment in any environment, contact SAFE KEEPER for further instructions.
- Do not use the equipment near sharp edges, abrasive surfaces and looping around small diameter structural members.
- Do not use the equipment around moving machinery or electrical hazards.
- Do not use the lanyards for material handling.
- Anchorage requirements should be as per Z359.2.

Figure 1 - Types of Positioning Device

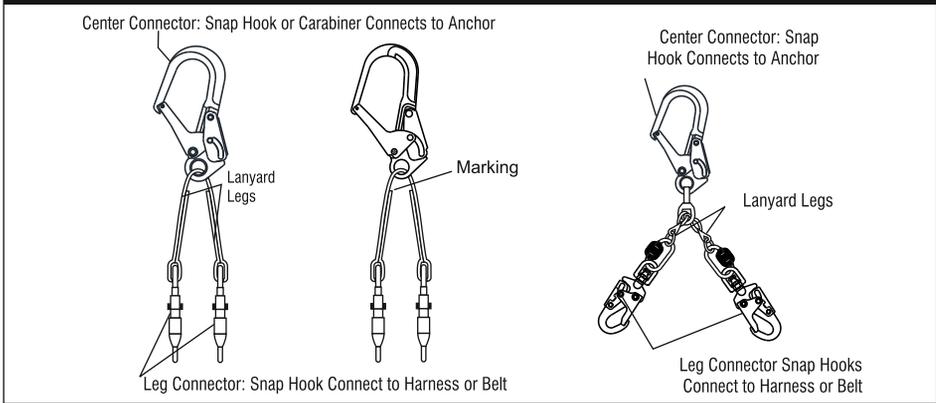

SAFE KEEPER Lanyards should be used only with the combinations of components, sub-systems or both which may affect or interfere with the safe function of one another. Be certain that connecting devices are compatible and that other elements of the PFAS are safe to use and compatible before use.

DESCRIPTIONS :

The following options are available for positioning lanyards:


Double Leg Positioning Lanyards :

- **Legs :** Webbing/Chain/Rope
- **Connection between legs and center:** Swivel or Rebar Hook
- *Connectors :*
- **Leg :** PN146-SK and PN147-SK; PN 146-SK,
- **Center :** PN149-SK & PN153(SW)-SK

Single Leg Positioning Lanyards :

- **Legs :** Webbing/Chain/Rope
- *Connectors :*
- **Leg :** PN145-SK & PN146-SK

Warning : Do not use a non-shock Absorbing Lanyard for Fall Arrest

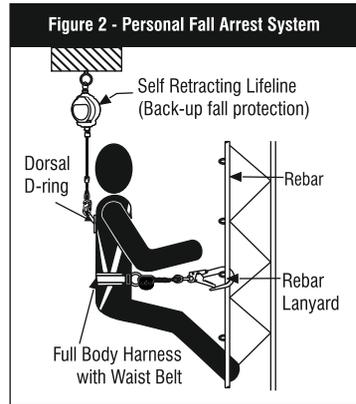

1.0 APPLICATIONS :

- 1.1 Purpose:** The Positioning lanyards are intended to be used as part of work positioning system that holds and supports the user at a work location. Applications include concrete rebar assembly and steel erection (see fig.2). OSHA standard 1926.500 defines this equipment as part of a positioning device system.
- 1.2 Limitations :** Consider the following application limitations before using this equipment:
 - A. Capacity :** This equipment is designed for use by persons with a combined weight (including tools, clothing, etc.) of no more than 310 lbs.
 - B . Free Fall :** This equipment must be rigged to limit the potential free fall to 4 feet, according to ANSI Z359.1, OSHA 1926.
 - C. Fall Clearance :** Ensure that adequate clearance exists in your fall path to prevent striking an object. The clearance required is dependent on the length and type of lanyard and anchorage location.

D. Personal Fall Arrest System : See Figure 2. SAFE KEEPER recommends the use of a personal fall arrest system with this equipment. The personal fall arrest system will protect the user if the work positioning system disengages from the anchorage point, or when detached from the work positioning system when moving from point to point. See OSHA 1926.

E. Environmental Hazards : Use of this equipment in areas where environmental hazards are present may require additional precautions to reduce the possibility of injury to the user or damage to the equipment. Hazards may include, but are not limited to; high heat, sever cold, caustic chemicals, corrosive environments, high voltage power lines, explosive or toxic gases, moving machinery, or sharp edges.

F. Training : This equipment is intended to be used by persons trained in its correct application and use.

1.3 Applicable Standards : Refer to national standards, including the ANSI Z359 family of standards on fall protection, ANSI A10.32, and applicable local, state, and federal (OSHA) requirements governing occupational safety, for more information on work positioning systems.

2.0 SYSTEM REQUIREMENTS


2.1 COMPATIBILITY OF COMPONENTS AND SUBSYSTEMS: This equipment is designed for use with SAFE KEEPER approved components and subsystems. Substitutions or replacements made with non-approved components or subsystems may be incompatible, and may jeopardize the safety and reliability of the complete system.

2.2 COMPATIBILITY OF CONNECTORS: Connectors are considered to be compatible with connecting elements when they have been designed to work together in such a way that their sizes and shapes do not cause their gate mechanisms to inadvertently open regardless of how they become oriented. Contact SAFE KEEPER if you have any questions about compatibility.

Connectors (hooks, karabiners, and D-rings) must be capable of supporting at least 5,000 lbs. (22.2 kN). Connectors must be compatible with the anchorage or other system components. Do not use equipment that is not compatible. Non-compatible connectors may unintentionally disengage. See Figure 3. Connectors must be compatible in size, shape, & strength. Self-locking snap hooks & karabiners are required by ANSI Z359.1 & OSHA.

Figure 3 - Unintentional Disengagement (Roll - out)

If the connecting element to which a snap hook (shown) or carabiner attaches is undersized or irregular in shape, a situation could occur where the connecting element applies a force to the gate of the snap hook or carabiner. This force may cause the gate (of either a self-locking or a non-locking snap hook) to open, allowing the snap hook or carabiner to disengage from the connecting point.

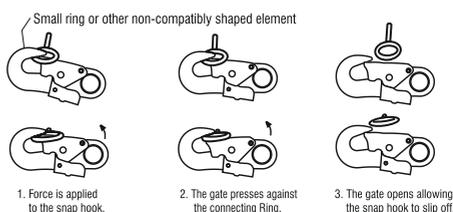

2.3 Making Connections : Only use self-locking snap hooks and karabiners with this equipment. Only use connectors that are suitable to each application. Ensure all connections are compatible in size, shape and strength. Do not use equipment that is not compatible. Ensure all connections are fully closed and locked. SAFE KEEPER connectors (snap hooks and karabiners) are designed to be used only as specified in each product's user's instructions. See Figure 4 for inappropriate connections. SAFE KEEPER snap hooks and karabiners should not be connected:


- A. To a D-ring to which another connector is attached.
- B. In a manner that would result in a load on the gate.

NOTE: Large gate opening snap hooks should not be connected to standard size D-rings or similar objects which will result in a load on the gate if the hook or D-ring twists or rotates. Large gate snap hooks are designed for use on fixed structural elements such as rebar or cross members that are not shaped in a way that can capture the gate of the hook.

- C. In a false engagement, where features that protrude from the snap hook or Karabiner catch on the anchor and without visual confirmation seems to be fully engaged to the anchor point.
- D. To each other.
- E. Directly to webbing or rope lanyard or tie-back (unless the manufacturer's instructions for both the lanyard and connector specifically allows such a connection).
- F. To any object which is shaped or dimensioned such that the snap hook or carabiner will not close and lock, or that roll-out could occur.
- G. Do not use connector on an anchorage object in the manner depicted in picture-G

2.4 Anchorage Strength : Anchorages selected for work positioning systems shall have a strength capable of sustaining static loads applied in the directions permitted by the system of at least: A) 3,000 pounds (13.3kN) for non-certified anchorages or B) Two times the foreseeable force for certified anchorages. When more than one work positioning system is attached to an anchorage, the strengths previously set forth in (A) and (B) shall be multiplied by the number of systems attached to the anchorage.

Figure-4

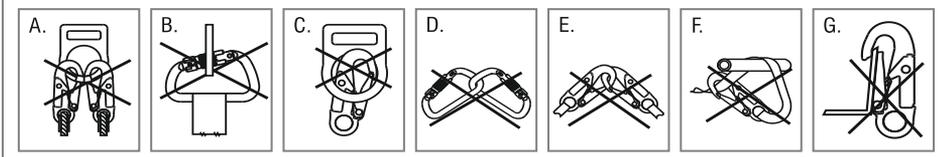

WARNING: Do not alter or intentionally misuse this equipment. Consult SAFE KEEPER when using this equipment in combination with components or subsystems other than those described in this manual. Some subsystem and component combinations may interfere with the operation of this equipment. Use caution when using this equipment around moving machinery and electrical hazards. Do not loop the lanyard around small structural members.

WARNING: Consult your doctor if there is reason to doubt your fitness to safely absorb the shock from a fall arrest. Age and fitness seriously affect a worker's ability to withstand falls. Pregnant women or minors must not use SAFE KEEPER rebar lanyards.


3.0 USE :

3.1 Before each use : of this equipment; carefully inspect it according to steps listed in section 5 of this manual.

3.2 Plan : your work positioning system before using this equipment. Consider all factors that will affect your safety during use of this equipment. Consider the following when planning your system:

- A. **Hazard Evaluation :** Evaluate the job site for all possible hazards. Ensure the intended path of the user is unobstructed. See section 1.2 for more information.
- B. **Body Support :** SAFE KEEPER recommends the use of a full body harness equipped with side D-rings with this equipment. A body belt may be used when it is a part of a full body harness.
- C. **Back-up Fall Protection :** SAFE KEEPER recommends the use of a personal fall arrest system with this equipment. See section 1.2 and Figure 2 for more information. Use the personal fall arrest system according to manufacturer's instructions.
- D. **Rescue :** The authorized person must have a rescue plan and the means at hand to implement it when using this equipment where a suspension could occur(such as following a fall and self-rescue is not possible).

- 3.3 Making Connections :** When using a hook to connect to an anchorage, ensure roll-out cannot occur. Roll-out occurs when interference between the hook and mating connector causes the hook gate to unintentionally open and release. Self-locking snap hooks and karabiners should be used to reduce the possibility of roll-out. Make sure all connectors close and lock and they do so automatically without manual assistance. Do not use hooks or connectors that will not completely close over the attachment object. Do not connect snap hooks or karabiners to each other.

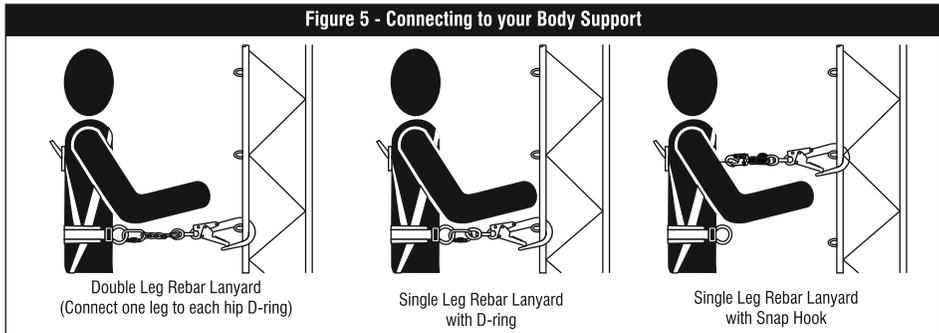

3.4 Connecting the Rebar Lanyard to your body support and Anchorage:

- A. Connecting to your body support:** See Figure 5.

Double Leg Rebar Lanyards:

Connect one leg of the rebar lanyard to each side D-ring of your body support (full body harness)

Do not allow the legs of the Lanyard to pass under arms, between legs, around the neck

Single Leg Rebar Lanyards with D-ring:

Lace your waist belt through the D-ring on the rebar lanyard. With the D-ring installed, buckle and secure your waist belt.


Single Leg Rebar Lanyards with Snap Hook: Connect the snap hook to the front D-ring on your cross-over style full body harness. If using this rebar lanyard with a waist belt, slide the waist belt D-ring to your front and connect the snap hook.

- B. Connecting to the Anchorage :** Connect the snap hook or Karabiner on the rebar lanyard to the intersection of the horizontal and vertical rebar as shown in Figure 6.

- C. Connecting the Personal Fall Arrest System :** Connect the personal fall arrest system to the dorsal back D-ring on your full body harness. See Figure 2. See personal fall arrest system manufacturer's instructions for more information.

4.0 TRAINING :

- 4.1** It is the responsibility of the user to assure they are familiar with these instructions, and are trained in the correct care and use of this equipment. User must also be aware of the operating characteristics, application limits, and the consequences of improper use of this equipment.

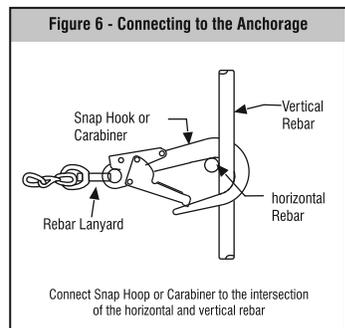

WARNING:

Training must be conducted without exposing the trainee to a fall hazard. Training should be repeated on a periodic basis.

5.0 INSPECTION :

5.1 Frequency:

Before Each Use : inspect according to steps listed in section 5.2. Remove equipment from field service if it has been subjected to damage or has been subjected to a fall arrest force.

Annually: This equipment must be inspected according to steps listed in section 5.2 by a competent person, other than the user, at least annually. Record the results of each inspection in the inspection and maintenance log in section 9.0.

WARNING: If this equipment has been subjected to fall arrest forces, remove from service and destroy.

IMPORTANT: Extreme working conditions (harsh environments, prolonged use, etc.) may require increasing the frequency of inspections.

5.2 INSPECTION STEPS:

Step 1. Inspect rebar lanyard hardware (snap hooks, karabiners, quick-links, etc.) for damage, distortion, sharp edges, worn parts, or corrosion. The snap hooks or karabiners must work properly. Hook gates must move freely and lock upon closing.

Step 2. Inspect the lanyard material as applicable:

Webbing and Stitching: Webbing must be free of frayed, cut, or broken fibers. Webbing must be free of knots, tears, abrasions, mold, or discoloration. Webbing must be free of chemical or heat damage, indicated by brown, discolored, or brittle areas. Webbing must be free of ultraviolet damage, indicated by discoloration and splinters along the webbing surface. Stitching must be free of pulled or cut stitches. All of the above factors are known to reduce webbing strength.

Chain: Inspect chain for damage, distortion, sharp edges, worn links, or corrosion.

Step 3. Labels must be present and fully legible. See section 7.0.

Step 4. Inspect each system component and subsystem according to manufacturer's instructions.

Step 5. Record inspection date and results in the inspection and maintenance log in section 9.0.

- 5.3** If inspection reveals an unsafe or defective condition, remove rebar lanyard from service and destroy, or contact an authorized service center for repair.

IMPORTANT: Only SAFE KEEPER or an authorized service center may make repairs to this equipment.

6.0 MAINTENANCE, SERVICING, STORAGE :

6.1 Clean the rebar lanyard with water and mild detergent. Wipe off hardware with a clean, dry cloth and hang to air dry. Do not force dry with heat. An excessive build-up of dirt, paint, etc., may prevent the rebar lanyard from working properly, and in severe cases, weaken the webbing. If you have questions about the condition of your rebar lanyard, contact SAFE KEEPER.

6.2 Additional maintenance and servicing procedures must be completed by SAFE KEEPER or parties authorized in writing. Do not disassemble this equipment. See section 5.1 for servicing frequency.

6.3 Store the rebar lanyard in a cool, dry, clean environment, out of direct sunlight. Avoid areas where chemical vapors are present. Thoroughly inspect this equipment after extended storage.

7.0 LABELS:

<div style="text-align: center;">  <p>Safe Keeper</p> <p>Attach to side D-Rings of the harness</p> <p>POSITIONING DEVICES Meets ANSI Z359.3-2017 A10.32 (2012) and OSHA requirements.</p> <p>Capacity: 400lbs max.</p> <p>Material: Polyester, Steel</p> <p>DO NOT REMOVE THIS LABEL.</p> </div>	<p style="text-align: center;">WARNING!</p> <p>Follow manufacturer's instructions provided with this lanyard at time of shipment from manufacturer. Fully read and understand these instructions before using.</p> <p>Improper use of this product could result in serious injury or death. Avoid contact with sharp edges and abrasive surfaces that can cut or damage the webbing or components.</p> <p>Make only safe, compatible connections.</p> <p>For use only with other OSHA and ANSI compliant equipment as part of a personal fall arrest system. Remove this lanyard from service if a fall has been incurred.</p> <p>DO NOT REMOVE THIS LABEL.</p>	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="font-size: 8px;">M</td><td style="font-size: 8px;">O</td><td style="font-size: 8px;">N</td><td style="font-size: 8px;">D</td><td style="font-size: 8px;">A</td><td style="font-size: 8px;">R</td><td style="font-size: 8px;">J</td><td style="font-size: 8px;">A</td><td style="font-size: 8px;">S</td><td style="font-size: 8px;">O</td><td style="font-size: 8px;">N</td><td style="font-size: 8px;">I</td><td style="font-size: 8px;">D</td> </tr> <tr> <td style="font-size: 8px;">M</td><td style="font-size: 8px;">R</td><td style="font-size: 8px;">J</td><td style="font-size: 8px;">F</td><td style="font-size: 8px;">M</td><td style="font-size: 8px;">A</td><td style="font-size: 8px;">M</td><td style="font-size: 8px;">J</td><td style="font-size: 8px;">J</td><td style="font-size: 8px;">A</td><td style="font-size: 8px;">S</td><td style="font-size: 8px;">O</td><td style="font-size: 8px;">N</td> </tr> <tr> <td style="font-size: 8px;">20</td><td style="font-size: 8px;">20</td> </tr> </table> <p style="text-align: center; font-size: 10px;">USER MUST INSPECT BEFORE EACH USE. Competent Person to inspect and initial at least every 6 months. Date of First Use (Please complete)</p> <p>DO NOT REMOVE THIS LABEL.</p>	M	O	N	D	A	R	J	A	S	O	N	I	D	M	R	J	F	M	A	M	J	J	A	S	O	N	20	20	20	20	20	20	20	20	20	20	20	20	20
M	O	N	D	A	R	J	A	S	O	N	I	D																													
M	R	J	F	M	A	M	J	J	A	S	O	N																													
20	20	20	20	20	20	20	20	20	20	20	20	20																													

Batch No.	: XXXXX
Serial Number	: XXXX
Date of Manufacture	: XX/XXXX
Model Number	: FAP31798-SK
Size	: 6 ft.

8.0 SPECIFICATIONS :

8.1 MATERIALS :

- Snap Hooks, Karabiners, D-rings, Swivel :** Steel alloy, zinc plated.
- Webbing :** Polyester.
- Chain :** Steel alloy, 5/0 twist link, zinc plated.
- Rope :** Polyamide

8.2 STRENGTH AND CAPACITY :

- Snap Hooks, Karabiners, D-rings, O-ring :** 5,000 lbs. tensile strength, 310 lbs. capacity.
- Webbing :** 9,800 lbs. tensile strength, 310 lbs. capacity.

8.3 Review the product labels to determine if your product meets ANSI Z359.3, ANSI A10.32 and OSHA requirements. See section 7 Labels.

9.0 TERMINOLOGY :

- **Authorized Person:** A person assigned by the employer to perform duties at a location where the person will be exposed to a fall hazard (otherwise referred to as “user” for the purpose of these instructions).
- **Rescuer:** Person or persons other than the rescue subject acting to perform an assisted rescue by operation of a rescue system.
- **Certified Anchorage :**
An anchorage for fall arrest, positioning, restraint, or rescue systems that a qualified person certifies to be capable of supporting the potential fall forces that could be encountered during a fall or that meet the criteria for a certified anchorage prescribed in this standard.
- **Qualified Person :**
A person with a recognized degree or professional certificate and with extensive knowledge, training, and experience in the fall protection and rescue field who is capable of designing, analyzing, evaluating and specifying fall protection and rescue systems to the extent required by this standard.
- **Competent Person :**
One who is capable of identifying existing and predictable hazards in the surroundings or working conditions which are unsanitary, hazardous, or dangerous to employees, and who has authorization to take prompt corrective measures to eliminate them.

10.0 HOW TO DISPOSE A LANYARD:

When the lanyard becomes unfit or in case of any wear and tear, dispose the lanyard immediately.

Follow the steps for disposal

- Make the three plastic crates namely- Textile, Metal & Plastic for placing the respective components of the lanyard.
- Spread the lanyard on a table / flat surface.
- Inspect the wear & tear present on the lanyard.
- If any wear and tear is observed, dispose the lanyard using a sharp scissor; first cut the Textile and dismantle the lanyard.
- Put the Textile, Plastic & Metal components in their respective plastic crates.

DISCLAIMER

This information on the product is based upon technical data that SAFE KEEPER obtained under laboratory conditions and believes to be reliable. SAFE KEEPER does not guarantee results and take no liability or obligation in connection with this information. As conditions of end use are beyond our control it is the user's responsibility to determine the hazard levels and the use of proper personal protective equipment. Persons having technical expertise should undertake evaluation under their own specific end-use conditions, at their own discretion and risk. Please ensure that this information is only used to check that the product selected is suitable for the intended use. Any product that is damaged, torn worn or punctured should be discontinued from usage immediately.

11.0 INSPECTION AND MAINTENANCE LOG :

EQUIPMENT RECORD				
Product :				
Model & type/identification	Trade name	Identification number		
Manufacturer	Address	Tel, fax, email into use		
Year of manufacture	Purchase date	Date first put into use		
Other relevant information (e.g. Document number)				
PERIODIC EXAMINATION AND REPAIR HISTORY				
Date	Reason for entry (periodic examination or repair)	Defects noted, repairs carried out and other relevant information	Name and signature of competent user	Periodic examination next due date



SAFE KEEPER, 314 E. CANAL ST. MULBERRY, FL 33860
