


# INTELLIGENT ELECTRIC TOWEL RACK

WALL-MOUNTED ELECTRIC TOWEL RACK

## INSTRUCTION MANUAL

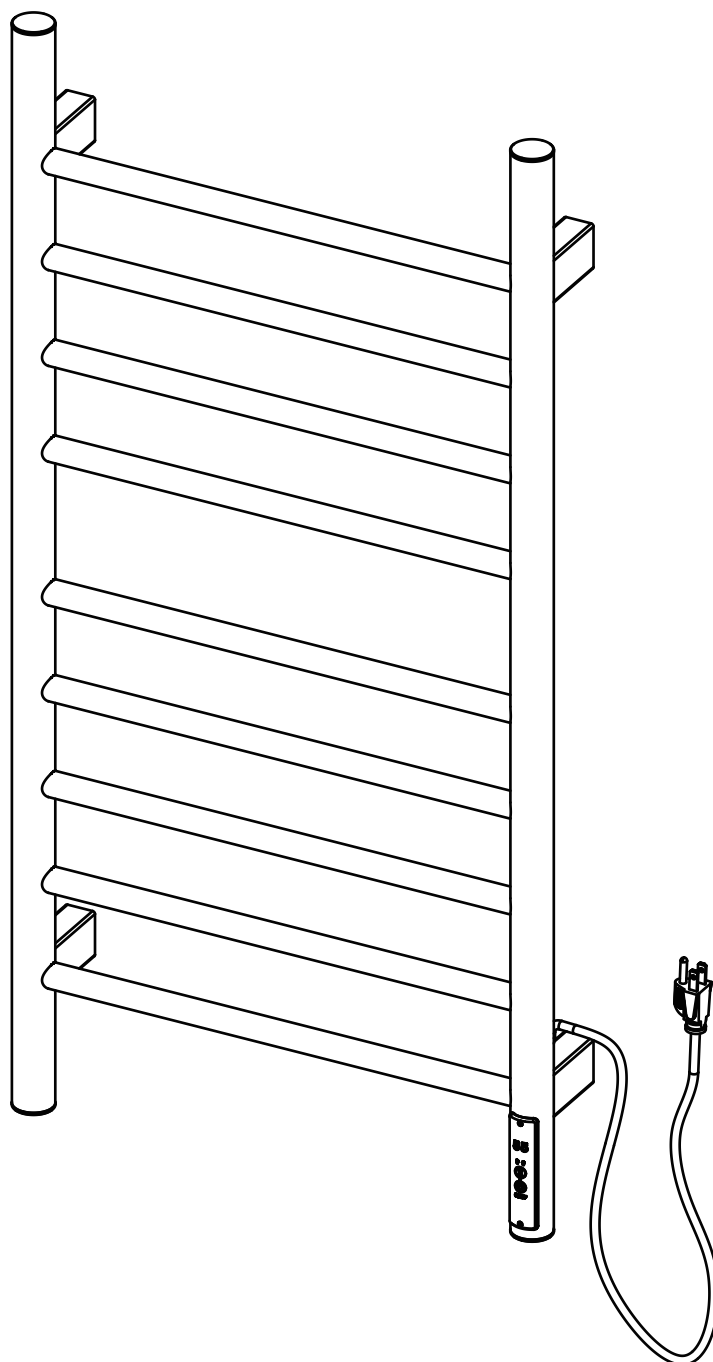

PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLATION OR USE

# DIRECTORY

## Installation & Operation manual

Please read the installation and operation instructions carefully before use. and keep the instructions properly.

---

### ABOUT THE PRODUCT

Product Information

---

### PRODUCT INSTALLATION & MAINTENANCE INSTRUCTIONS

Installation Instructions  
Installation Procedure

---

### SAFETY INFORMATION

Precautions for Installation and Use

---


### SMART SWITCH INSTRUCTIONS

# INSTRUCTION MANUAL

In order for you to properly install and maintain this product, please read this installation manual carefully before you install:


**A.PRODUCT PARAMETERS:**

|              |                      |
|--------------|----------------------|
| MODEL        | EB03-BR-193504       |
| FREQUENCY    | 50-60Hz              |
| RATED POWER  | 150W                 |
| VOLTAGE      | 110V                 |
| HEATING TIME | 3-7min               |
| FAHRENHEIT   | 115-145°F            |
| WATERPROOF   | IPX4                 |
| INSTALLATION | Exposed mounted      |
| HEATING      | Carbon fiber heating |

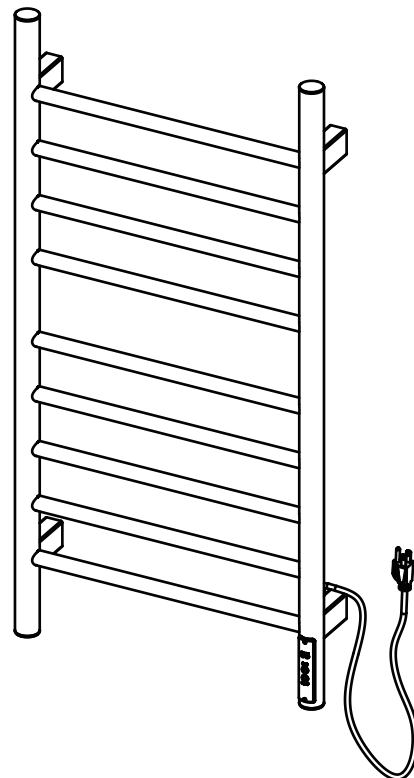

**B.DRAWING OF DIMENSIONS:**

Unit: inch

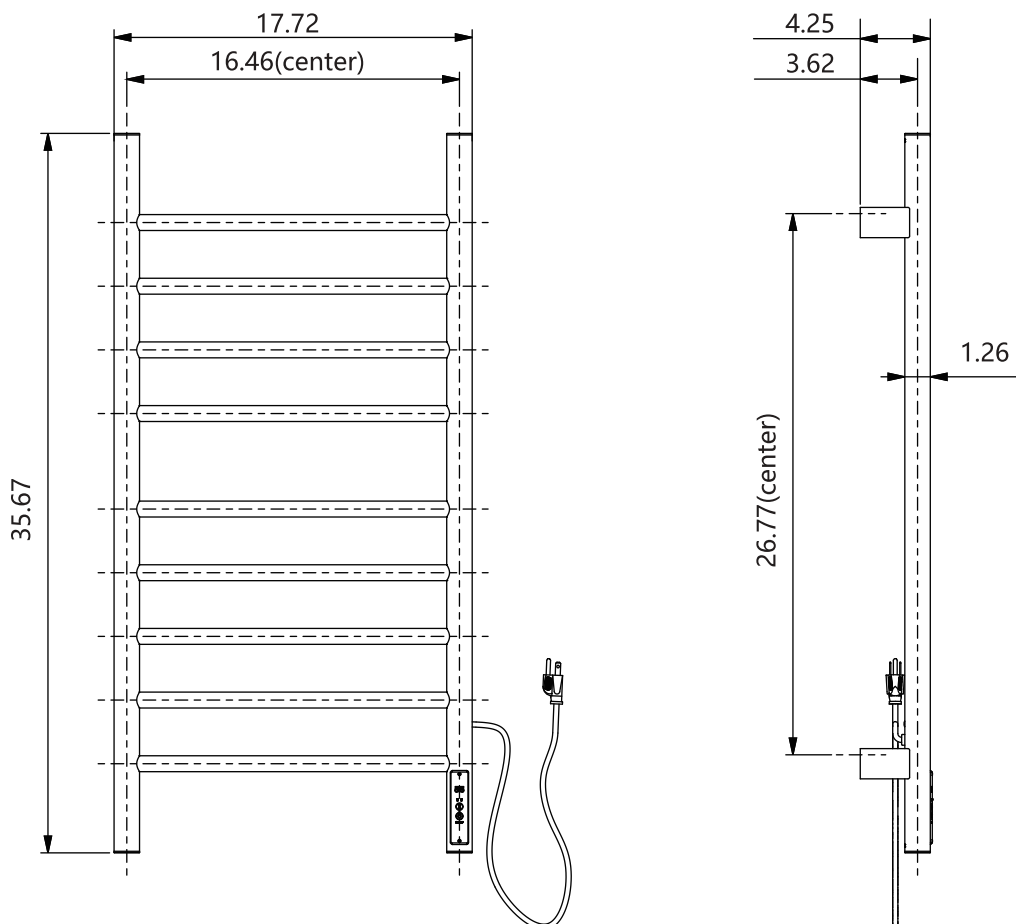

# INSTRUCTION MANUAL

In order for you to properly install and maintain this product, please read this installation manual carefully before you install:

## C. INSTALLATION PROCEDURE:

①

Dimensions of mounting screw positioning holes

About 40.94 inch above the ground, and adjust the level.

②

Install the positioning holes of the screws

Use a hammer drill to drill 0.31 inch round holes on the wall where the positioning holes of the mounting screws are located.

③

Then insert the expansion stick into the hole.

④

Install the self-tapping screws into the expansion glue stick with a screwdriver or a charging drill. After the four mounting screws are installed, adjust the gap between the screw head and the wall to about 0.12 inch

four mounting screws are installed, adjust the gap between the screw head and the wall to about 0.12 inch

⑤

Clamp the upper back hanging hole of the product into the screw, and close to the wall, pull down to lock. Plug in the power socket and the installation is complete.

⑥

1. After the above steps have been completed, the whole set of electric towel rack has been installed;
2. Power on, press the switch, power test for 15-30 minutes;
3. Carefully touch the bar of the electric towel rack. Your hand should feel that the bar is slightly hot.
4. Carefully touch the electricity again after an interval of 30-40 minutes Hot towel rack cross bar, temperature no longer rise The product can be used normally;
5. Be sure to turn off the power when the heat is over.

# INSTRUCTIONS FOR USE

## 【 1.Features of the Product】

It is mainly used for drying, moisture-proof, sterilization and odor elimination of towels, bath towels and clothes.

## 【 2.Fair use and safety precautions】

Do not use water or other liquid to clean the product directly, and do not allow any liquid to enter the product.

Do not expose the product to hot or humid environment.

### ! DANGEROUS

If the power cable is damaged, it must be repaired by professional maintenance personnel to avoid danger.

### ! DANGEROUS

- 1.It is installed in a particularly humid environment, in addition to the ground cable, it is necessary to install a leakage protection device, do not connect the ground cable to the water pipe and gas pipe.
- 2.The product please use a separate three-hole socket. do not use wet hands to plug the power plug to prevent electric shock, and to have a reliable grounding wire.
- 3.The product can bear 10 kilograms. It is forbidden to hang overweight items on the product.
- 4.Please do not disassemble or modify the product without permission. Please do not try to repair the product.
- 5.Children under 12 years old are forbidden to use this product.

## 【 3. AFTER SALE SERVICE】

This product from the date of purchase, the company within one year free maintenance (appearance is not within the scope of warranty), after one year maintenance charges for maintenance hours and other costs, but in the following circumstances, even within the warranty period, can not provide free maintenance.

1. In case of product failure, product manual and warranty card cannot be provided.
- 2.Failure caused by private disassembly, modification and maintenance.
3. Due to water or water use, impact, improper operation or illegal use of the fault.
- 4.Customer service contact E-mail:meilesjiancai@163.com.

## 【 4.DISCLAIMER OF LIABILITY】


Please strictly follow the installation steps and instructions of the product. If the user fails to use the product according to the instructions and instructions, the accident and damage will be caused The buyer shall bear the consequences.

## 【 5.CONTAINED IN THE PACKAGE】


| LIST OF PACKING ACCESSORIES |                      |                       |                |                   |                 |        |                |                    |                           |               |
|-----------------------------|----------------------|-----------------------|----------------|-------------------|-----------------|--------|----------------|--------------------|---------------------------|---------------|
| NAME                        | EXPANSION GLUE STICK | M4 SELF TAPPING SCREW | NAIL-FREE GLUE | 2.5 HEXAGONAL KEY | SCREW FASTENING | GLOVES | NAILFREE PASTE | INSTRUCTION MANUAL | CERTIFICATE OF CONFORMITY | WARRANTY CARD |
| NUMBER                      | FOUR                 | FOUR                  | /              | ONE               | TWO             | ONE    | TWO            | 1 PIECE            | 1 PIECE                   | 1 PIECE       |

# SMART SWITCH INSTRUCTIONS


## 【 1. STARTING UP 】

- The controller power-on buzzer will sound long to enter the standby state: only the "On/Of button icon gradually brightens-dimmed changes, other lights and nixie tube are off.
- (The first power-on default Fahrenheit), set the successful buzzer long ring. set the memory, close the digital tube display back to stand by state; In the future, the corresponding operation display is based on the standard of Celsius or Fahrenheit.
-  "On/Off" button: long press to power on the buzzer will ring 2 times short, the digital tube will display the time set ast time, the temperature set last time by default), and again long press second to shut down buzzer rings for 1 second. turn of the heating and turn off the display, only the power key chart light turns on -- dimming changes).

## 【 2. TIMING 】

-  "Set Timing Shut down Time" key: Under the startup state, press the button for setting timing(buzzer rings for one short time) "1H" (the first digit is off) to "8H" for cyclic display.

## 【 3. FIXED TEMPERATURE 】

-  "Thermostatic Temperature Setting" key: Press the button to set the thermostatic temperature (the buzzer will ring one short time)-(Fahrenheit"115")- (°F "125", -(°F "135") ,-(°F"145") cycle setting; Hold down the power-on status for 1 second to switch to: Real-time temperature/Timing Time Alternate display, set the successful buzzer long ring

## 【 4. TEST 】

- After setting the temperature and time, the system will control the heating output according to the temperature resistance data: when it does not reach the set temperature, it will stop adding when it reaches the set temperature +1° Heat, when the temperature drops to the set temperature of-1, then reheat. The timing time will be reduced by 1 hour for every 1 hour. After the timing is completed, the heating and display will be turned off(The remaining power lamp is used for breathing lamp display).

- Set the system to detect the temperature resistance automatically:

- A. When detecting a missed probe, digital tube display "EE", stop heating and report an error;
- B. When NTC detects the temperature is less than 0°C,digital tube display "E0" continues heating and reports error:
- C. Digital tube display when NTC detects temperature greater then 99°C "E1",stop heating and report an error.

